



OLD GLORY BILLET HOOD CATCH KIT

(2007-2018 WRANGLER JK)
(2018-2024+ WRANGLER JL)
(2020-2024+ GLADIATOR JT)

INSTALLATION INSTRUCTIONS

CONTENTS

(2) Upper Hood Catches
(2) Lower Hood Catches
(2) JK Upper Pads
(2) JK Lower Pads
(2) JL Upper Pads
(2) JL Lower Pads
(4) M6 Allen Bolts
(4) M6 Locking Nuts
(2) M8 Locking Nuts
(3) Allen Keys

TOOLS REQUIRED

10mm Deep Socket
13mm Wrench
Ratchet

SKU # J234088

STEP 1



Open the hood on the vehicle. Remove (2) 10mm nuts from the vehicle upper hood catch. Remove hood catch from the vehicle.

STEP 2



Remove (1) 13mm nut from the vehicle lower hood catch. Remove hood catch from the vehicle.


STEP 3



Align the new lower hood catch to the vehicle. Use the provided labeled, vehicle specific, rubber pad for proper alignment and installation to the vehicle. Tighten the lower hood catch using provided (1) M8 locking nut.

Note: Removing hood catch handle using the included Allen key may be necessary to fully tighten Allen bolt/nut.

STEP 4

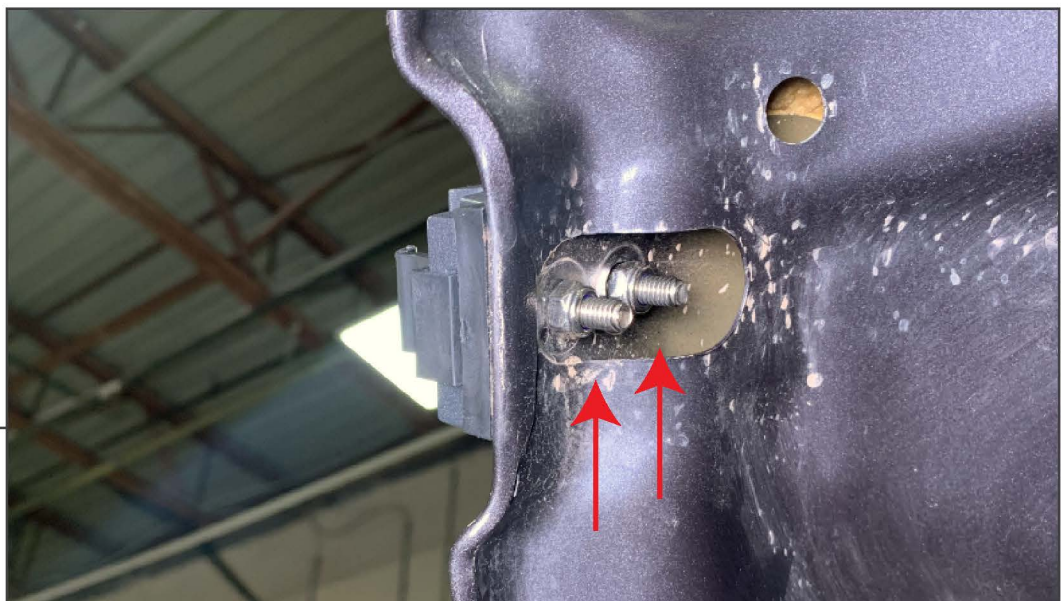

Align the new upper hood catch to the vehicle. Use the provided labeled, vehicle specific, rubber pad for proper alignment and installation to the vehicle. Tighten the upper hood catch using provided (2) M6 Allen bolts and (2) M6 locking nuts.



STEP 5

Close hood and test functionality. Make adjustments as necessary to ensure hood is securely latched. Repeat steps 1-5 to the opposite side.

Installation is now complete.