



ARMOR GRILLE WITH LED OFFROAD LIGHTING

(2007-2018 WRANGLER JK)

INSTALLATION INSTRUCTIONS


CONTENTS

- (1) Grille
- (1) Weatherstripping
- (6) Plastic Push Pins
- (6) Metal Clips
- (2) Scotchlok Connectors

TOOLS REQUIRED

- Panel Removal Tool
- Pliers
- Isopropyl Alcohol
- Microfiber Cloth

SKU # J234090

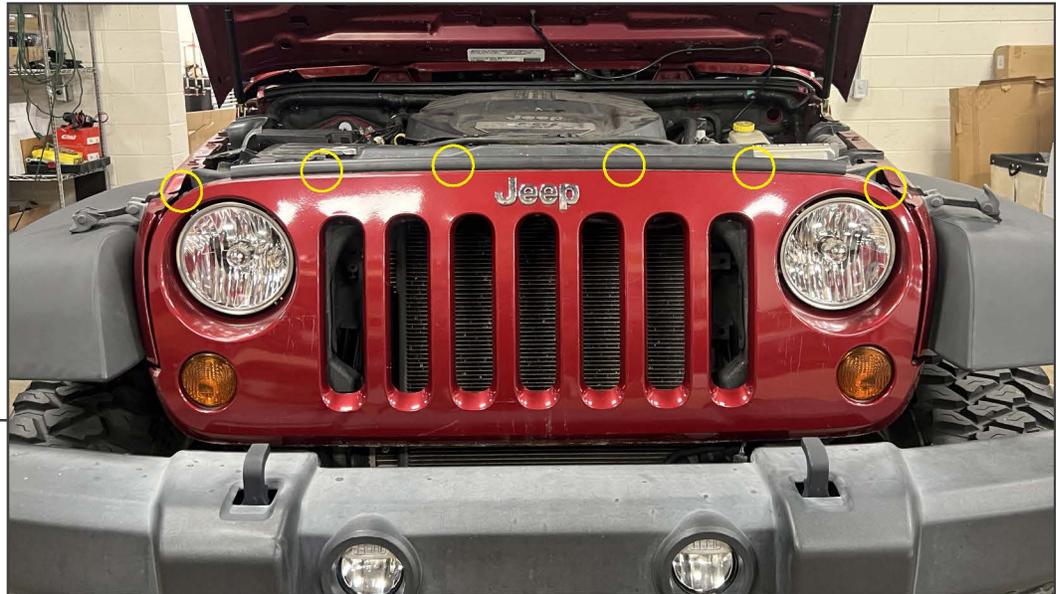


STEP 1

Open the vehicle hood. Locate and remove the (6) plastic push pins from the top of the grille using a pry tool.



STEP 2

Firmly pull the bottom of the grille away from the vehicle to disengage the (6) metal clips.

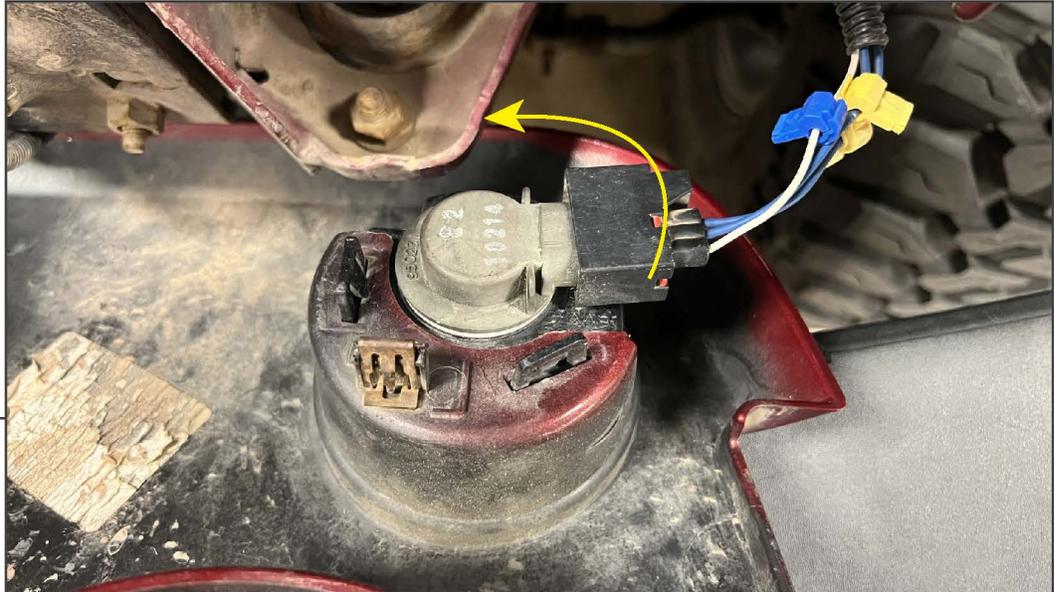

STEP 3

Turn the grille turn signal/parking lamp socket 90° to remove the socket and bulb from the light housing. Repeat this step for the opposite side of the vehicle.

Lift and remove the grille away from the vehicle and place the grille face down on a soft workable surface.



STEP 4

Press the turn signal/parking lamp light housing tabs, and remove the housing through the face of the grille. Transfer the light housing to the new grille in the same orientation and location.

Note: If necessary, bend the tabs outwards slightly on the light housing when installing into the new grille to ensure proper engagement to the grille.



STEP 5

Fit the (6) metal retaining clips to the posts on the bottom of the grille.



STEP 6

Fit the turn signal/parking lamp bulbs into the light housings, and begin to fit the grille to the vehicle. Press the bottom of the grille into the vehicle to engage the lower clips, then secure the top of the grille using (6) plastic push clips.



STEP 7

Route the LED lighting harness towards the driver side turn signal/parking lamp socket. Splice the lighting into the vehicle parking lamp circuit using the included (2) scotchlok connectors.

Vehicle Harness	-	LED Lighting
White/Green (+)	-	Red
Black (-)	-	Black



STEP 8

Clean the top of the grille using isopropyl alcohol and a microfiber cloth. Center and install the weatherstripping to the top of the grille using the weatherstripping double sided tape.

Close the vehicle hood. Installation is now complete.