



HARDTOP STORAGE TRAYS

(2024+ WRANGLER JL - WITH OEM HARDTOP)

INSTALLATION INSTRUCTIONS


CONTENTS

- (1) LH Storage Tray
- (1) RH Storage Tray
- (2) Alcohol Prep Pads
- (2) Adhesion Promoter Prep Pads

TOOLS REQUIRED

- T-50 Torx Socket
- Ratchet

STEP 1

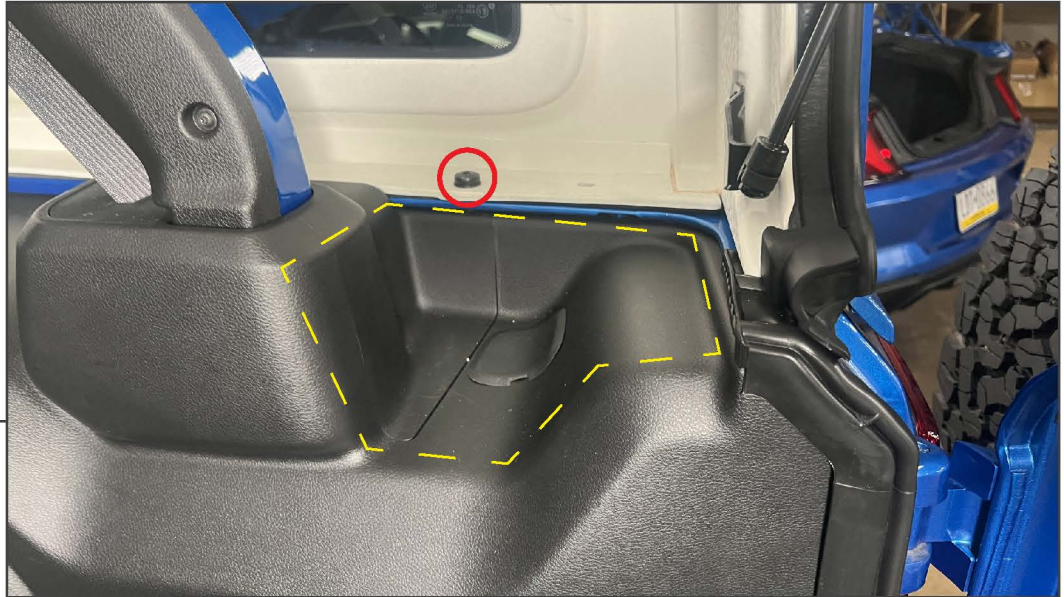

Remove the outer-most T-50 Torx bolt from the vehicle hardtop.

Use the included prep pads to clean the vehicle interior panel to prepare for the storage tray installation. Begin with the isopropyl alcohol prep pad, followed with the adhesion promoter.

STEP 2



Peel the red tape backing from the storage tray, and fit the tray to the vehicle. Secure the tray to the hardtop using the vehicle hardtop bolt in the original location.

Repeat steps 1-2 for the remaining storage tray.

Installation is now complete.