

REDROCK

PARACORD 3-IN-1 GRAB HANDLES; PAIR

(2007-2018 WRANGLER JK)

INSTALLATION INSTRUCTIONS

CONTENTS


(2) Paracord Grab Handles
(4) Flat Washers

TOOLS REQUIRED

10mm, 13mm Socket
Ratchet w/ Extension

SKU # J236525 / J236526 / J236527
J236528 / J236529

STEP 1 [HEADREST]

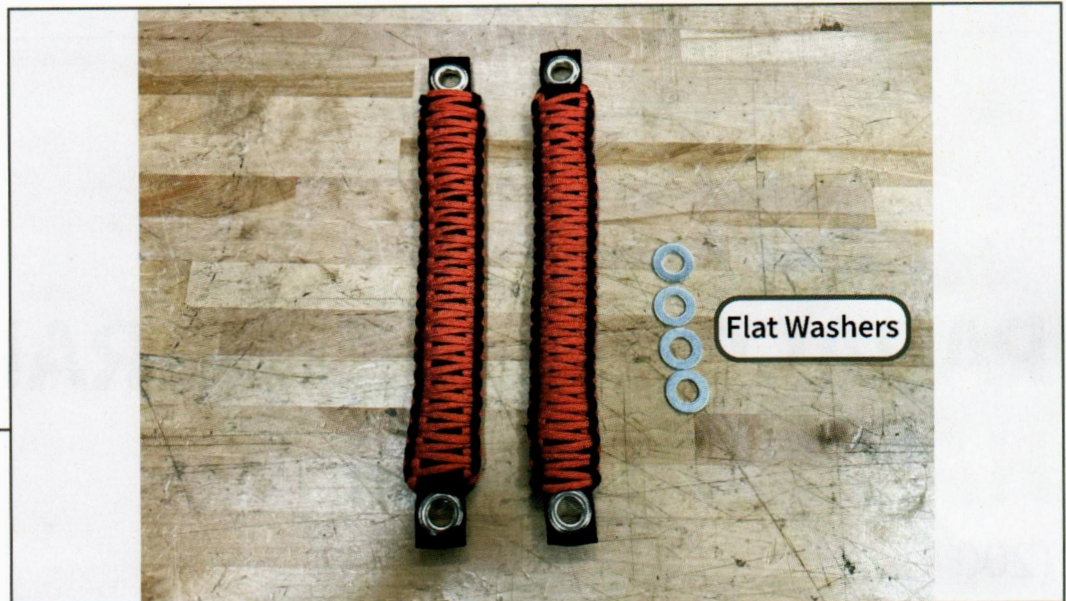


Determine the desired location for the grab handles. The grab handles can be installed to the vehicle headrest, rear seat roll bar, or front seat A-Pillar.

Depending on the desired application, the included flat washers may not be used.

STEP 2 [A-PILLAR]



To install to headrest, press the (2) headrest base buttons while lifting the headrest from the seat. Then, fit the grab handle eyelets onto each headrest post, and re-install the headrest to the seat.

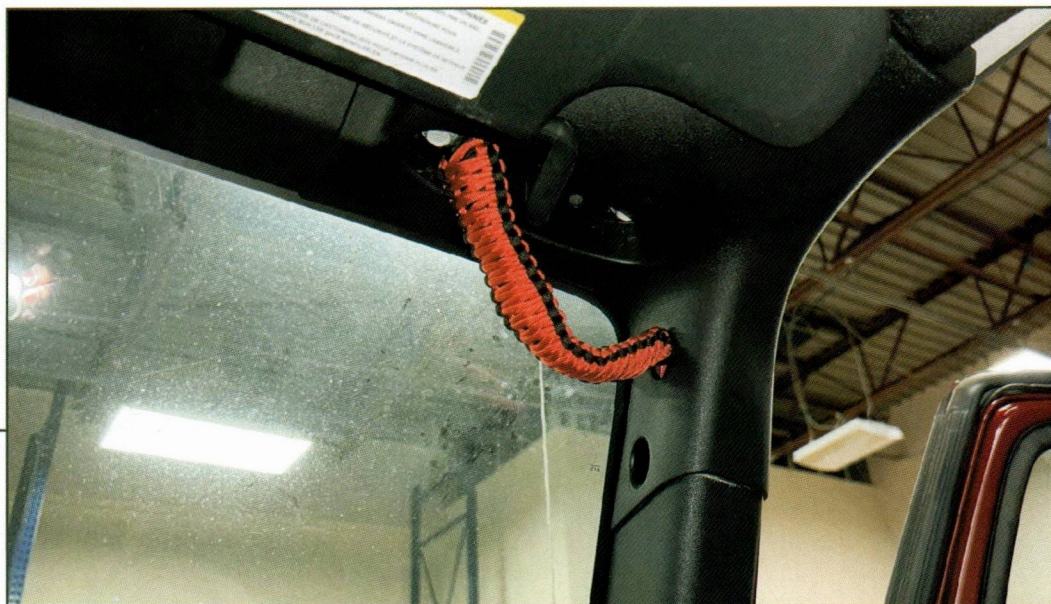STEP 3
[A-PILLAR]

Remove (1) 10mm bolt from the A-Pillar and (1) 13mm bolt from the windshield bar. Fit the OEM mounting hardware with the included (2) flat washers to the grab handle, and secure the grab handle using the OEM hardware.

STEP 4
[REAR SEAT]

Remove (2) 10mm bolts from the rear seat roll bar. Then, reuse the OEM hardware to secure the grab handle to the roll bar. Using the included (2) flat washers may be necessary.

Installation is now complete.