



FRONT AND REAR MESH SUN SHADE

(2024+ WRANGLER JL - 4 DOOR)
(2024+ GLADIATOR JT)

INSTALLATION INSTRUCTIONS

CONTENTS

- (1) Mesh Sun Shade
- (1) Mesh Storage Bag
- (1) 3mm Allen Key

Front:

- (1) 22" Elastic Band
- (2) 16" Elastic Band
- (6) 4.5" Elastic Band
- (2) 4.5" Elastic Band w/ Hook
- (6) Elastic Band Mounts

Rear:

- (2) 22" Elastic Bands
- (8) 13" Elastic Band
- (2) 4.5" Elastic Band
- (2) Elastic Band Mounts


TOOLS REQUIRED

3mm Allen Key (Provided)

**STEP 1
(FRONT)**


Remove the vehicle top following OEM removal procedure.

Lay out and identify the front & rear of the front sun shade.

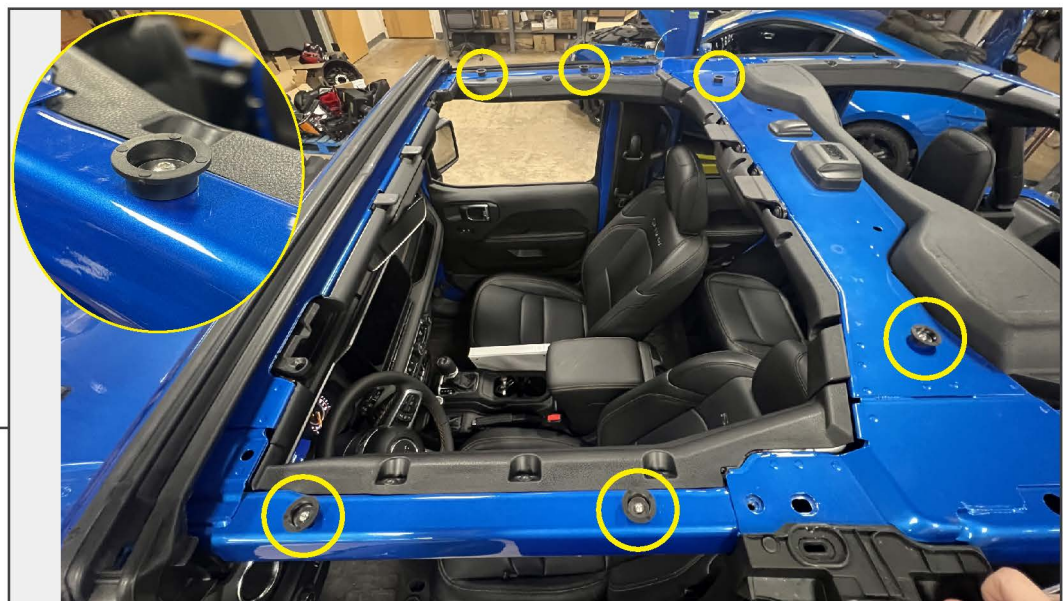**STEP 2
(FRONT)**

Fit the included (6) elastic band mounts into the vehicle roll bar. To secure, tighten the Allen bolt. The Allen bolt pulls the lower washer upwards, expanding the rubber grommet and securing the mount to the roll bar. Tighten the Allen bolt until each mount is secure into place.

STEP 3 (FRONT)

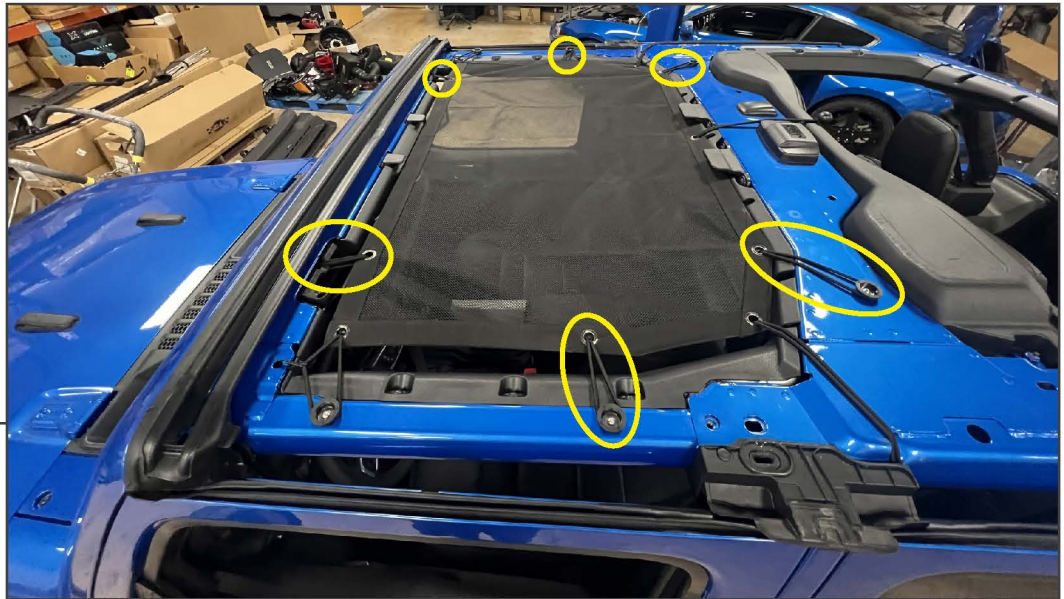


Begin securing the perimeter of the sun shade to the vehicle using (6) 4.5" elastic bands.

STEP 4 (FRONT)



Secure the rear corners of the sun shade using (2) 16" elastic bands around the vehicle roll bar.

Secure the rear center point on the sun shade using (1) 22" elastic band around the vehicle roll bar.

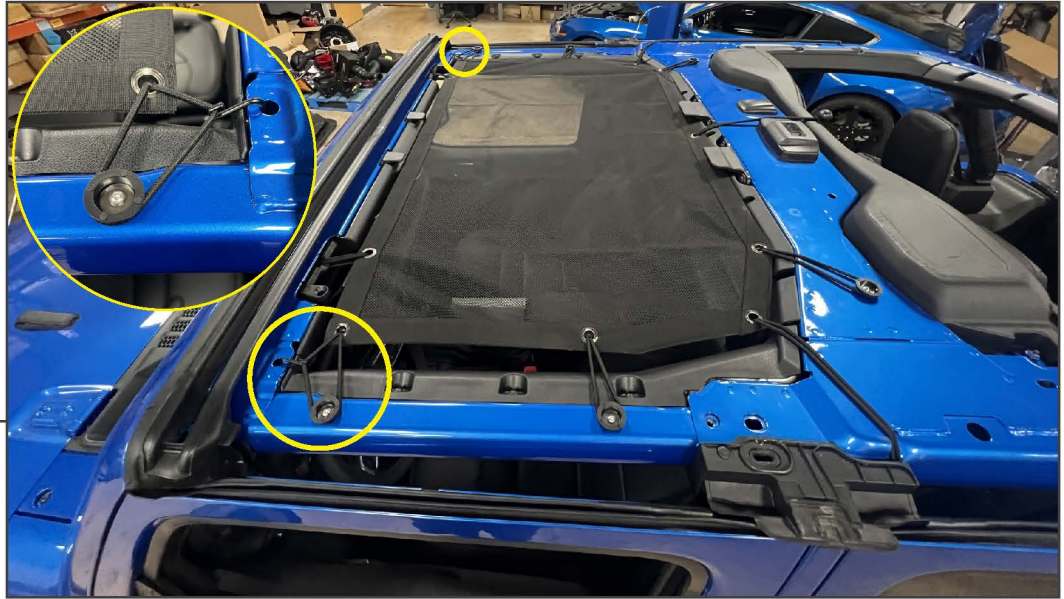

STEP 5 (FRONT)

Secure the front corners of the sun shade to the previously mounted elastic band mount and the windshield channel pre-drilled hole using (2) 4.5" elastic bands w/ hooks. Fit the band through the sun shade, and around the roll bar mount. Then, fit the hook around the pre-drilled hole in the windshield channel.



STEP 6 (FRONT)

Front sun shade installation is now complete.

**STEP 7
(REAR)**

Lay out and identify the front & rear of the rear sun shade.

**STEP 8
(REAR)**

Fit the included (2) elastic band mounts into the vehicle roll bar. To secure, tighten the Allen bolt. The Allen bolt pulls the lower washer upwards, expanding the rubber grommet and securing the mount to the roll bar. Tighten the Allen bolt until each mount is secure into place.

STEP 9 (REAR)




Begin securing the LH side and RH side the sun shade to the vehicle using (2) 4.5" elastic bands.

STEP 10 (REAR)



Secure the front of the sun shade to the vehicle roll bar using (2) 22" elastic bands.

STEP 11 (REAR)

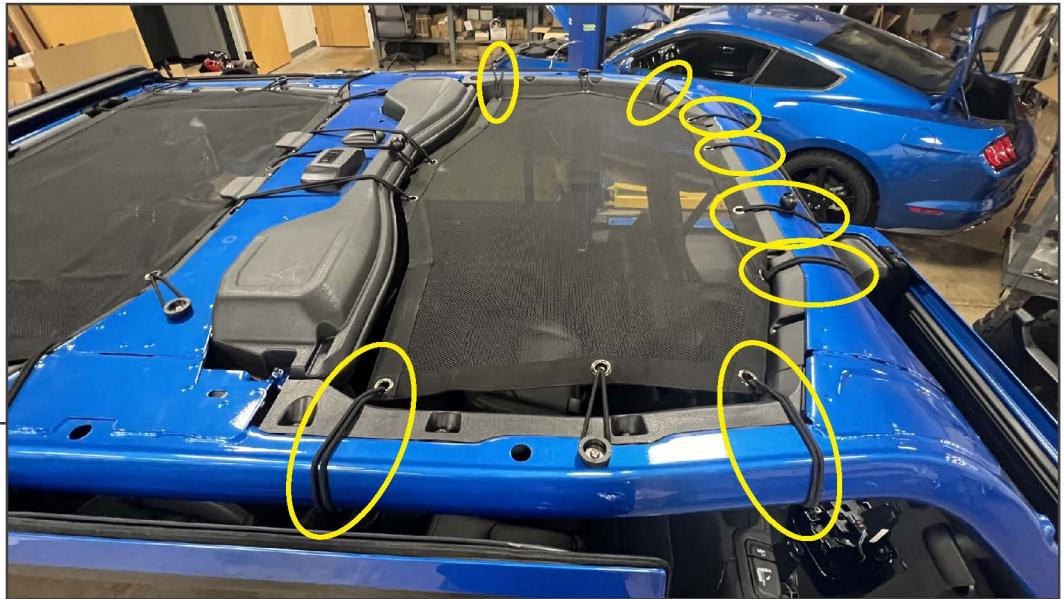

Secure the sun shade corners and rear edge to the vehicle roll bar using (8) elastic bands.

STEP 12 (REAR)



Rear sun shade installation is now complete.