



TUBULAR ROCK SLIDERS

(2018-2025 WRANGLER JL - 4 DOOR)

INSTALLATION INSTRUCTIONS

CONTENTS

- (1) LH Rock Slider
- (1) RH Rock Slider
- (2) M12x1.75 x 130mm Bolts
- (2) M12 Flat Washers
- (2) Round Spacers

TOOLS REQUIRED

- 18mm Socket
- Ratchet/Breaker Bar
- Pry Bar
- Induction Heater/Torch

SKU # J240022

STEP 1



From under the vehicle, locate the (3) body mounts along the frame between the vehicle front and rear wheel. Remove the (3) 18mm bolts. ***These bolts are installed with red threadlocker. It is recommended to use heat and leverage to loosen these bolts.***


Note: The bolts are long, and may remain in the vehicle bolt retainer after being fully unthreaded from the body. Using a pry bar gently along the washer may be necessary to dislodge the bolt from the retainer.

STEP 2



Place the provided (1) spacer onto the front rock slider mounting pad. Then, place the OEM bushing onto the top of the spacer.

STEP 3

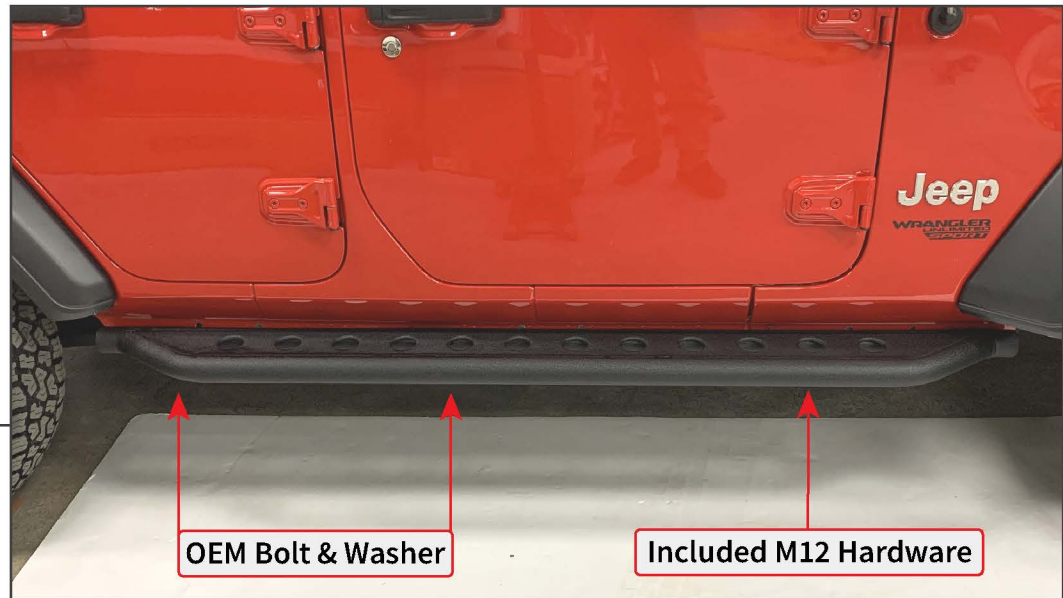

With assistance, lift the rock slider assembly to the vehicle frame.

Rear: Secure into place using the OEM 18mm bolt and washer.

Middle: Secure into place using the OEM 18mm bolt and washer.

Front: Secure into place using the included (1) M12 x 130mm bolt and (1) M12 flat washer.

Tighten all hardware evenly until the rock slider is fully secure.

STEP 4



Repeat steps 1-3 to install the opposite side rock slider.

Installation is now complete.