STEP 3

Install the mud guard to the vehicle using the (2) plastic push clips from Step 1. Then using a 1/4" rivet gun and (2) plastic rivets, carefully rivet the side of the mud guard to the factory fender flare.

STEP 4

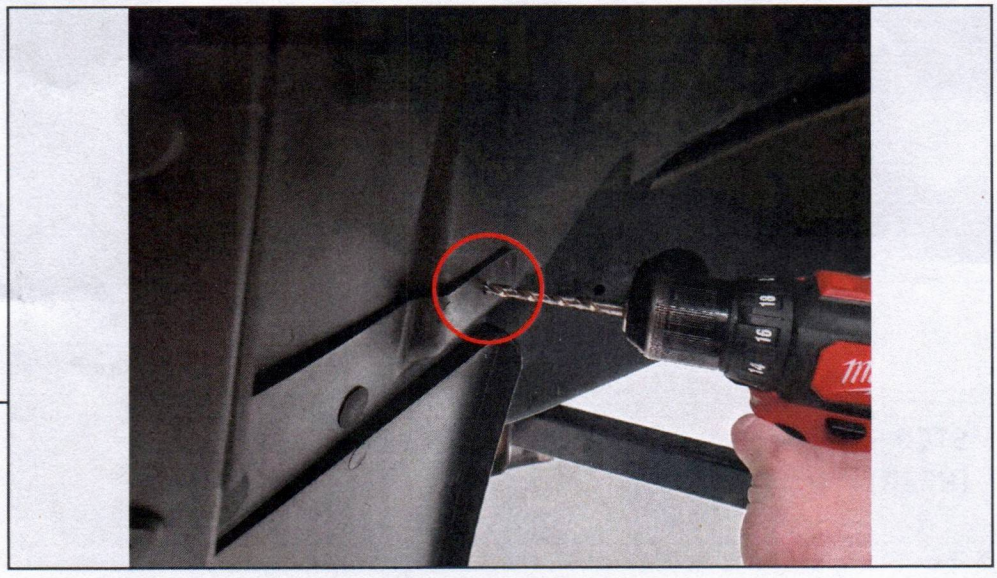

Using a drill & 1/4" drill bit, drill the additional hole into the factory fender liner. Then using a rivet gun and (1) plastic rivet, rivet the inner section of the mud guard to the fender liner.

**Note: It may be necessary to turn the front wheels to achive space for drilling.

STEP 5

Repeat Steps 1-5 for the opposite side.

Front installation is now complete.

See Steps 6-10 for the rear mud guards.

STEP 6 (REAR)

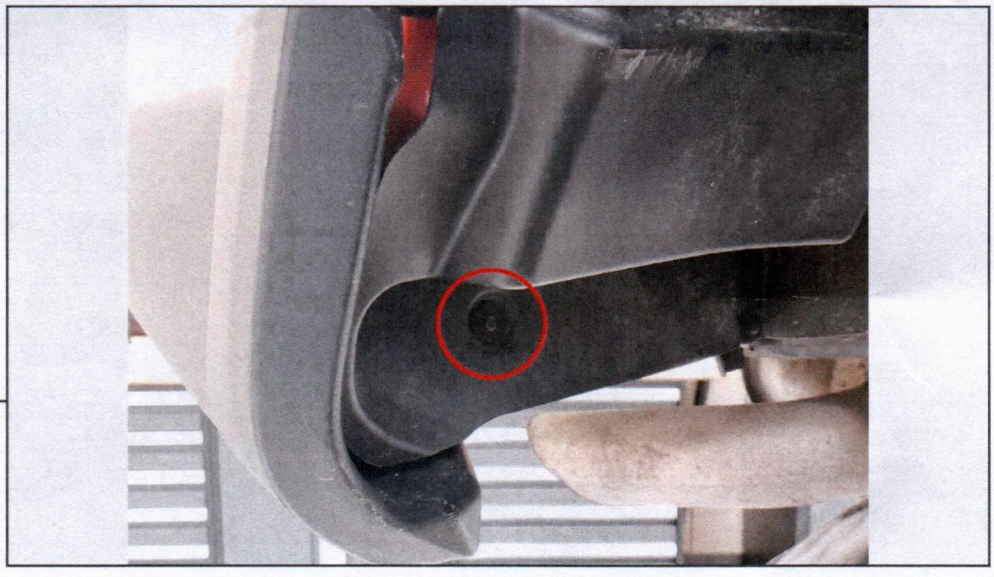

Locate and remove the (1) 8mm screw securing the rear fender liner in place.

**Note: Hardware will be reused in next step.

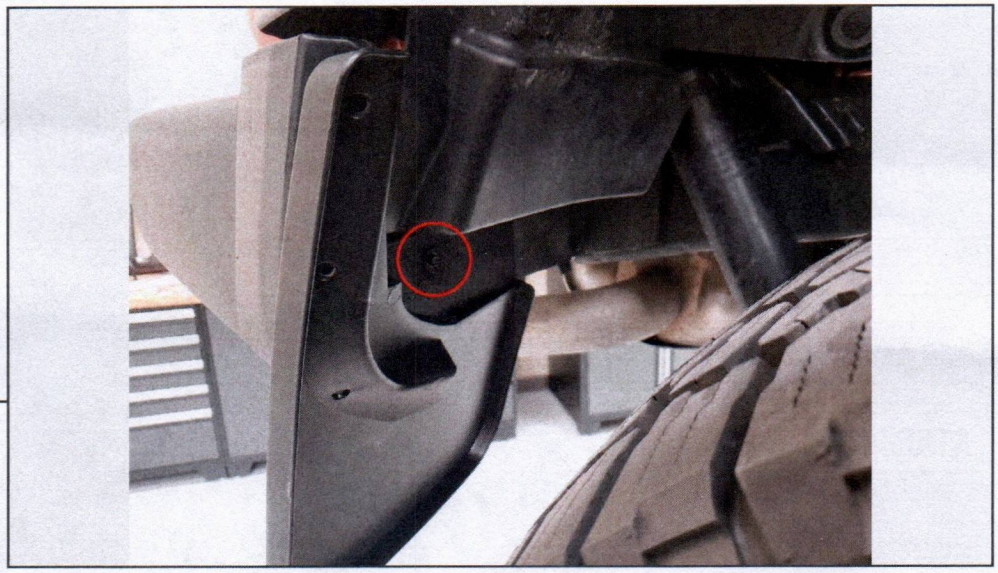

STEP 7

Using the (1) 8mm screw from the previous step, install the rear mud guard to the vehicle.

**Note: Be careful not to over tighten this screw.

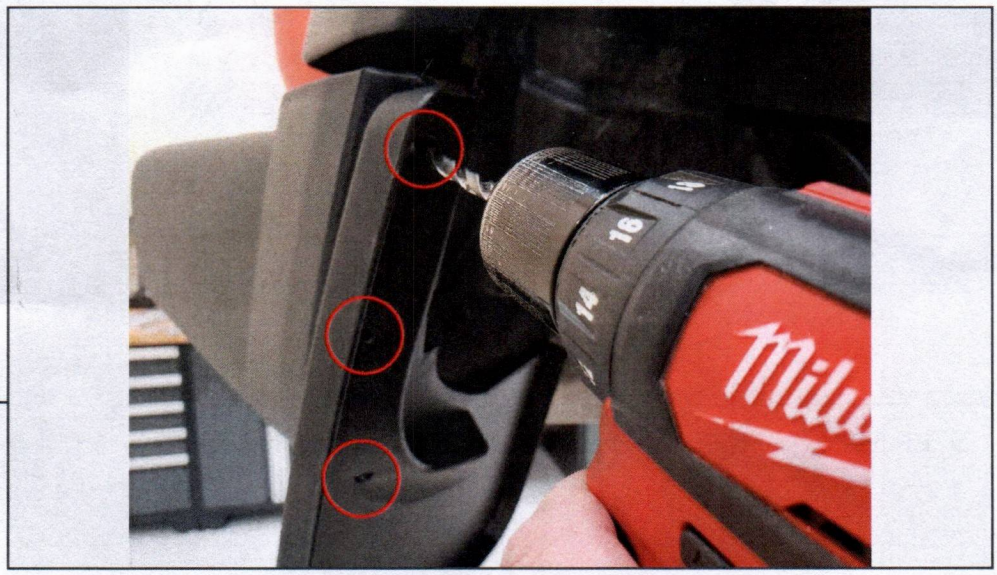

STEP 8

Carefully press the mud guard against the rear bumper. Using a drill & 1/4" drill bit, drill the (3) holes from the mud guard into the rear bumper.

STEP 9

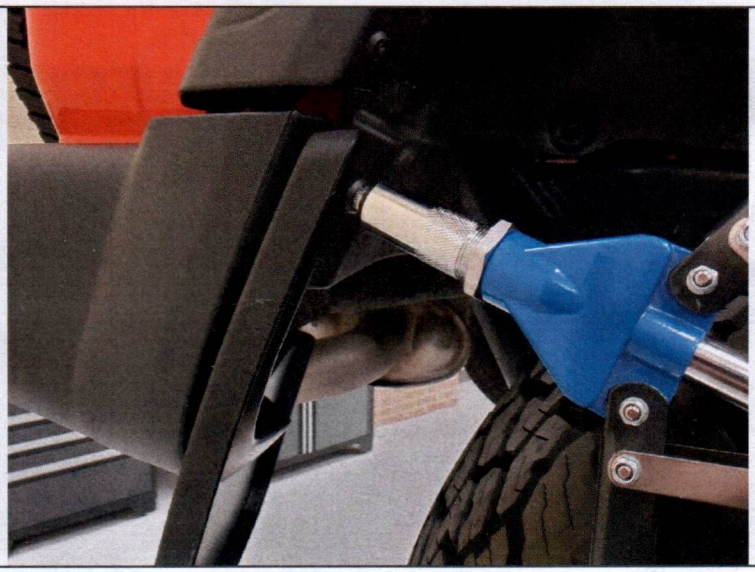

Using a 1/4" rivet gun and (3) supplied plastic rivets, rivet the mud guard to the rear bumper.

STEP 10

Repeat Steps 6-10 for the opposite side.

Installation is now complete.