



**STEP 7**

Under the vehicle steering wheel, remove (2) Phillips screws. Then, lower the dashboard panel around the steering column (tilt lever, ignition switch) and set the panel aside.

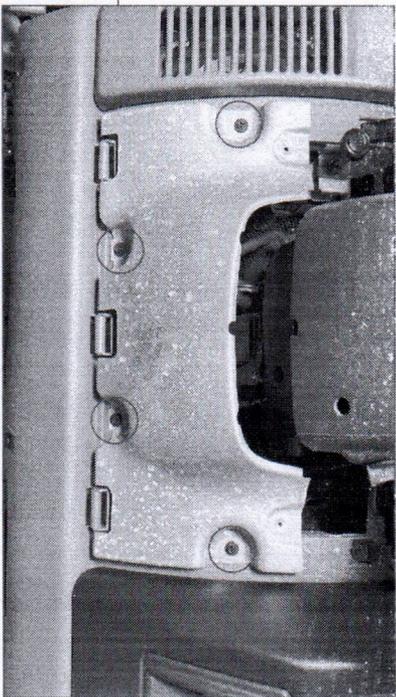

**STEP 8**

Remove (4) Phillips screws from the metal plate, and remove the plate from the vehicle and set aside.

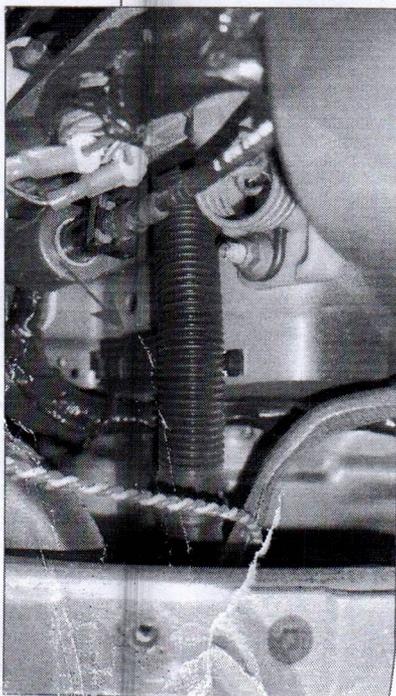

**STEP 9**


Remove (1) bolt securing the flasher relay to the vehicle body. Then, unplug the relay harness from the relay. Verify the OEM relay is 4 or 5 pins. Then, plug in the appropriate included LED flasher relay into the vehicle harness. Secure the relay into place.

Re-install the metal plate and dashboard panel using the original Phillips screws.




**STEP 10**

Installation is now complete.

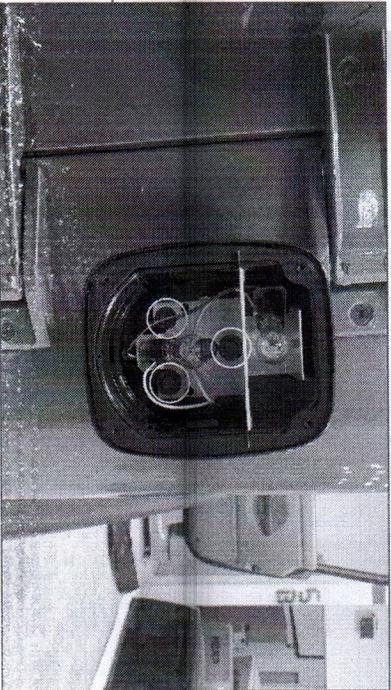

**STEP 3**


Remove (3) 10mm bolts securing the tail light to the vehicle.

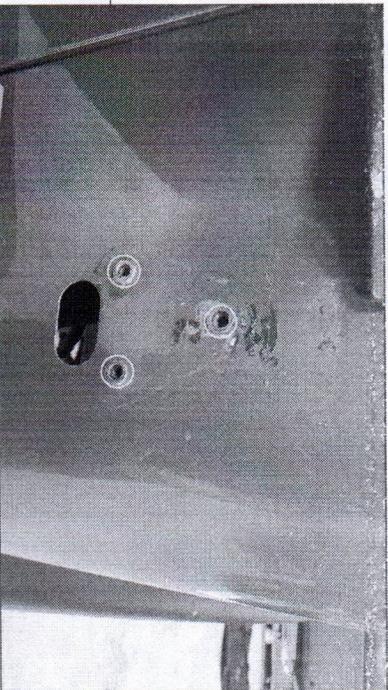

**STEP 4**

\*\*In most applications, you will need to drill out the factory mounting holes (9/32") to allow the M6 bolts to pass through the sheet metal. Test fit the M6 bolts to the chassis to verify if the bolts will thread into place.

If the bolts do not properly thread into the body, drill the bolt holes (9/32") and the tail light mounting base will be secured using the M6 bolts and M6 flange nuts (behind the body sheet metal).

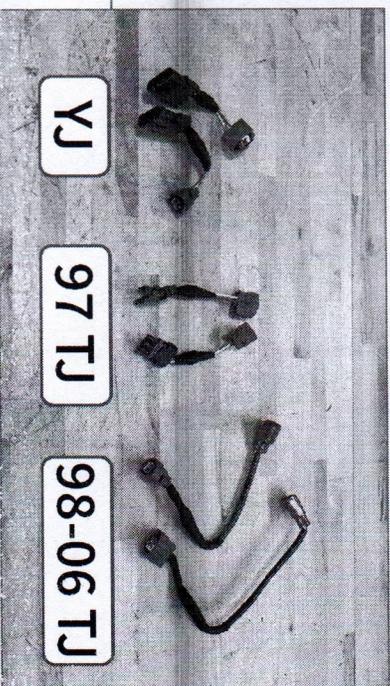

**STEP 5**

Identify the included adapter harnesses. Depending on vehicle fitment, use the appropriate harnesses. Plug in the appropriate wiring harness into the chassis, and then plug the tail light into the adapter harness.

- Wrangler YJ: 4-Pin Connector
- 1997 TJ: 3-Pin Connector
- 1998-2006 TJ: Square Connector



**STEP 6**

Identify the LH / RH tail lights by locating the license plate light on the bottom of the housing. Once identified, fit the tail light to the vehicle, and secure into place using the included (3) M6 flange nuts.

## LED TAIL LIGHTS

(1987-1995 WRANGLER YJ)  
(1997-2006 WRANGLER TJ)

### INSTALLATION INSTRUCTIONS

#### CONTENTS


- (1) LH Tail Light
- (1) RH Tail Light
- (6) M6 Flange Nuts
- (2) YJ Adapter Harnesses
- (2) 1997 TJ Adapter Harnesses
- (2) 1998-2006 TJ Adapter Harnesses
- (1) 4 Pin LED Relay
- (1) 5 Pin LED Relay

#### TOOLS REQUIRED

- 10mm Socket
- Ratchet
- Phillips Screwdriver


SKU # J243335 / J243336

#### STEP 1

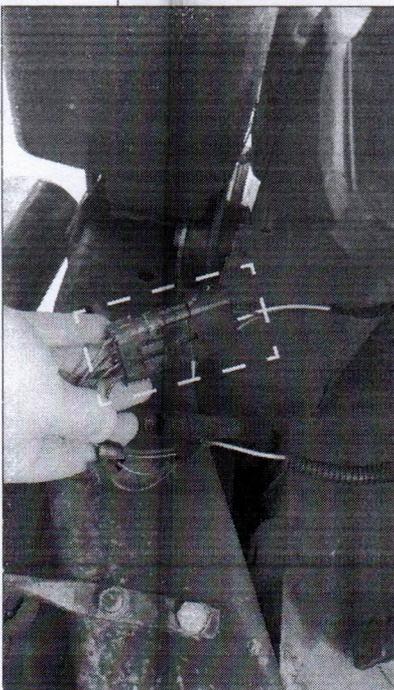

From under the vehicle, locate the tail light wiring harness. Unplug the wiring connector.

#### STEP 2

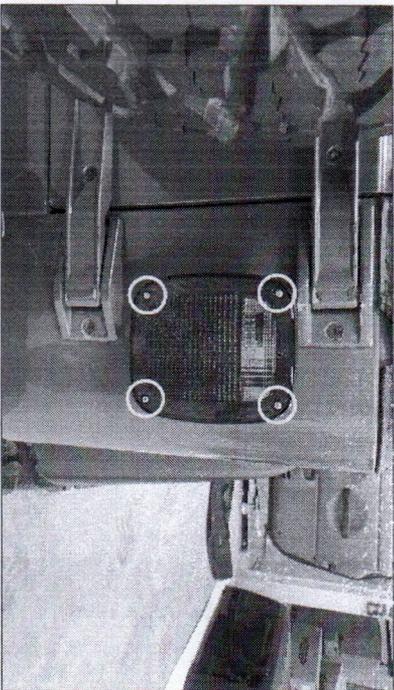

Remove the (4) Phillips screws from the tail light lens, and set the lens aside.