




**STEP 1:** remove 2 screws to take out OEM Front light.



**STEP 2:** Remove the light bulb socket from the lens.



**STEP 3:** Remove the OEM light bulb.

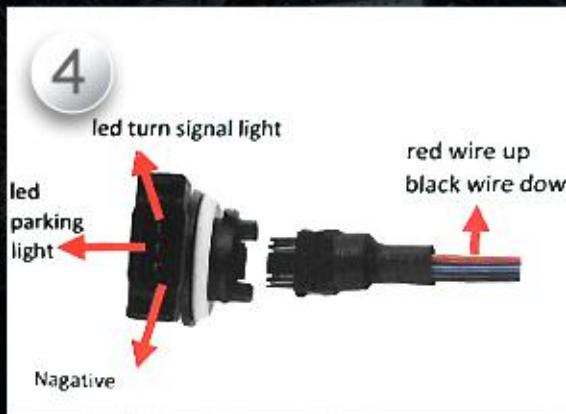

**STEP 4:** Insert the plug as shown figure.



**STEP 5:** Put the new light back and finish the screws.



**STEP 6:** Finish! Test your new light.