



---

# PRO SERIES ROCK SLIDERS

(2007-2018 WRANGLER JK - 4 DOOR)

---

## INSTALLATION INSTRUCTIONS

### CONTENTS

---

- (1) LH Rock Slider
- (1) RH Rock Slider

### TOOLS REQUIRED

---

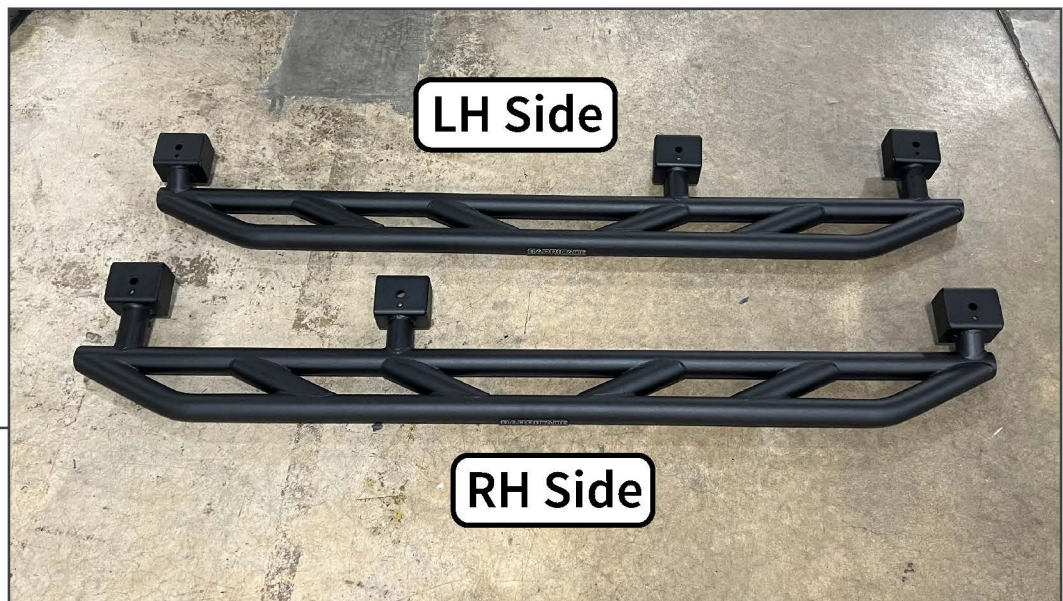
- 18mm Deep Socket
- Ratchet/Breaker Bar

SKU # J251965

**STEP 1**

From under the vehicle, locate the (3) body mounting points along the side of the vehicle. Remove the (3) 18mm body mount bolts.

**Note:** The body mount bolts are secured with threadlocker. It is recommended to use a breaker bar first to attempt to break the bolts loose, or to use heat if necessary. Do not initially impact these bolts.

**STEP 2**

Identify the LH/RH rock sliders using the diagram above.

**STEP 3**

With a helper, fit the rock slider to the vehicle body mounts, and secure into place using the (3) body mount 18mm bolts.

Torque the body mount bolts to 80 ft. lbs.

**STEP 4**

Repeat Steps 1-3 to install the rock slider on the opposite side of the vehicle.

Installation is now complete.