

SLIM LED TAIL LIGHTS

(2018-2025+ WRANGLER JL-OEM HALOGEN TAIL LIGHTS ONLY)

INSTALLATION INSTRUCTIONS

CONTENTS

- (2) Tail Light
- (2) Resistor Brackets
- (4) Mounting Clips
- (4) Machine Screws
- (4) Lock Nuts

TOOLS REQUIRED

- Soft Pry Tool
- 10mm Socket
- Phillips Head Screw Driver
- Pliers



STEP 1

Begin by opening the tailgate to access tail light trim cover. Using a soft pry tool, remove the cover from the vehicle.



STEP 2

Using a 10mm socket, loosen the plastic tail light retaining screw.




STEP 3

Pull the tail light away from the vehicle to access the wiring connection.




STEP 4

Slide back the plug's red locking tab. Then depress the connector tab and pull the plugs apart. Remove the factory tail light from the vehicle.

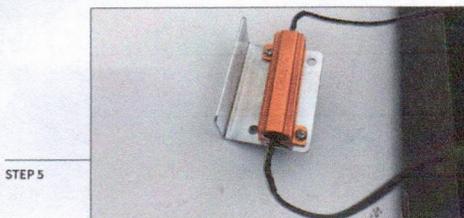

STEP 5


Using a Phillips head screwdriver and a pair of pliers, install the resistors to the resistor mounting bracket. Each resistor will require (2) machine screws and (2) lock nuts.

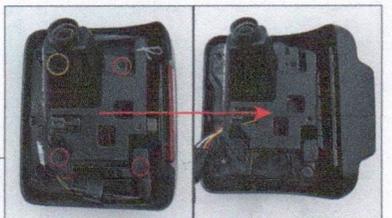

STEP 6

Using a Phillips head screwdriver, remove the (3) Phillips screws from the mounting bracket. Lift the bracket away from the tail light, and remove the original metal clip from the tail light using a pry tool.

Transfer them metal clip to the new tail light. Fit the original mounting bracket to the new tail light, and secure into place reusing the original (3) Phillips screws. Repeat this process for both tail lights.

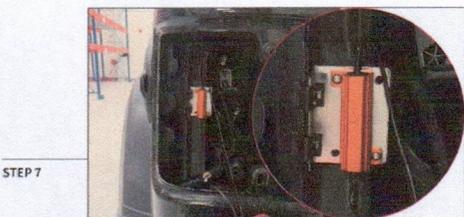

STEP 7

Using the provided clips, install the resistor and bracket onto the pinch weld behind the tail light.

**Note: If the clips aren't tight enough, use a pair of pliers to squeeze the clip together. This will decrease the gap in the clip and will make the clip tighter for installation.



STEP 8

Re-install the new LED tail lights following Steps 1-4 in reverse order.

Installation is now complete.