


■ Back Camera

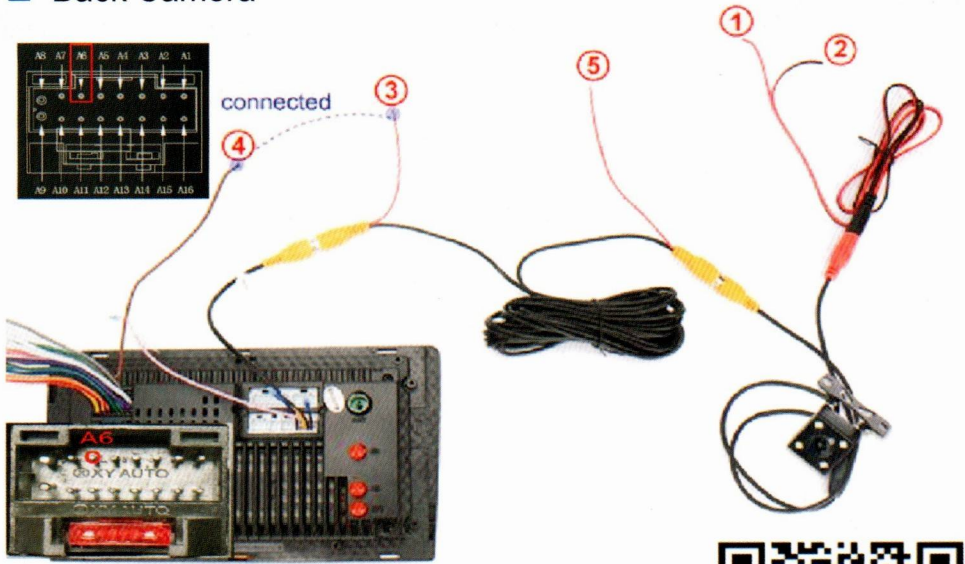

1. Find A6 pin and peel the wire, connect it with ③
2. ① and ⑤ connect to reverse light +
3. ② Connect to reverse light -

[▶ Install Video](#)

Noted: Usually the radio have canbus box, no need to connect to A6.
If not trigger the reverse, then need to connect to A6.



■ RCA

AMP CONT

AUX L IN

AUX R IN

VIDEO OUT

FL OUT

FR OUT


CVBS-IN-1

LINE OUT

SUB WOOF

MIC

Amplifier

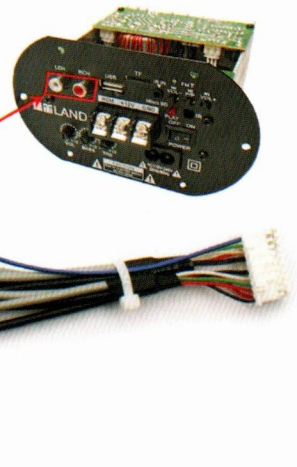

If you need Tech Support or have any question with the Device, please connect us

Email: ustopdisplay@gmail.com

Tel: 5857107939

Important

- This is the reverse camera signal wire. It have the bluetooth and Wifi antenna on it.
So MUST CONNECT IT TO RADIO, to have better performance for BT and Carplay/AA.



- Wire Diagram

