

REDROCK

STAINLESS STEEL MUFFLER DELETE

(2018-2026+ WRANGLER JL)

INSTALLATION INSTRUCTIONS

CONTENTS

- (1) Muffler Delete
- (1) Exhaust Tip
- (1) 2.5" Exhaust Clamp (Silver)
- (1) 2.5" Exhaust Clamp (Black)

TOOLS REQUIRED

- 13mm, 15mm Socket
- Ratchet
- Penetrating Fluid
- Floor Jack & Jack Stands


SKU # J270058
Edited: 02/02/2026



STEP 1

Safely lift and support the rear of the vehicle to gain access to the muffler.

Locate the (2) hanger mounting locations above the muffler. These hangers will be unbolted from the frame.

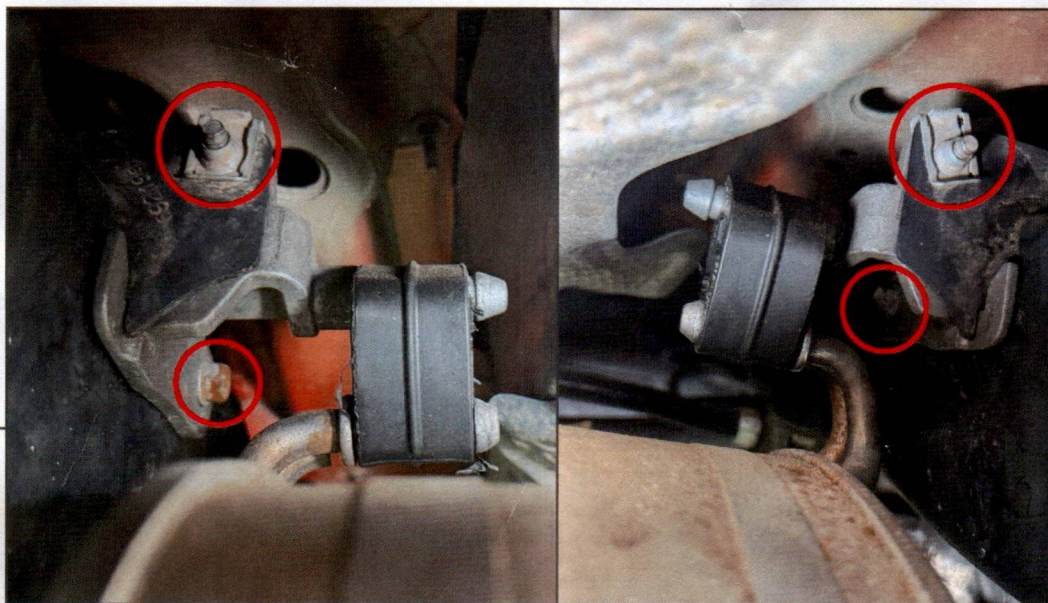

STEP 2

Use a floor jack to support the muffler into place. Then, remove (2) 13mm bolts from each muffler hanger. With these bolts removed, the muffler will only be supported by the floor jack.

STEP 3



Locate the (1) exhaust clamp connecting the muffler to the vehicle exhaust system above the rear axle. Loosen the 15mm exhaust clamp, and then pull the muffler away from the vehicle.


STEP 4



Install the original driver side exhaust hanger to the vehicle frame using the original (2) 13mm bolts.


Note: The passenger side exhaust hanger can be re-installed to the vehicle, if desired. The passenger side exhaust hanger is not required for the installation.

STEP 5

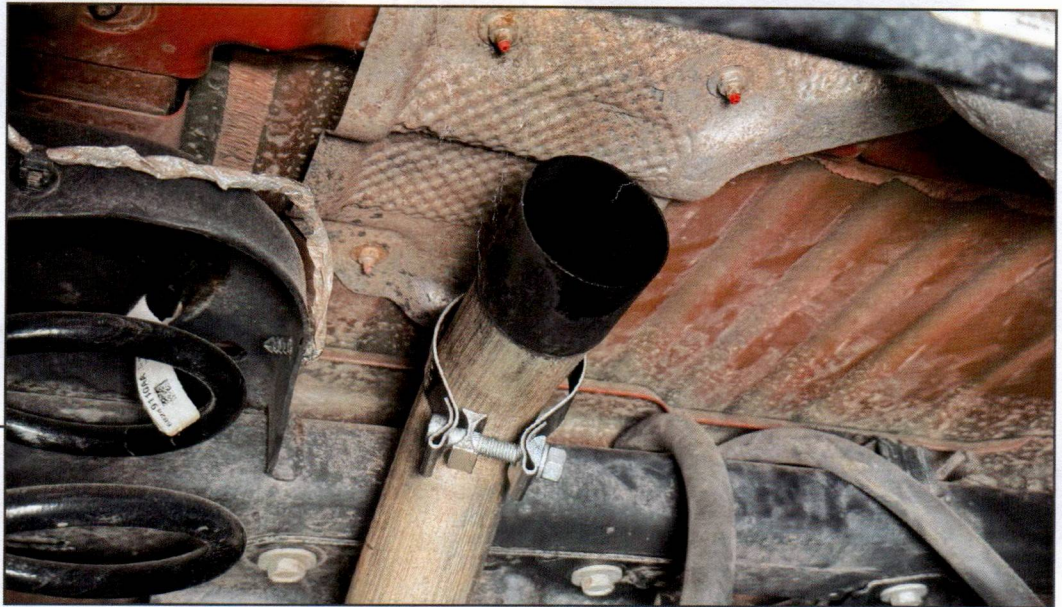


Fit (1) 2.5" exhaust clamp [silver] onto the vehicle exhaust pipe to prepare for the muffler delete pipe.

STEP 6

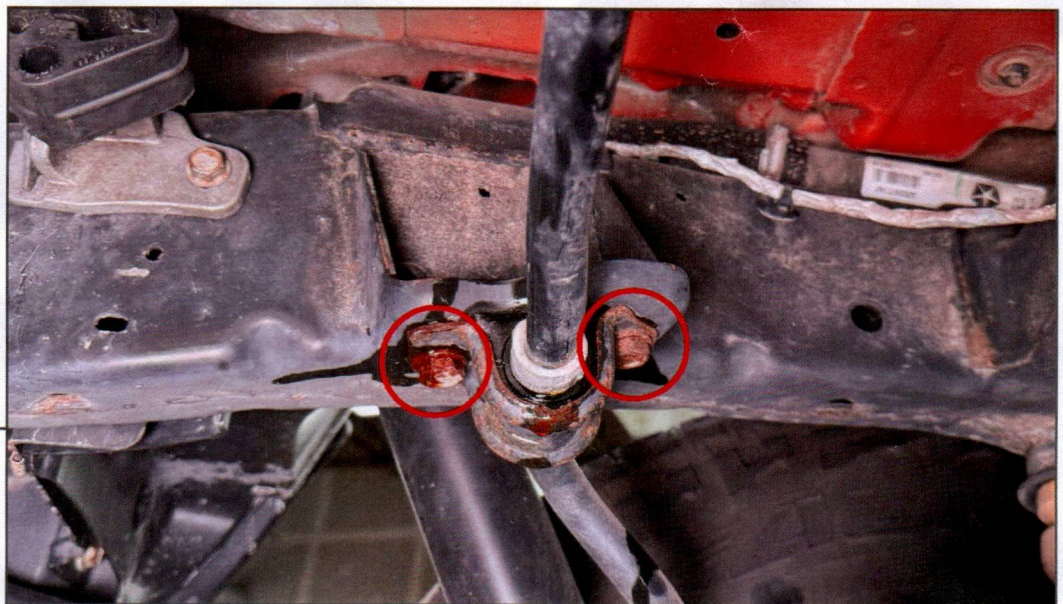


Remove the (2) 15mm sway bar mounting bolts on each side of the vehicle frame to allow the sway bar to hang down to allow easier installation of the muffler delete pipe.

STEP 7

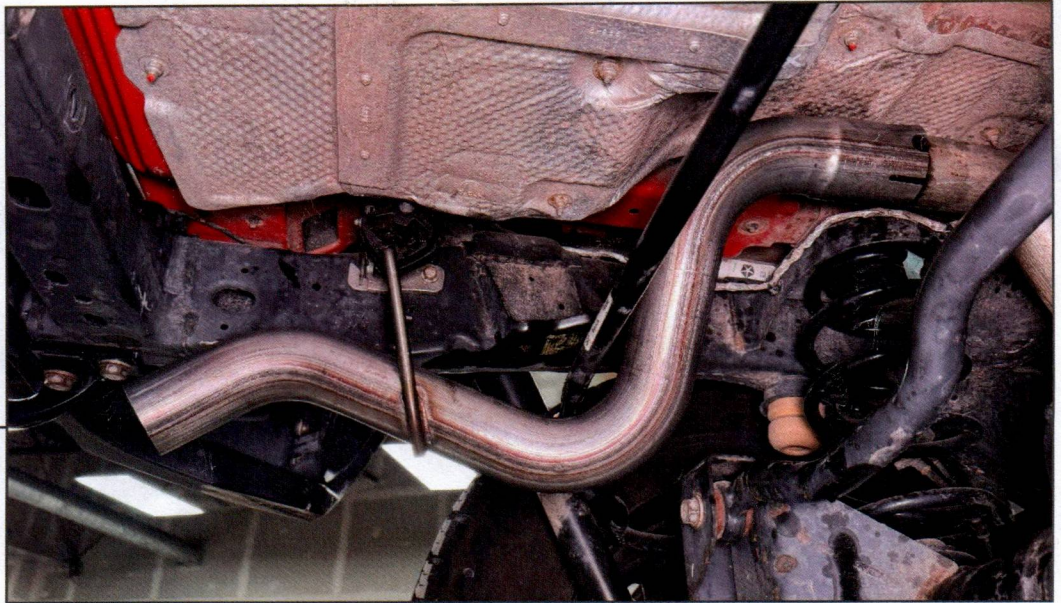

Fit the muffler delete pipe to the vehicle exhaust pipe, and then into the previously mounted exhaust hanger.

STEP 8

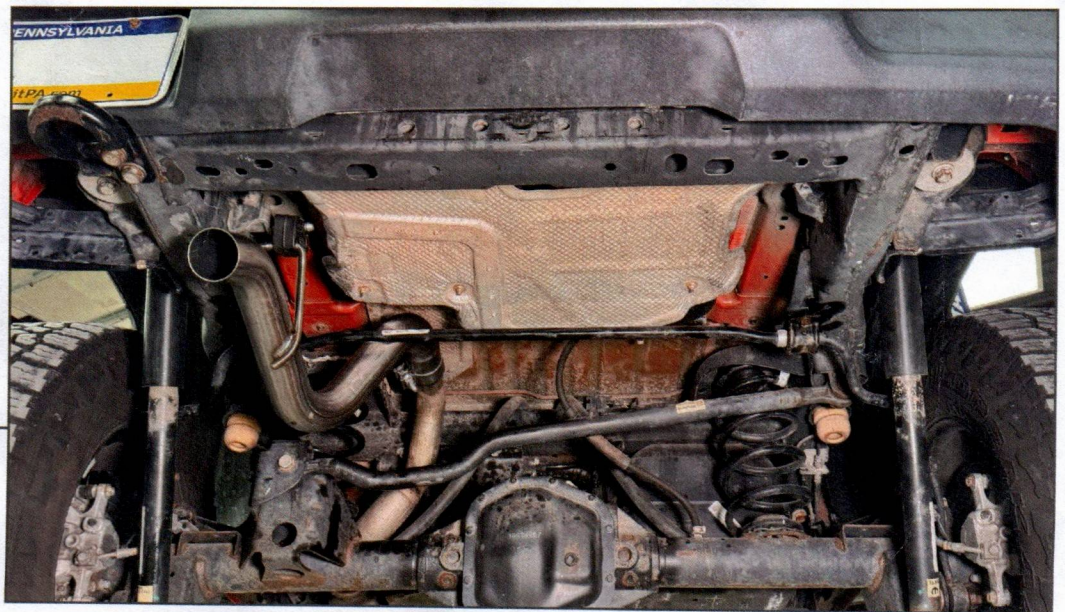

Re-install the sway bar to the vehicle frame using the original (4) 15mm bolts.

Tighten the muffler delete pipe to the vehicle exhaust using the previous placed 2.5" exhaust clamp. Tighten to 45 ft. lbs.

STEP 9



Fit (1) 2.5" exhaust clamp [black] onto the end of the muffler delete pipe. Then, fit the exhaust tip into place. Adjust to best fit, and tighten the clamp into place. Tighten to 45 ft. lbs.

STEP 10



Installation is now complete.