



MOLDED MUD GUARDS

(2020-2023+ GLADIATOR JT - SPORT S MODEL)

INSTALLATION INSTRUCTIONS

CONTENTS

- (1) LH Front Mud Guard
- (1) RH Front Mud Guard
- (1) LH Rear Mud Guard
- (1) RH Rear Mud Guard
- (4) Plastic Push Pins
- (14) Small Phillips Screws
- (2) Long Phillips Screws
- (16) Flat Washers

TOOLS REQUIRED

- Phillips Screwdriver
- Panel Removal Tool
- Drill
- 1/8" Drill Bit

**STEP 1
(FRONT)**




Secure the middle of the mud guard to the fender flare using (2) plastic push pins.

**STEP 2
(FRONT)**



Using the mud guard as a template, drill (2) holes in the outer edge of the fender flare. Once drilled, install (2) Phillips screws and (2) flat washers and tighten until secure.

STEP 3 (REAR)

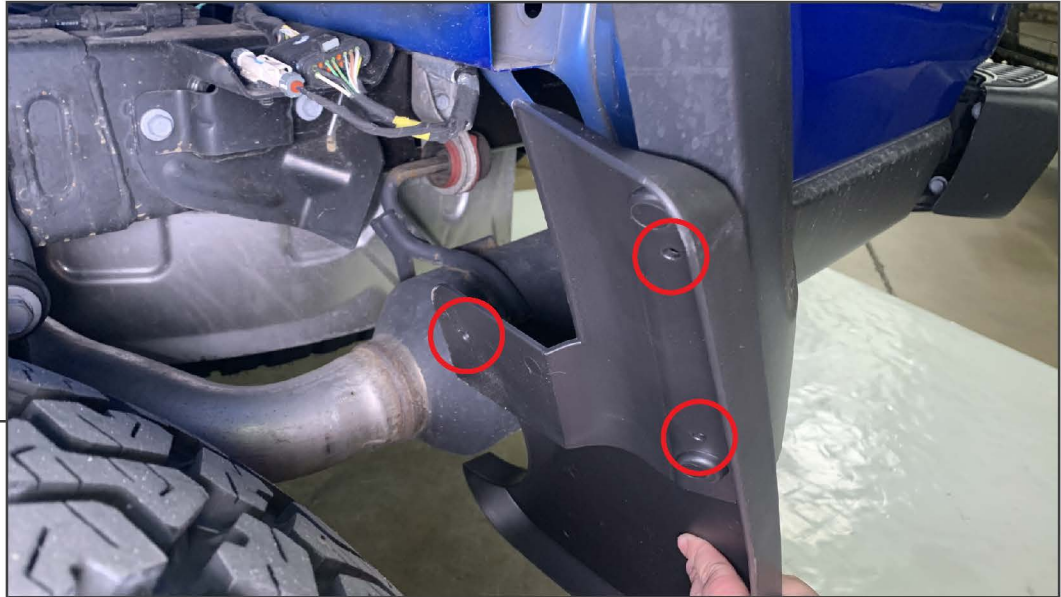

Using the mud guard as a template, mark and drill (2) 1/8" holes in the fender flare, as well as (1) 1/8" hole in the inner fender liner. Once the holes are drilled, install (1) Phillips screw and (1) flat washer into each hole.

STEP 4



Repeat steps 1-4 to the opposite side of the vehicle.

Installation is now complete.