

CargoStop™ Full Size - 56" (Fits full size truck beds)

Fits DU-HA Part Numbers
80099

Installation Instructions:

Locate slots best for your tailgate


Please note: The slots in the CargoStop™ floor run the entire length of the box to allow flexibility of installation for any tailgate or truck configuration. Depending on your truck brand the gap between your tailgate and your truck bed floor may contain brackets, wire harnesses, hinges, or power assist motors. In every truck you will find adequate room to locate the location for two-foot brackets, but they might not always be exactly uniform side to side.

- 1 Place the box in the back of the truck bed and locate a good location for each foot bracket from side to side avoiding anything in the gap between your truck bed and tailgate. The figure in step one shows an example of a good spot to put it versus something to avoid.

Feet Assembly

Please note: Now that you have located the slots best for your truck bed, you can begin installing the provided feet. We recommend hand tightening to get the best fitment. Start with the steps below.

- 2 Install the rubber padded washer onto the hex bolt. The rubber side will face the CargoStop™ foot bracket on the bottom of the foot bracket.
- 3 Place the hex bolt through the foot bracket then through the slots in the floor of the cargo stop.
- 4 Install the plane washer and then the lock nut, it is recommended you leave the hardware hand tightened to check fitment with the tailgate closed.

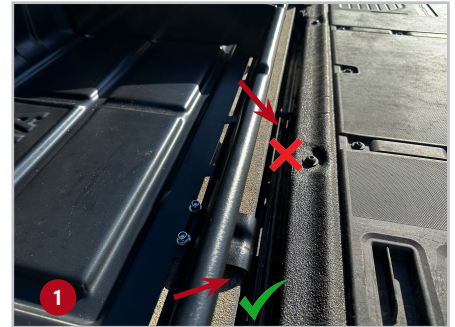

- 5 Now that the hardware is hand tightened, set the feet between the tailgate and the truck bed (Figure 5a). Close the tailgate and while looking down you should see the feet pinched between the tailgate and the truck bed. Because the hardware is not fully tightened, you should be able to adjust the position of the CargoStop™. Move the CargoStop™ forward until it almost up against the tailgate (Figure 5b). Open the tailgate and keeping in mind the position of the feet, you can tighten the feet down using the #4 Hex Wrench and 11mm Socket.



Please note: Some tailgates have larger gaps than others. Some will pinch the foot bracket very tightly and some may have some gap once the tailgate is closed. The CargoStop™ foot brackets are designed to be pinched or travel freely. The intended design is to limit forward/back and side to side movement of the box. The CargoStop™ is not designed to eliminate all movement. If you have a very tight fit and no movement that is a bonus. We designed the box and brackets to accommodate all trucks, all bed mats/liners, and all tailgate covers and multi-function tailgate geometry. We are certain that somewhere there is somebody that has a certain combination of mats or tailgate adds that will prevent our product from functioning as designed but we have not found it yet. This is a universal fit product and most truck owners will be able to adjust this product and make it function as designed. Again: Once the cargo stops in put in place you may or may not be able to wiggle it around slightly and that is normal and dependent on how you truck is equipped from the factory or any after market bed or tailgate covers you may have. Once your foot brackets are installed you simple open and close your tailgate to secure the box.

CargoStop™ Full Size - 56" (Fits full size truck beds)

Fits DU-HA Part Numbers
80099


Installation Instructions:

Please note: If you have a tailgate seal to assist with water leakage or dust from entering your truck bed, we have thought of that also. DÜHA sells a tailgate seal on our website and feel this is a must have truck accessory. The CargoStop™ foot bracket can depress (pinch) your tailgate seal. Having that tailgate seal will also assist in any additional play that might exist in the gap of your tailgate. When taking your CargoStop™ in or out just make sure you always line up the foot brackets in the same place as where you originally pinched that seal. The seal itself will form a memory of where this foot brackets will always align in your truck. With a tailgate seal the gap will get tight and you will have to slam your tailgate relatively hard the first few times you install the CargoStop until the seal gets pinched and forms a memory. If you determine the gap is too tight you can cut out two sections of your tailgate seal to accommodate the foot brackets perfectly.

The Foot Brackets and Cargo Stop Box are both made of a material designed to reduce scratching, rubbing, or paint abrasion of your truck bed or tailgate. Please understand that the truck bed under all travel situations has a lot of movement and vibration. Any bare, unprotected, painted may experience paint rubbed, scratched, or removed from long- or short-term use of this product. Cover your painted areas and be aware this may happen.

Divider Installation and Removal:

- 6 Your CargoStop™ comes standard with one divider. Additional two divider accessory packs are available from DÜHA.com or from the dealer you originally purchased your CargoStop™. To install, simply slide the hook into the front slot first then install the hook into the rear slot and push down to lock in place. Removing these dividers is a little trickier than installing. Once installed the divider is locked in tightly. This is by design so when you are driving, larger heavier cargo stays put with little space available for sliding. To remove the divider, you must push of the rear wall of the Cargo Stop and pull up and back in the divider all at the same time. The motion is a little awkward the first couple times but once you try it a few times the dividers remove easily with the proper motion. See the figure below for removing.

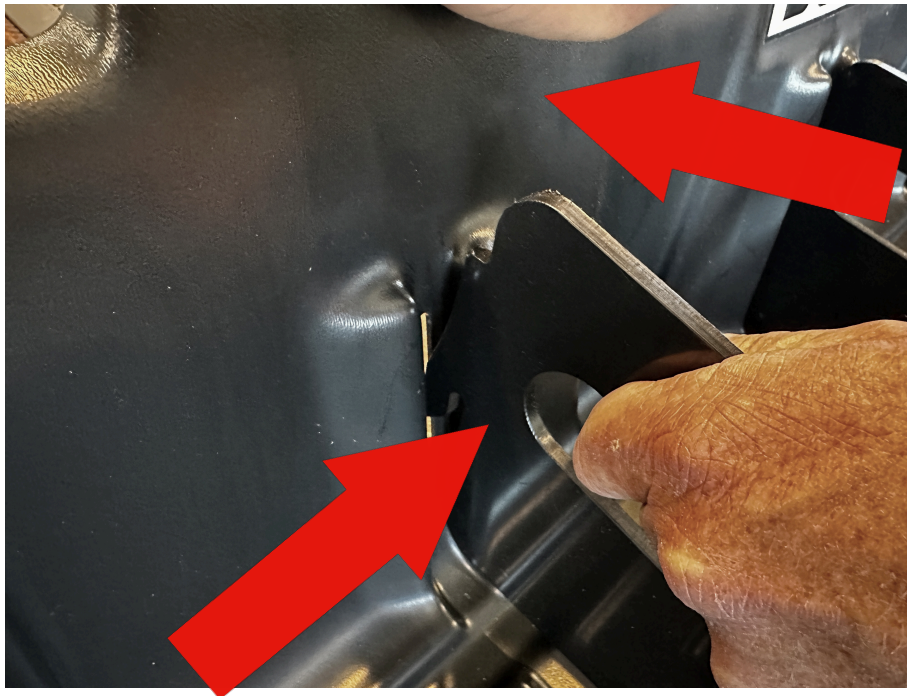

Step 1: Push the back of the CargoStop™ where the back of the divider sits.

Step 2: Pull and lift up with the handle on the divider. This motion combined with pushing on the back allows for the divider to pop loose.