

# MAXIMUS-3



UNIVERSAL FIT

## UNIVERSAL FAIRLEAD LICENSE PLATE BRACKET

(Fits behind any standard hawse fairlead with 10-inch bolt pattern)

PART #: UN1018LM

### INSTALLATION GUIDES

Estimated Install Time: 15 Minutes

PLEASE MAKE SURE YOU READ AND UNDERSTAND THE ENTIRE INSTALLATION GUIDE BEFORE YOU START. WE EXPECT YOU TO HAVE BASIC MECHANICAL ABILITIES TO PERFORM THIS INSTALLATION.

WE RECOMMEND THAT YOU SEPARATE AND IDENTIFY ALL THE PARTS AND HARDWARE KITS YOU RECEIVED WITH YOUR SHIPMENT BEFORE YOU PROCEED.



## IMPORTANT

Follow these instructions precisely. Maximus-3 is not liable for any damage caused by improperly installed products. It is the purchaser's responsibility to ensure both the installation and maintenance are performed properly as set forth in this guide. We recommend using anti-size paste on all non-thread lock bolts.

## Component List:

	Qty
License Plate Bracket	1
License Plate Frame	1
M6 x 16 flange Hex Bolts – Zinc Plated	4
M6 x 16 Thumb Screws – Zinc Plated	2

## Tools Required:

Basic hand tools  
Metric Sockets/Wrenches



## INSTALLATION STEPS:

### 1- BOLT YOUR MAXIMUS-3 LICENSE PLATE BRACKET TO YOUR HAWSE FAIRLEAD

Place your Maximus-3 bracket behind your hawse fairlead and bolt it onto your bumper with the same hardware of the fairlead. The comes between the fairlead and the bumper, as shown below.


### 2- ASSEMBLE YOUR STATE LICENSE PLATE TO MAXIMUS-3 ALUMINUM FRAME

Using a 10 mm socket assemble your state license plate to Maximus-3 frame (aluminum backing plate) with two (2) M6 flange hex bolts supplied. Refer to pictures below.

### 3- MOUNT THE FRAME AND PLATE TO THE VEHICLE

Using the M6 thumb screws provided, mount your license plate and frame assembly to the vehicle as shown below. Do not overtighten the screws, just use your thumbs.

- The plate is removeable so that you can remove it when off-roading to avoid impact against obstacles.
- You can also mount the license plate permanently using the extra M6 flange hex bolts provided.
- You can also mount the license plate pointing up to keep the front of fairlead clear unobstructed.

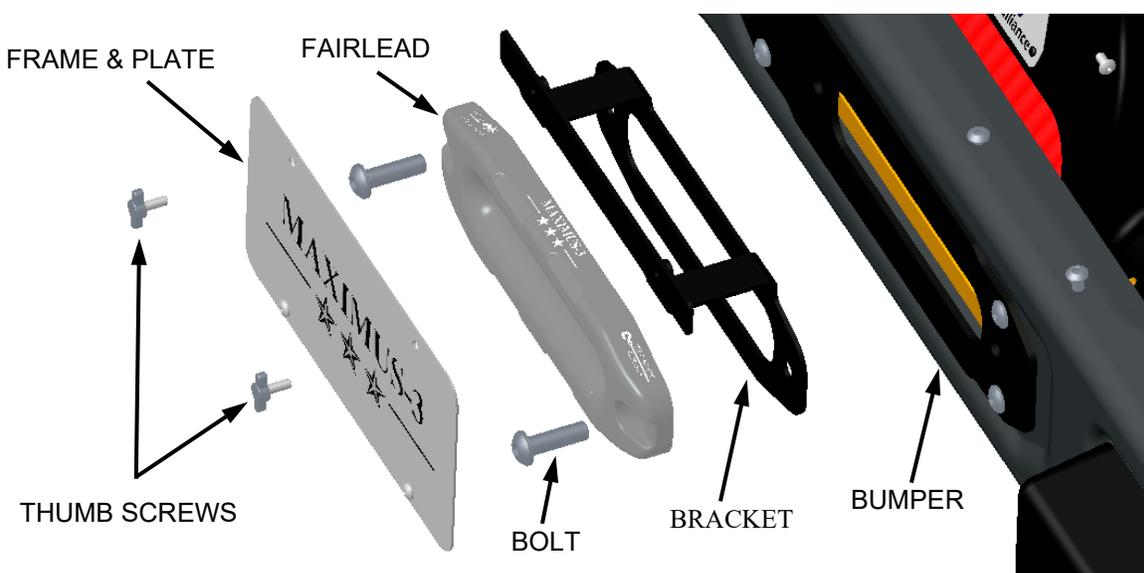

Your installation is complete. If you have questions regarding this installation, please contact us at [customerservice@maximus-3.com](mailto:customerservice@maximus-3.com), or call 248-6061745