













# **INSTALLATION INSTRUCTION**

**2011-2021 Jeep Grand Cherokee**  
**OEM Replica Running Boards**  
**PART # RJEGC22**




PARTS LIST:


	a		e		I	No.	Name	Remark	Qty
	b		f		J	a	Running Board	/	1Set
	c		g		K	b	BRACKET	/	1Set
	d		h		l	c	T-Bolt 1	M10	8Pcs
						d	Flat Washer 1	M10	8Pcs
						e	Spring Washer	M10	8Pcs
						f	Flange Nut 1	M10	8Pcs
						g	T-Bolt2	M6	16Pcs
						h	Flat Washer 2	M6	16Pcs
						i	Flange Nut 2	M6	16Pcs
						j	Expansion Buckle	/	10Pcs
						k	Self Tapping Screws	M6	4Pcs
						l	Installation Instructions	/	1Pcs

INSTALLATION PROCEDURE :

1.Remove the buckles and bolts at both ends of the Side Skirt, Then remove the buckle under the Side Skirt, and finally move the Side Skirt from back to front outward, as shown in the picture.

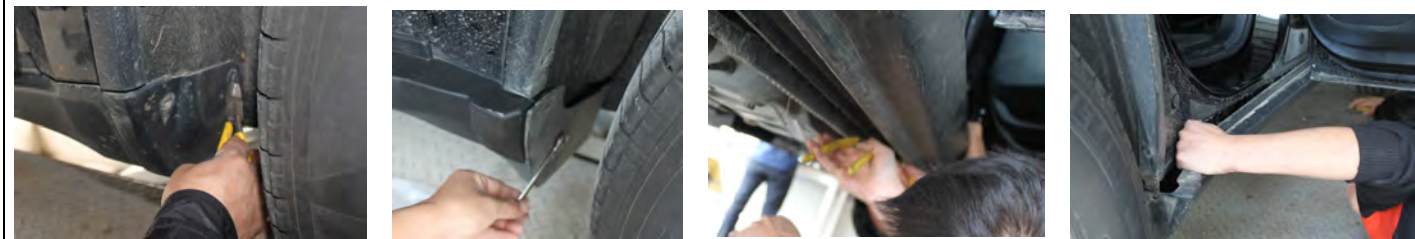


2.Place the "T-bolt 1" at the arrow position in the diagram.

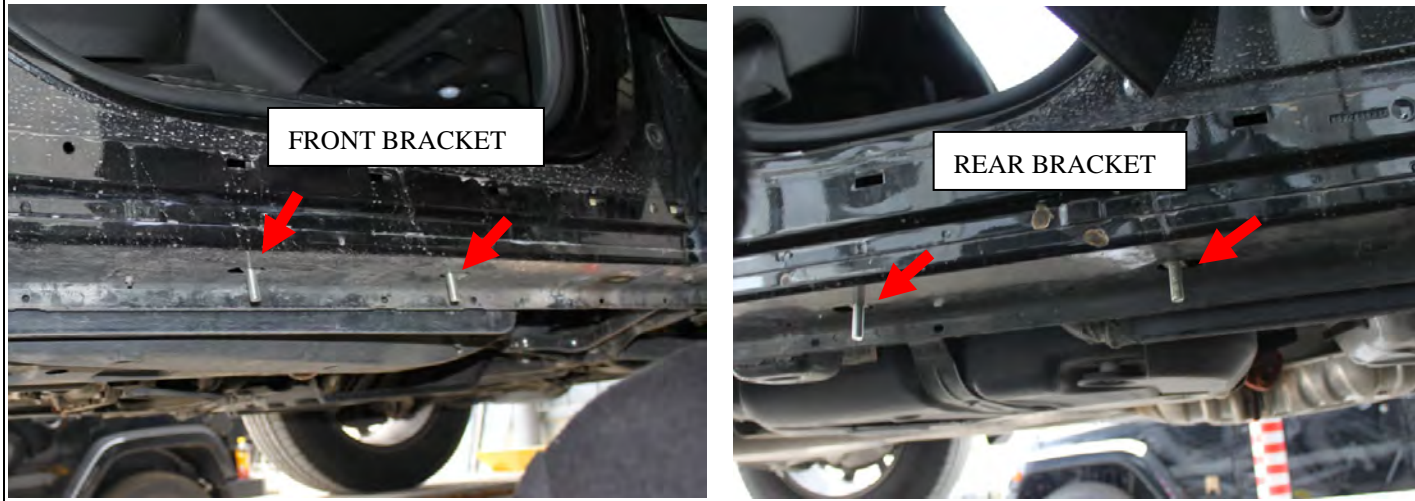


3. Place the front and rear brackets, flat washers, and spring washers at the corresponding positions of the T-bolts, and then tighten the flange nuts slightly. Do not tighten them yet, and fix the brackets.


FRONT BRACKET

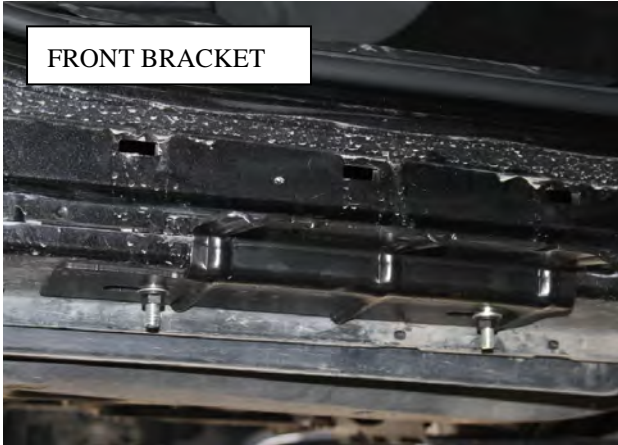

REAR BRACKET

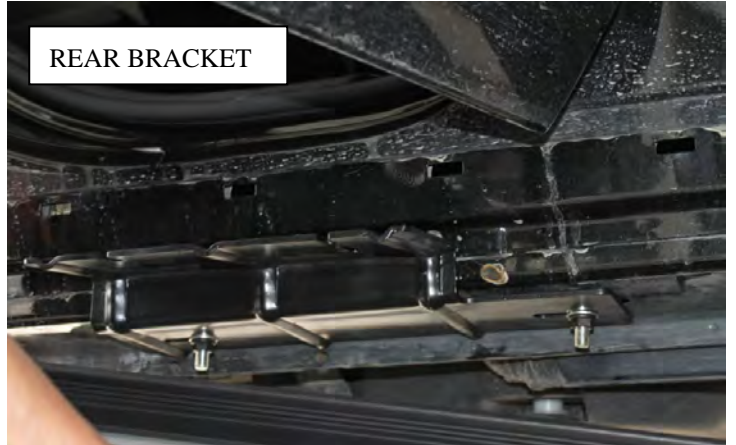


4. Put "T-Bolt 2" on the profile on the back of the pedal and put 4 bolts in each card slot to make it correspond to the hole position of the support; At least two people lift the pedal to align its bayonet with the body hole, confirm and push in.

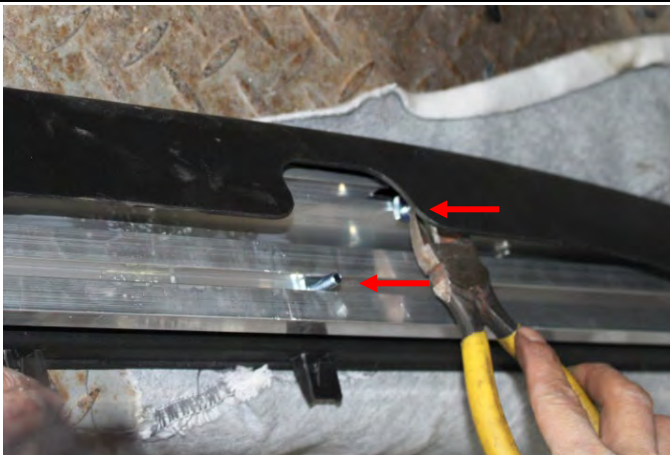


5. Adjust the T-Bolt2" to insert it into the hole of the bracket; Push the pedal to tighten the lower nut slightly.

Adjust the eight Bolts in the profile card slot to pass through the corresponding holes in the iron bracket, and place the flat pad and screw the nut.

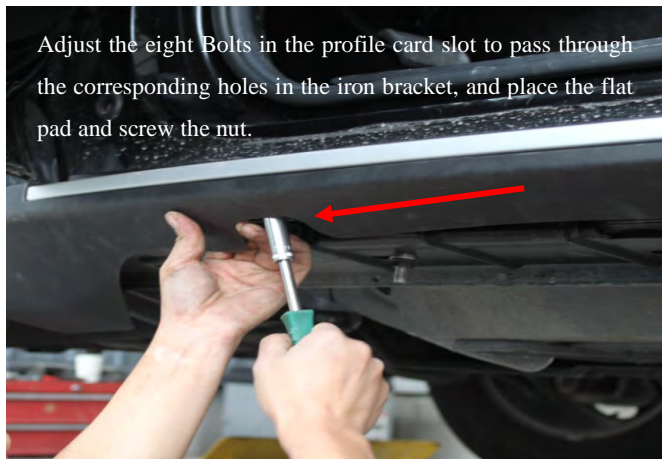

Push side up tight  
Slightly tight

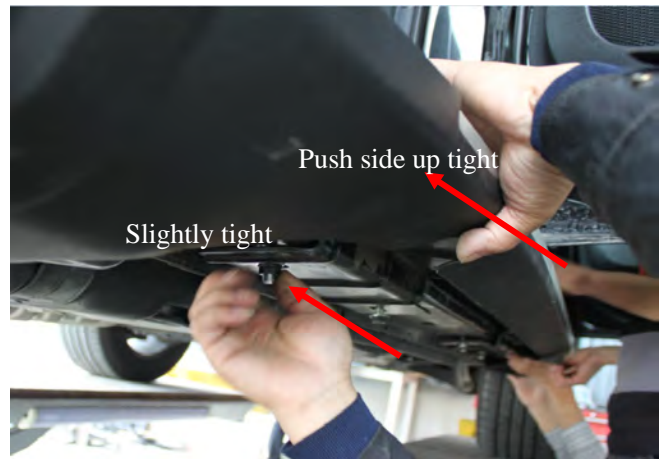




6. Check whether the pedal and the body are installed properly. Push and tighten the nuts of the profile and iron bracket after the installation is in place, and then tighten the nuts of the iron bracket on the body, as shown in the figure.



7. Remove the fender from the edge of the removed side skirt and put it on the installed pedal, as shown in the picture; Install the clasp in reverse as you removed the side skirt. **Note: The buckles should hold the mud shield, pedal and body guard together.**

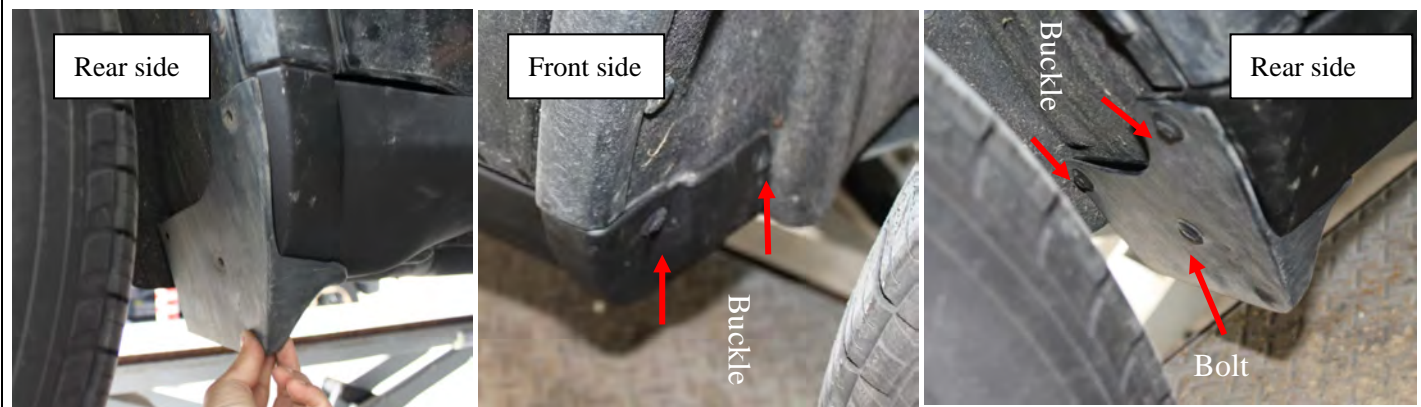

8. Take the M6 self tapping screw for fastening and the position below the mudguard as shown in the diagram.



9. Further check if all screws and other parts are fully installed, install the other side pedal using the same method, and complete the installation.



**Disclaimer:** Losses caused by improper installation or similar issues are not covered by our company's quality assurance.