

# Faros Antiniebla




Nosotros recomiendo que tenga el producto instalado profesional mente.





- Consejos Para la Instalación:**
- Siempre use gafas y guantes de seguridad para evitar algún accidente.
  - No corte o conecte ningún alambre antes de saber qué función hace para evitar un corte electrónico
  - Nosotros recomiendo que soldán todos los alambres para la mejor conexión posible.
  - Después de instalar revise que no haya alambres sueltos o descubiertos
  - Para evitar daños a su vehículo use cinta aislante o bandas de sujeción para organizar cables sueltos.

**Nota:** Instalación varea de auto a auto. Depende de qué clase de auto tenga, el parachoques puede tener que ser removido para instalar.

**Advertencia:** Por favor use los útiles de seguridad recomendados por nosotros. Nosotros no somos responsables por lesiones o accidentes que puedan pasar durante la instalación de los productos.

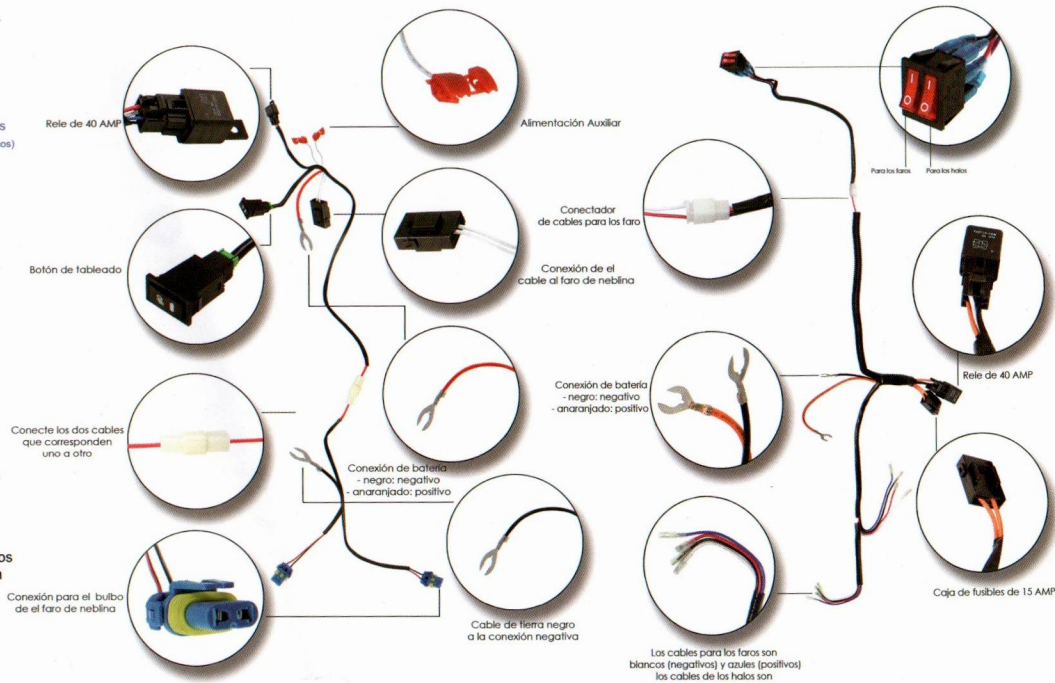

Los cables para los faros son blancos (negativos) y azules (positivos) los cables de los halos son negros (negativo) y rojos (positivos)

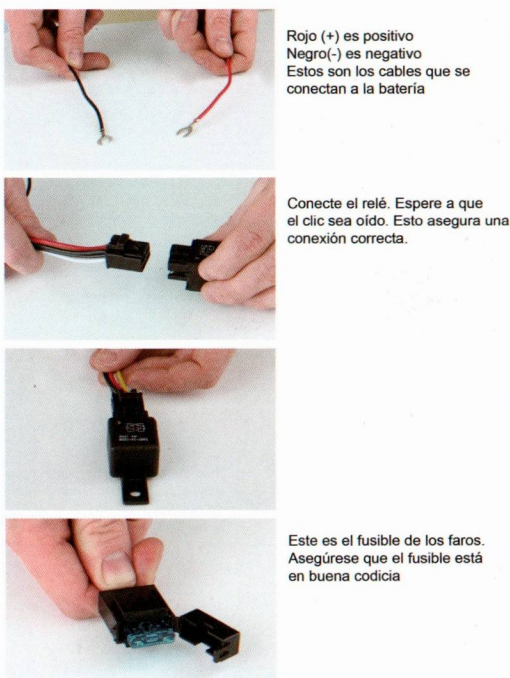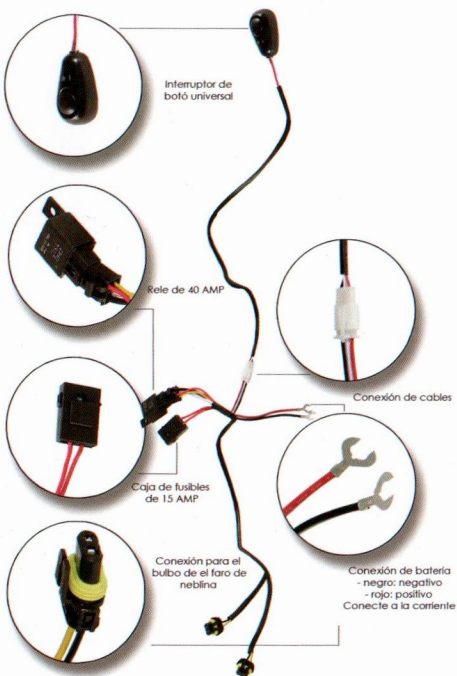

Rojo (+) es positivo Negro(-) es negativo Estos son los cables que se conectan a la batería

Conecte el relé. Espere a que el clic sea oído. Esto asegura una conexión correcta.


Este es el fusible de los faros. Asegúrese que el fusible está en buena codicia



Conecte estos dos cables para terminar la instalación y activar el interruptor de botón. Nota: todos los interruptores son diferentes.

Cable de accesorio se puede conectar a un componente.

Conecte el cable que corresponde a cada bulbo para completar la instalación. Nota: cada bulbo puede tener conexión diferente.

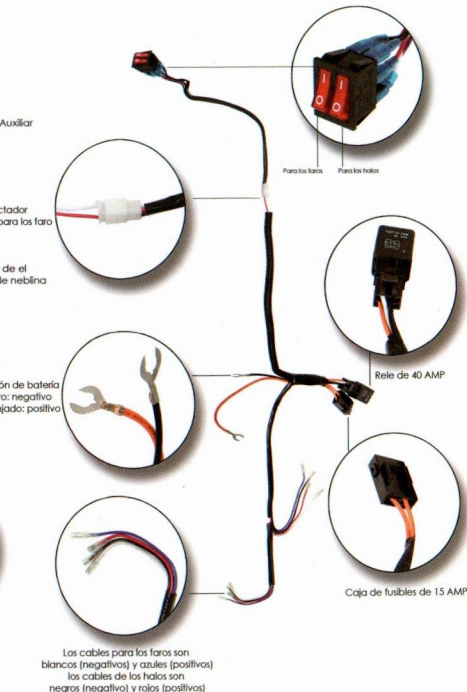

Los cables para los faros son blancos (negativos) y azules (positivos) los cables de los halos son negros (negativo) y rojos (positivos)



# FOG LIGHTS



We highly recommends professional installation






**Installation Tips:**


- Always wear eye protection and safety gloves to avoid any possible injuries.
- DO NOT cut or connect any wires without identifying them to avoid any possible electrical shortage.
- We recommends soldering each wire connection for optimal connectivity
- Please check to ensure no electrical connection is exposed after installation
- To prevent damage to the product or vehicle, please use electrical tape or zip ties to organize loose wires.

Note: Installation may vary depending on vehicle.  
Removal of your vehicle's front bumper may be required.

Warning: Please use the recommended safety equipment when installing Spyder Auto Headlights. We are not liable for any injuries or accidents that may occur during installation.

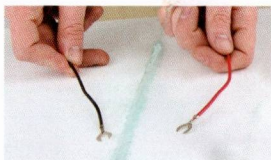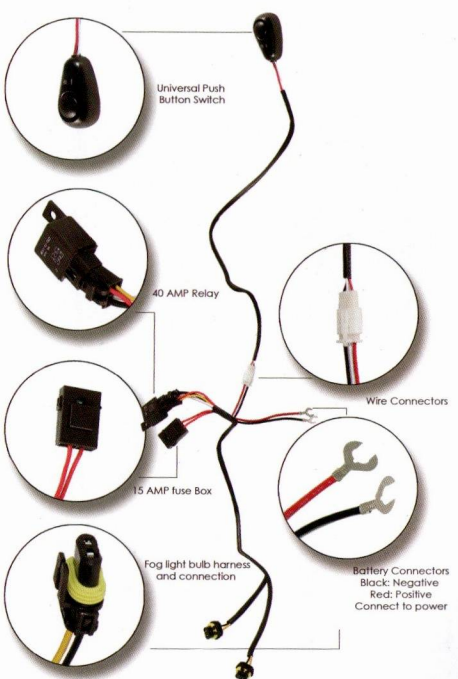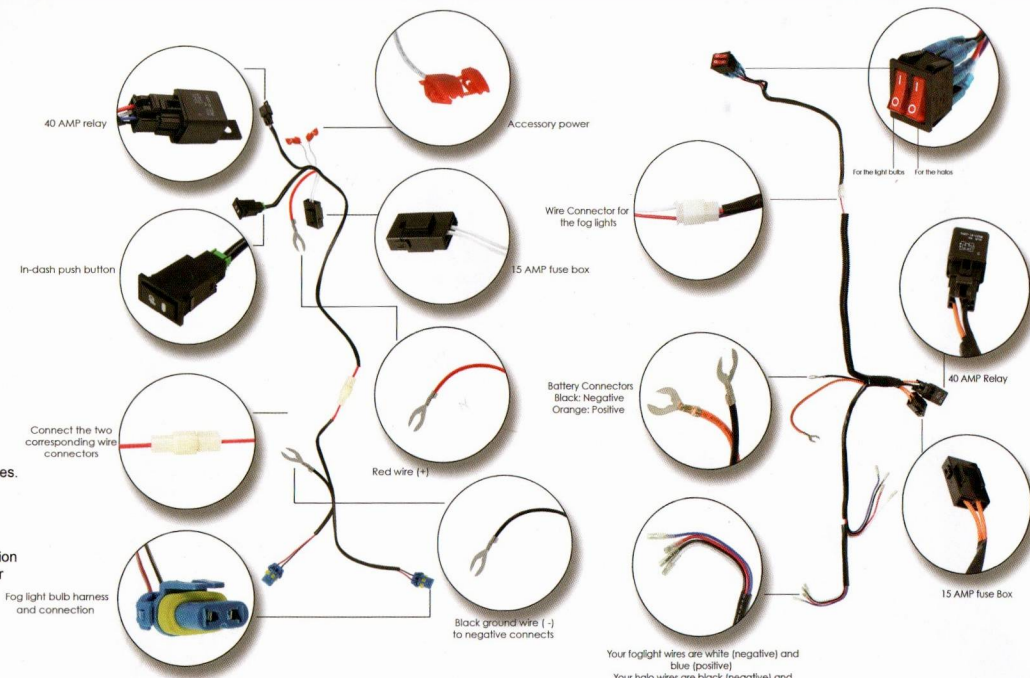


Red (+) is positive and black (-) is ground. These are the wires that connect to your battery terminal.

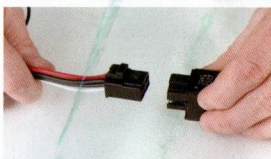

Connect the relay, wait for a click to be heard, this insures a correct installation.



This is the fuse for the fog lights make sure it is in good working order

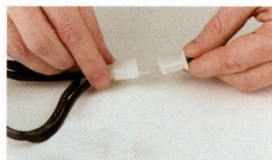

Connect these two wire connectors to complete your installation and activate your push switch  
Note: all switches are different.



Accessory wire to be hooked up to an accessory component



Plug the corresponding attachments into each light bulb to complete installation.  
Note: each light bulb type will have a different connector type

