

Important Notice

- UVS100® Custom Sunscreens do not cover the entire glass area on some vehicles. Windshield pillar post size and angle, rearview mirror shape and size, and additional sensors can prevent some Sunscreens from providing total blackout coverage.

How To Install

Open Sunscreen

Unfold your UVS100® Custom Sunscreens with the reflective side facing outward and place it as flat as possible onto the dash area. If there are assist handles on the windshield pillars, make sure the Sunscreen fits in front of them. Then slide it forward until it reaches the bottom of the windshield ahead of the defroster vents.




Place In Windshield

With both hands, lift the top of the UVS100® Custom Sunscreen into the windshield area.

NOTE

Be careful to not bend the corners while installing, as damage to the inner insulator may occur.

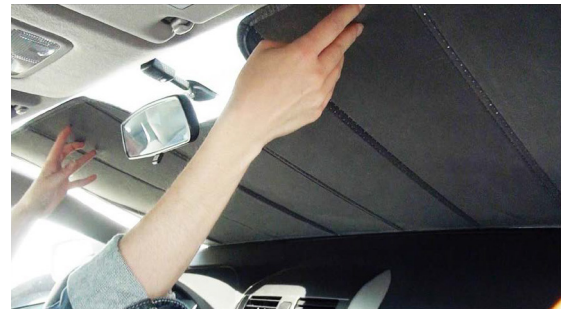

Secure In Place

Pull down each visor to hold the UVS100® Custom Sunscreen in place. In some cases, the Sunscreen may not reach all the way to the windshield pillars. This additional space is necessary to be able to install the Sunscreen without damaging it.



How To Remove

Simply reverse the installation steps, fold the unit and store in the trunk or under a seat.



Optional Storage Bag Shown

Scan code on phone or tablet to view full detailed Sunscreen installation video.



If you encounter any problems during the installation of your UVS100® Custom Sunscreen, please contact our Customer Service Department, Monday-Friday, 8AM-5PM(CST) at **800-4-COVERS (800-426-8377)** or by e-mail at sales@covercraft.com. You may also access help videos on the web at covercraft.com



Installation Instructions

www.covercraft.com



IMPORTANT NOTICE



UVS100® Custom Sunscreens do not cover the entire glass area on some vehicles. Windshield pillar post size and angle, rearview mirror shape and size, and additional sensors can prevent some Sunscreens from providing total blackout coverage.

STEP 1


Unfold your UVS100® Custom Sunscreen with the reflective side facing outward and place it as flat as possible onto the dash area. If there are assist handles on the windshield pillars, make sure the Sunscreen fits in front of them. Then slide it forward until it reaches the bottom of the windshield ahead of the defroster vents.



STEP 2

With both hands, lift the top of the UVS100® Custom Sunscreen into the windshield area.

NOTE: Be careful to not bend the corners while installing, as damage to the inner insulator may occur.

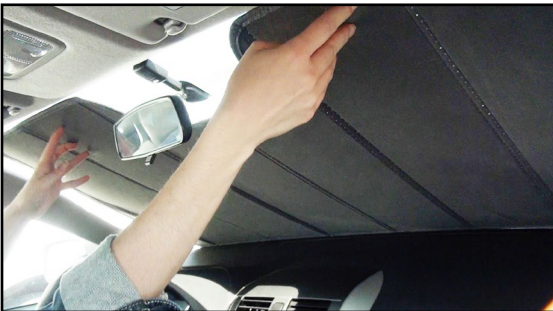

STEP 3

Pull down each sun visor to hold the UVS100® Custom Sunscreen in place. In some cases, the Sunscreen may not reach all the way to the windshield pillars. This additional space is necessary to be able to install the Sunscreen without damaging it.



REMOVAL

Simply reverse the installation steps, fold the unit and store in the trunk or under a seat.

For more instructions and "How To" videos, visit Covercraft's YouTube Channel: www.youtube.com/covercraft1965



(Optional storage bag shown)