


INSTALATION INSTRUCTIONS


UNIVERSAL RUNNING BOARD

Parts List			
Item	QTY	Code	Description
1	1 set		Running Board
2	6 pcs	397872AA	U (clamp) bracket

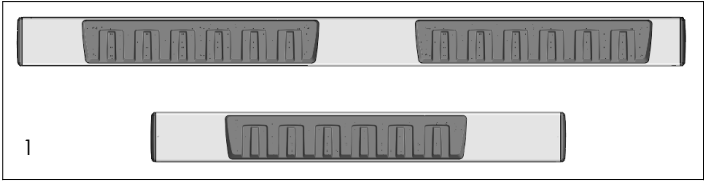

Required Tool:

- A. Ratchet w/5" extension
- B. 15mm wrench
- C. 17mm 12-point socket

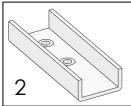

1. Before beginning the installation read all instructions thoroughly and verify that all hardware is accounted for. if there are any listed parts missing, please notify your distributor immediately.
2. To maintain and care this product keep it clean and do not use abrasive cleaners or polish waxes. It is recommended to use only non-abrasive automotive wax such as pure carnauba to avoid scratches and rust.
3. Once the main brackets are installed **(sold separately)**, the approximate installation time is **15 min.**
4. Identify the outboard side of the running board prior to install. **See illustration 1.**
5. Place the U brackets inside the Running Board. Move them to align to the main brackets.
6. Place the flat and lock washers with the square head bolts. This hardware kit is included on the main brackets that are **(sold separately)**. **See illustration 2.**
7. Align the Running board and tighten the bolts using the wrench or the socket.
8. **NOTE: For some regular cabs only two U brackets are needed per side.**

Illustration 1


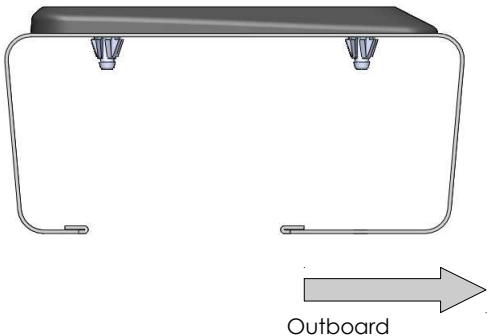



Illustration 2

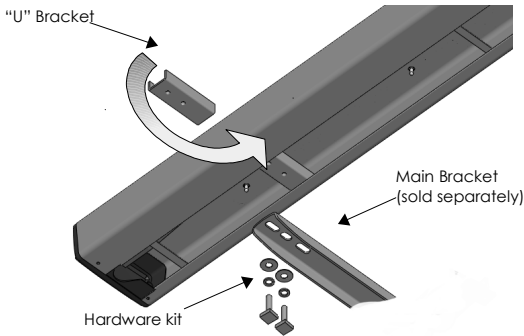

INSTRUCTIVO DE INSTALACIÓN


ESTRIBO UNIVERSAL

Lista de partes			
ítem	Cant	Código	Descripción
1	1 jgo.		Estribos
2	6 pzas	397872AA	Bracket "U"

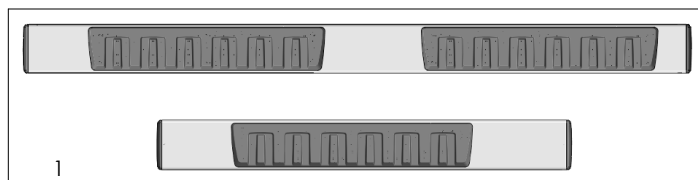

Herramienta Requerida:

- A. Matraca c/ extensión 5"
- B. Llave española 15mm
- C. Dado estriado 17mm



1. Lea y comprenda perfectamente todas las instrucciones antes de comenzar la instalación. Si alguna de las partes listadas no se encuentra, no continúe con la instalación y llame a su distribuidor inmediatamente para obtener los componentes faltantes.

2. Para el cuidado y mantenimiento de este producto se recomienda mantenerlo limpio y no utilizar ceras abrasivas con el fin de proteger el acabado.

3. Una vez instalados los brackets **(se venden por separado)**, el tiempo de instalación de este producto es de **15 min.**

4. Identifique la cara exterior del estribo, ésta es la que tiene la ceja más grande por la parte de abajo. Ver ilustración 1.

5. Coloque los brackets U dentro del Running board y desplácelos para alinearlos con el bracket principal. Ver ilustración 2.

6. Coloque rondanas planas y de presión con los tornillos cabeza cuadrada. Esta tornillería va incluida dentro de los brackets **(que se venden por separado)**. Ver ilustración 2.

7. Alineé el Running board y apriete la tornillería, usando la llave española ó el dado estriado.

NOTA: En algunos casos para cabinas regulares (estribos con una huella por lado), sólo se utilizan dos brackets U por lado.

Ilustración 1



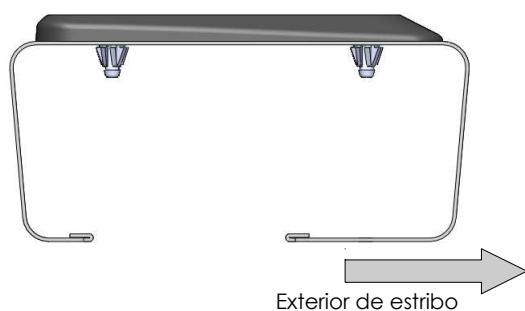


Ilustración 2

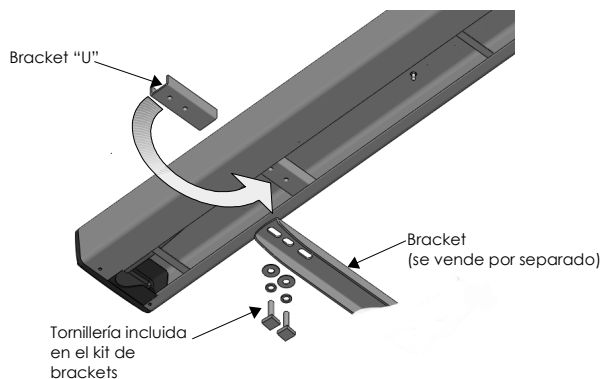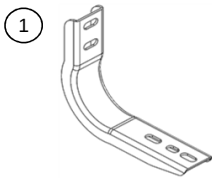


Parts List					Required Tools (Not included)	
Item	Qty.	Code	Description	Max. Torque	Qty.	Description
1 Kit					1	1/2" Socket & Wrench
Hardware brackets kit					1	13mm Socket & Wrench
1	6 Piece	392566AA	Bracket.	-	1	17mm Double hex socket (12 point) or 15mm Wrench
1 Kit					1	Ratchet
KTE-392565 Hardware bolts kit					1	Extension
2	12 Piece	-	5/16" Square head bolt. Zinc black	11 Lb.ft		
3	24 Piece	-	5/16" Flat washer. Zinc black	-		
4	24 Piece	-	5/16" Lock washer. Zinc black	-		
5	12 Piece	-	5/16" Hex nut. Zinc black	11 Lb.ft		
6	12 Piece	-	M8 P1.25 Hex nut. Zinc black	20 Lb.ft		
					Product Image	
					1	
					2	

Instructions


- 1.- Before beginning the installation, please read all directions carefully and verify that all necessary hardware is accounted for. If any parts are missing, stop the installation and contact your distributor immediately.
- 2.- To maintain and care this product keep it clean and do not use abrasive cleaners or polish waxes. We recommend to use only non-abrasive automotive wax such as pure carnauba to avoid scratches and rust.
- 3.- The approximate installation time is 45 min.
- 4.- Locate below in the rocker panel, in the sides, spiral per us to the front, center and rear of vehicle. **SEE PICTURE 1 & 2.**

PICTURE 1.

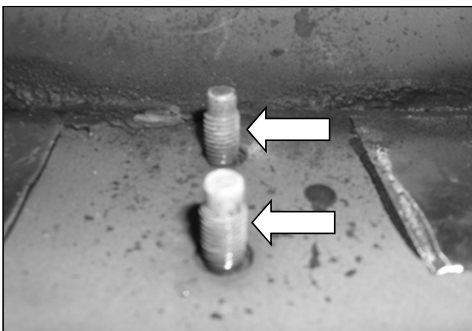

Threaded studs to install each of the brackets.


PICTURE 2.

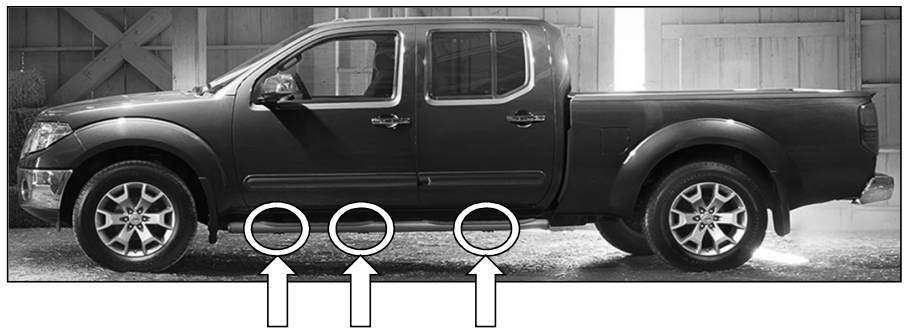

In this part, under the vehicle install the driver side front, middle and rear bracket.


- 5.- Install the brackets on threaded stud to the front, center and rear of vehicle and attach with (2) nuts M8, (2) flat and lock washer 5/16". Leave loose. **SEE PICTURE 3 & ILLUSTRATION 1.**

PICTURE 3.

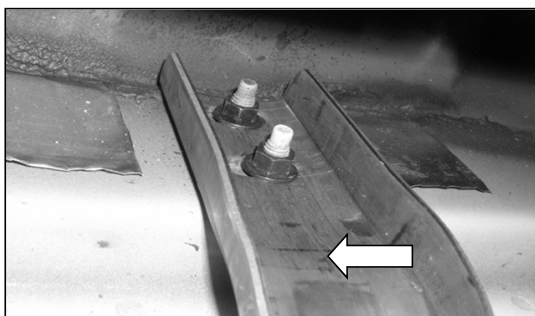

Shown the bracket installed.

ILLUSTRATION 1.

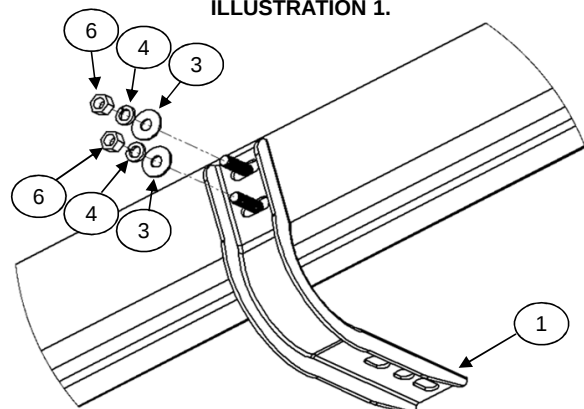

- 6.- If you acquired a 5" or 6" COMPOSITE Side bar, insert 5/16" square head bolt on rail, place on brackets and attach with: 5/16" Flat and lock washer, 5/16" hex nut. **SEE ILLUSTRATION 2.** Repeat for the opposite side. Leave loose.
- 7.- If you acquired a 4", 5" or 6" Black or Stainless Steel side bar, place on brackets and attach with: 5/16" square head bolt, 5/16" Flat and lock washer. **SEE ILLUSTRATION 3.** Repeat for the opposite side. Leave loose.
- 8.- Align the side bar and then tighten all bolts.
- 9.- Periodically check your product because it may need a re-tighten of bolts.
- 10.- Fill the warranty card and place it inside your vehicle's glove box.

ILLUSTRATION 2.


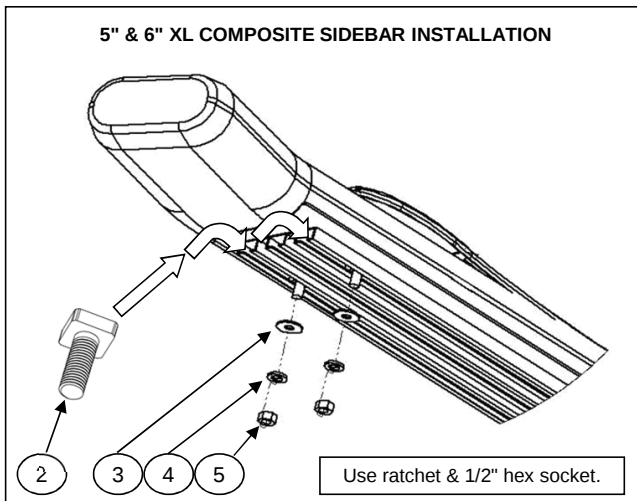



ILLUSTRATION 3.

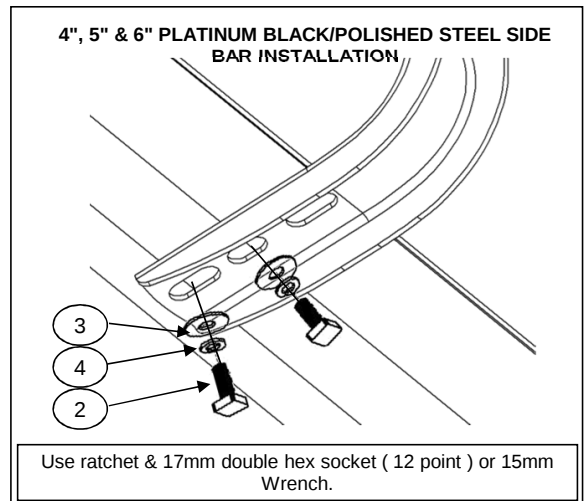

INSTALATION INSTRUCTIONS


UNIVERSAL RUNNING BOARD

Parts List			
Item	QTY	Code	Description
1	1 set		Running Board
2	6 pcs	397872AA	U (clamp) bracket

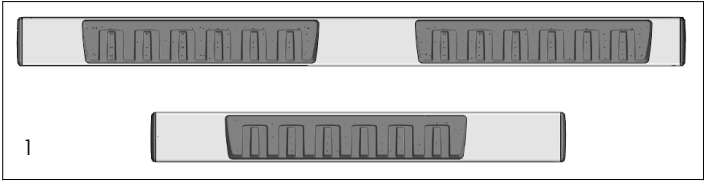

Required Tool:

- A. Ratchet w/5" extension
- B. 15mm wrench
- C. 17mm 12-point socket



1. Before beginning the installation read all instructions thoroughly and verify that all hardware is accounted for. if there are any listed parts missing, please notify your distributor immediately.
2. To maintain and care this product keep it clean and do not use abrasive cleaners or polish waxes. It is recommended to use only non-abrasive automotive wax such as pure carnauba to avoid scratches and rust.
3. Once the main brackets are installed **(sold separately)**, the approximate installation time is **15 min.**
4. Identify the outboard side of the running board prior to install. **See illustration 1.**
5. Place the U brackets inside the Running Board. Move them to align to the main brackets.
6. Place the flat and lock washers with the square head bolts. This hardware kit is included on the main brackets that are **(sold separately)**. **See illustration 2.**
7. Align the Running board and tighten the bolts using the wrench or the socket.
8. **NOTE: For some regular cabs only two U brackets are needed per side.**

Illustration 1


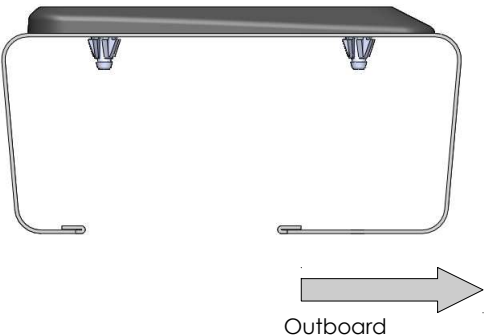



Illustration 2

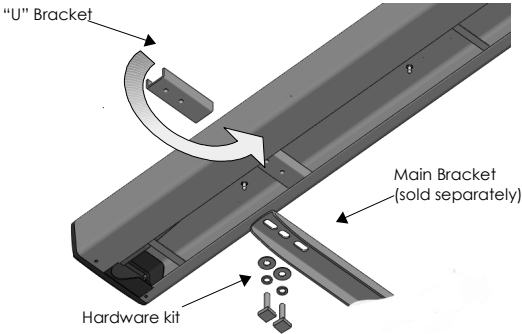

INSTRUCTIVO DE INSTALACIÓN


ESTRIBO UNIVERSAL

Lista de partes			
ítem	Cant	Código	Descripción
1	1 jgo.		Estribos
2	6 pzas	397872AA	Bracket "U"

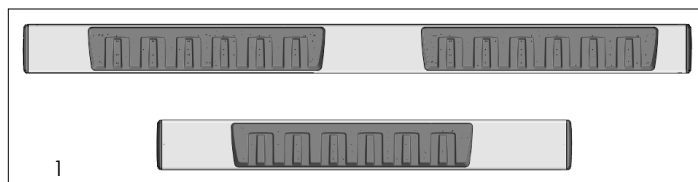

Herramienta Requerida:

- A. Matraca c/ extensión 5"
- B. Llave española 15mm
- C. Dado estriado 17mm



1. Lea y comprenda perfectamente todas las instrucciones antes de comenzar la instalación. Si alguna de las partes listadas no se encuentra, no continúe con la instalación y llame a su distribuidor inmediatamente para obtener los componentes faltantes.

2. Para el cuidado y mantenimiento de este producto se recomienda mantenerlo limpio y no utilizar ceras abrasivas con el fin de proteger el acabado.

3. Una vez instalados los brackets **(se venden por separado)**, el tiempo de instalación de este producto es de **15 min.**

4. Identifique la cara exterior del estribo, ésta es la que tiene la ceja más grande por la parte de abajo. Ver ilustración 1.

5. Coloque los brackets U dentro del Running board y desplácelos para alinearlos con el bracket principal. Ver ilustración 2.

6. Coloque rondanas planas y de presión con los tornillos cabeza cuadrada. Esta tornillería va incluida dentro de los brackets **(que se venden por separado)**. Ver ilustración 2.

7. Alineé el Running board y apriete la tornillería, usando la llave española ó el dado estriado.

NOTA: En algunos casos para cabinas regulares (estribos con una huella por lado), sólo se utilizan dos brackets U por lado.

Ilustración 1

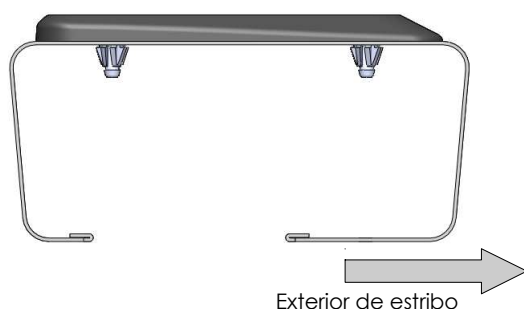


Ilustración 2

