

Instructions

Front Swaybar

N.B: This instruction sheet should be used in conjunction with the workshop manual and proper safety procedures followed.

Application - Nissan Titan
- 2004-2014


(Refer current catalogue listing)

Contents - 1x 35mm Swaybar

1. Lift vehicle evenly and safely support.
2. Proceed to remove plastic under trays from front of vehicle.
3. Remove front swaybar - start by loosening the swaybar link nuts.
Followed by removing swaybar saddles.


Note - re-use original D bushing for install of new swaybar.

4. Place link stud into new swaybar - start the nuts with hands.
5. Place original D bushing with fresh grease on swaybar and bolt up with original saddle and mounting bolts.
6. Tighten all nuts and bolts to manufacturers specifications.
7. Re-fit under trays.
8. It is suggested nuts and bolts be re-checked after 100kms travelled.

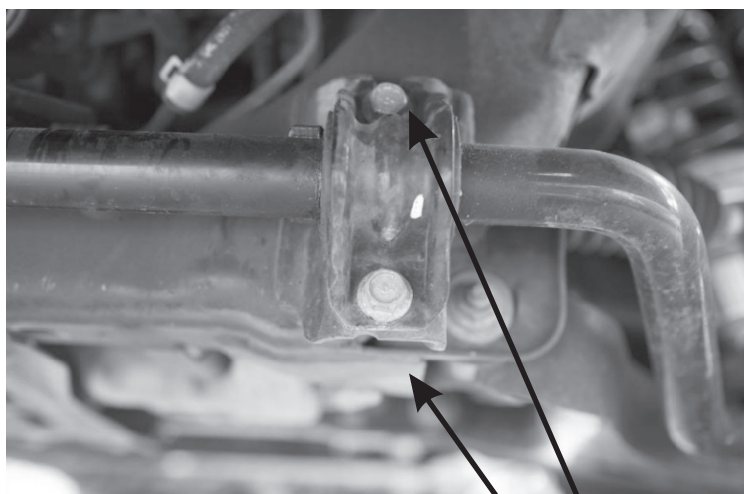

Remove saddle bolts and saddle after link nuts are loosened.

Loosen upper and lower Link nuts

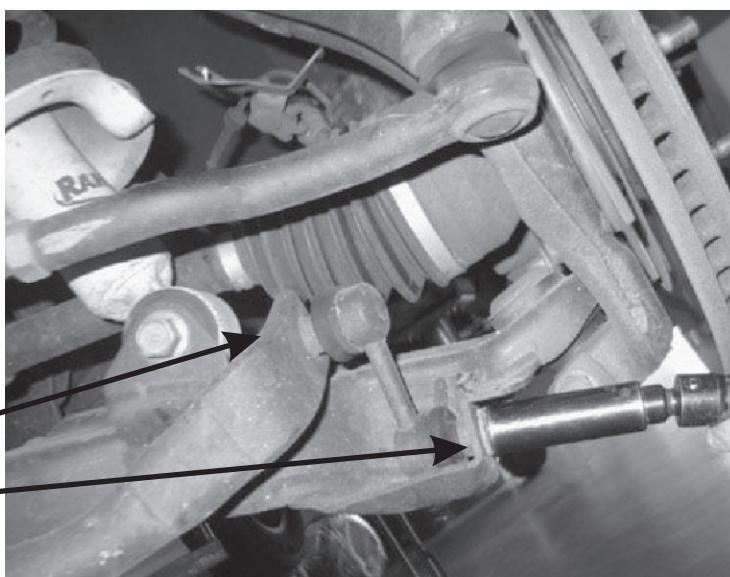

N.B: It is recommended that a licenced workshop or tradesperson carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.