

LED TAILGATE BAR - 48”

(UNIVERSAL)

INSTALLATION INSTRUCTIONS

CONTENTS

- (1) 48” LED Tailgate Bar
- (4) 3M Tape Strips
- (5) Scotchlok Connectors
- (1) 7.5A Fuse
- (2) Adhesion Promoter Pads
- (2) Alcohol Prep Pads

TOOLS REQUIRED

- 8mm Socket
- Ratchet



STEP 1

Using the provided (1) alcohol prep pad, clean the area under the tailgate on the vehicle. Once dry, use (1) adhesion promoter pad to prepare for tape adhesion.

Note: Removing the tailgate may be necessary to properly clean and install the LED tailgate bar.




STEP 2

Using (1) alcohol prep pad, clean the back side of the LED tailgate bar. Once dry, use (1) adhesion promoter pad to prepare for tape adhesion. Adhere the (4) tape strips to the LED tailgate bar.



STEP 3

Route the attached wiring behind the rear bumper. Align the LED tailgate bar to the vehicle and familiarize the fitment to the vehicle. Peel the red tape backing and adhere the LED tailgate bar to the vehicle. Apply firm pressure to ensure proper adhesion.

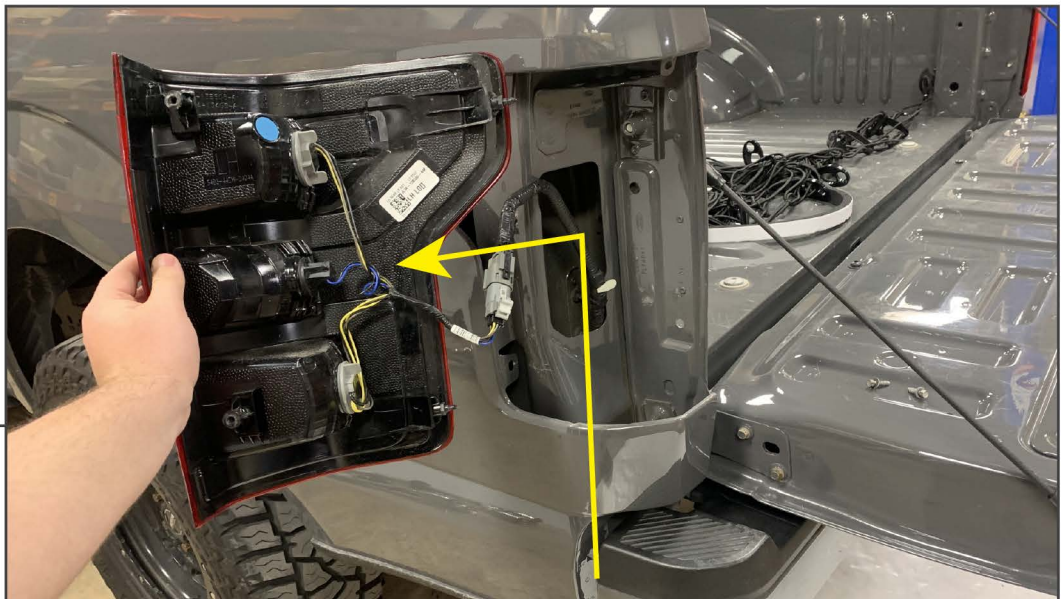

STEP 4

Remove the vehicle tail light using a suitable socket/wrench. Locate the reverse light wiring harness. Route the reverse light wire lead from the LED tailgate wiring harness to the tail light housing. Splice the reverse light wire lead to the vehicle reverse light harness.



STEP 5

Plug the LED tailgate bar connector into the vehicle 4-pin trailer wiring plug. Note: Using the provided scotchloks, the LED tailgate bar can be spliced into the trailer wiring behind the bumper.

Installation is now complete.