

RAIN DEFLECTORS - FRONT AND REAR

(2010-2023 4RUNNER)

INSTALLATION INSTRUCTIONS

CONTENTS


- (1) LH Front Deflector
- (1) RH Front Deflector
- (1) LH Rear Deflector
- (1) RH Rear Deflector

TOOLS REQUIRED

Isopropyl Alcohol Microfiber Cloth

> SKU # TR24091 Edited: 05/25/2023



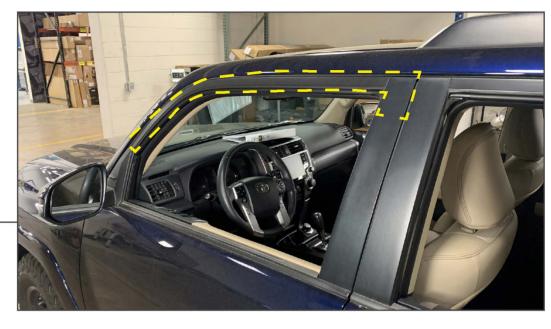

STEP 1 (FRONT)

Clean the upper portion of the vehicle door using isopropyl alcohol, and allow to fully dry. Test fit the panel to the vehicle door before peeling the red tape backing to familiarize fitment.



STEP 2 (FRONT)

Once familiar with fitment, peel the red tape backing from the window visor, and firmly press the visor into place to ensure proper adhesion.





STEP 3 (REAR)

Clean the upper portion of the vehicle door using isopropyl alcohol, and allow to fully dry. Test fit the panel to the vehicle door before peeling the red tape backing to familiarize fitment.



STEP 4 (REAR)

Once familiar with fitment, peel the red tape backing from the window visor, and firmly press the visor into place to ensure proper adhesion.

Installation is now complete.