
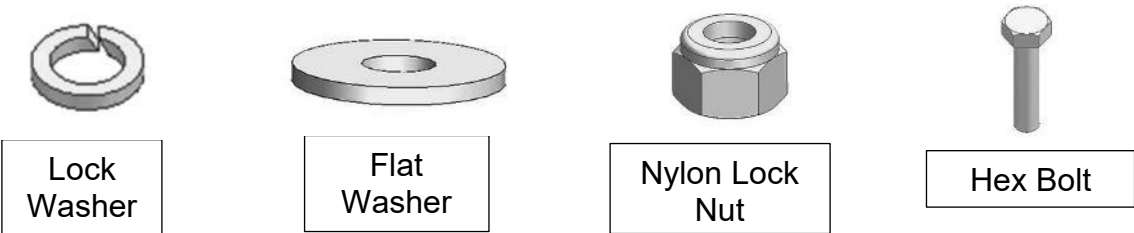


INSTALLATION INSTRUCTIONS


PARTS LIST:

Qty	Description	Qty	Description
1	Driver/left Running Board	1	Passenger/right Rear Mounting Bracket
1	Passenger/right Running Board	12	10-1.5mm x 30mm Hex Bolt
1	Driver/left Front Mounting Bracket	12	8-1.25mm x 30mm Hex Bolts
1	Driver/left Center Mounting Bracket	24	10mm x 27mm x 3mm Flat Washers
1	Driver/left Rear Mounting Bracket	12	8mm x 24mm x 2mm Flat Washers
1	Passenger/right Front Mounting Bracket	12	8mm Lock Washers
1	Passenger/right Center Mounting Bracket	12	10mm Nylon Lock Nuts

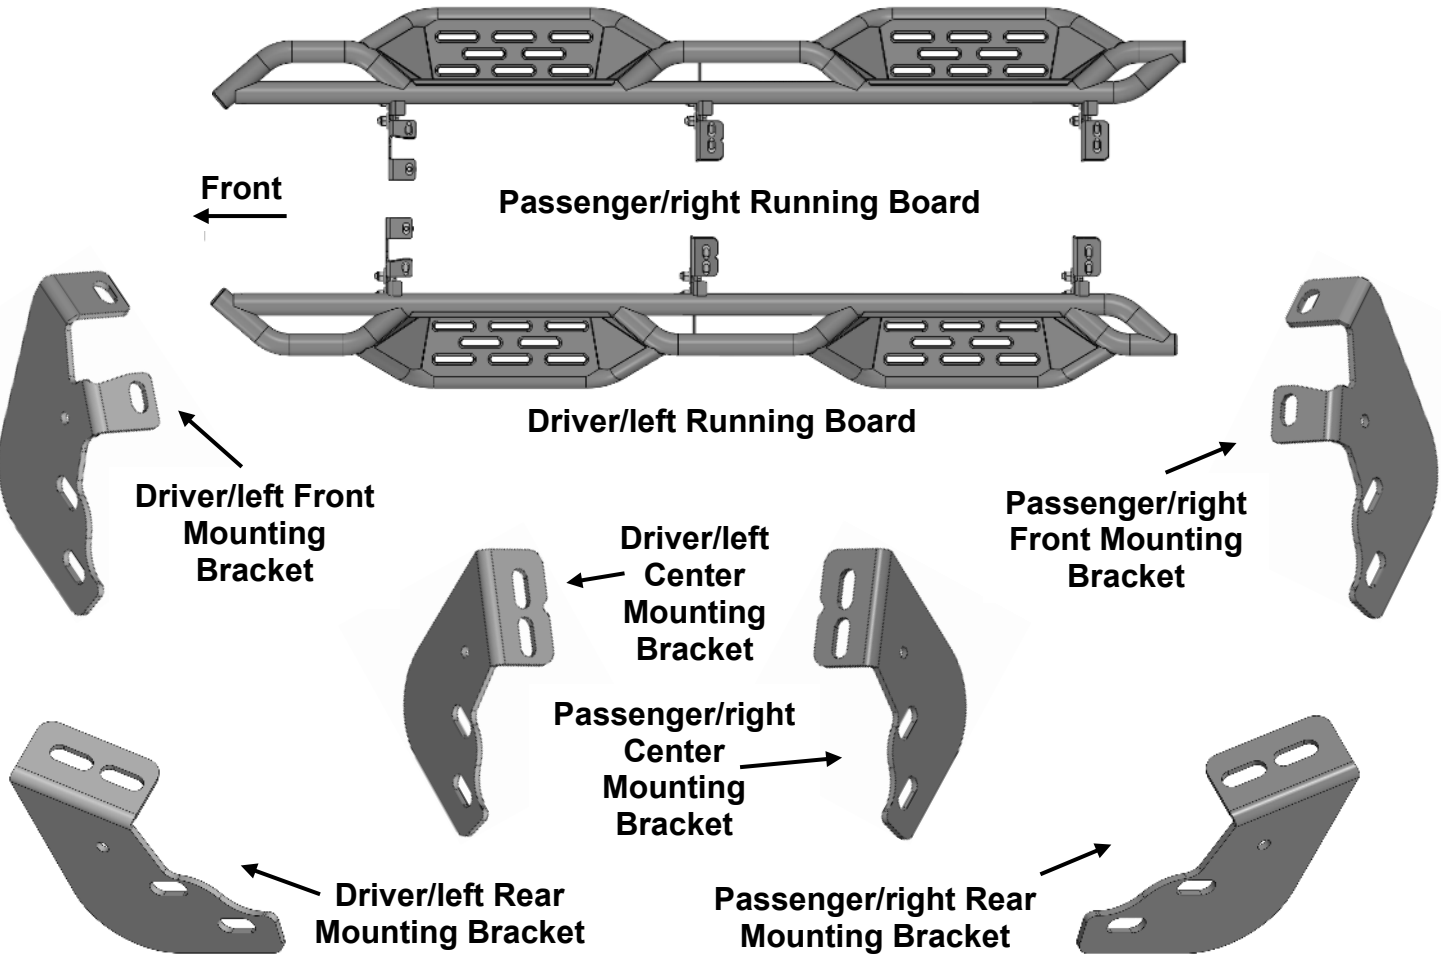


TOOLS REQUIRED**Ratchet****13mm Socket
15mm Socket****Extensions****Wrench****1**

Follow (Fig 1 – 5) to install the Mounting Brackets to the vehicle. Driver/left installation depicted, repeat for the Passenger/right side when completed. Do not fully tighten at this point.

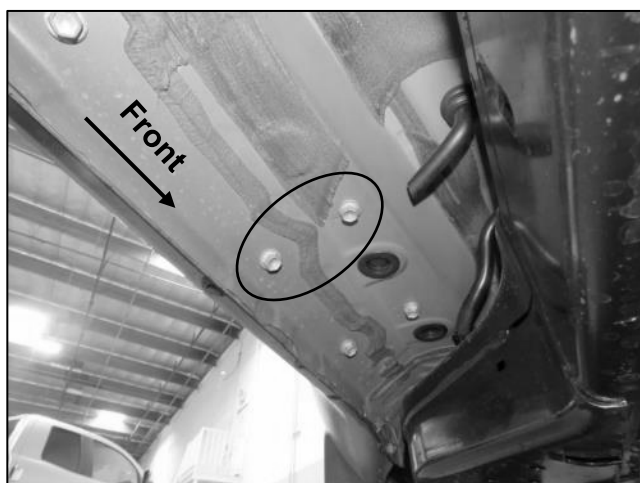


(Fig 1) Locate the front mounting location circled and remove the OEM 8mm bolts.

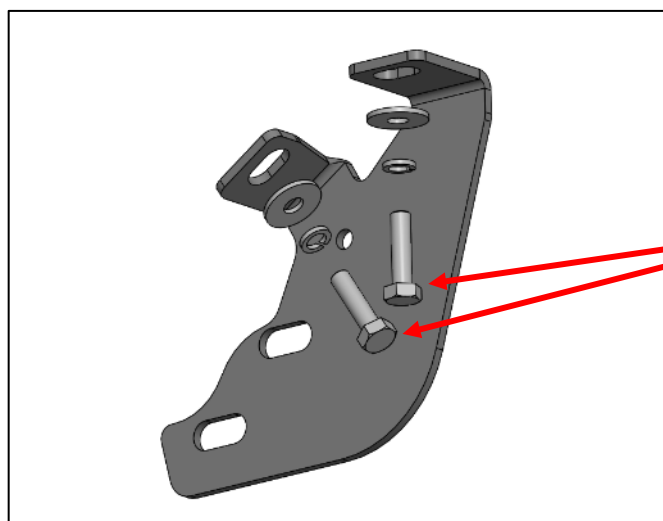

**(2) 8mm Hex Bolts
(2) 8mm Lock Washers
(2) 8mm Flat Washers**


(Fig 2) Install the Front Mounting Bracket as shown.

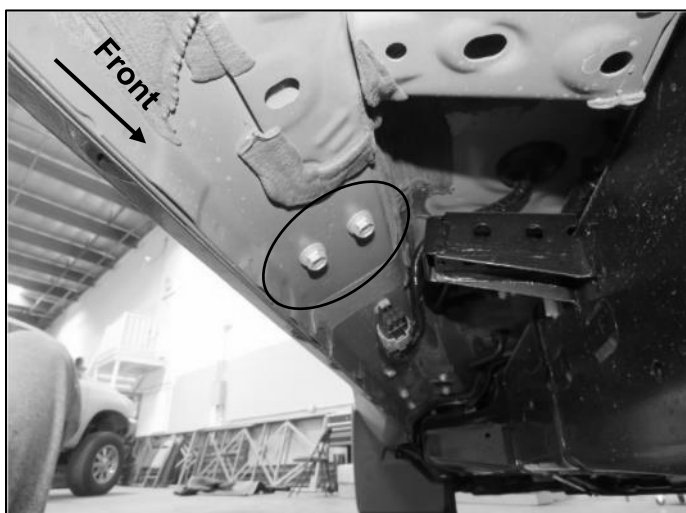

(Fig 3) Locate the center mounting points circled and remove the OEM 8mm bolts.




(Fig 4) Locate the rear mounting points circled and remove the OEM 8mm bolts.

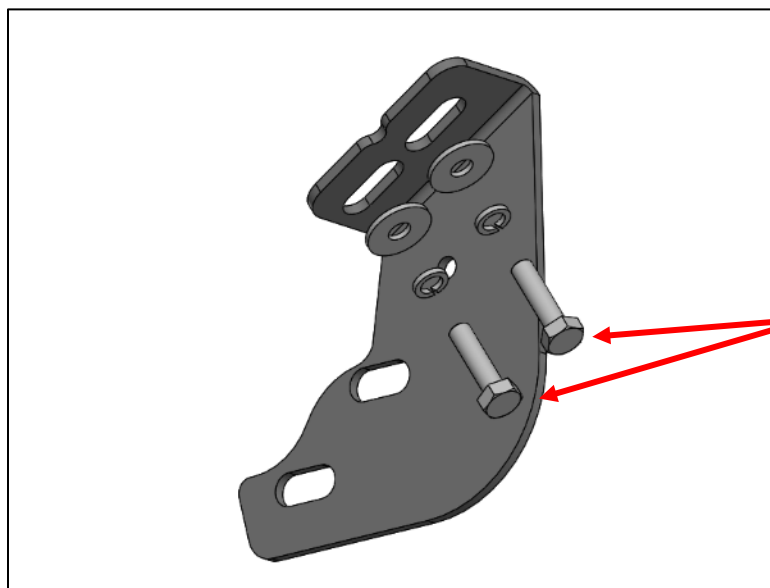

(Fig 5) Install the Center/Rear Mounting Brackets as shown.

- 2** Follow (Fig 6) to install the NB1 Running Board to the Mounting Brackets.

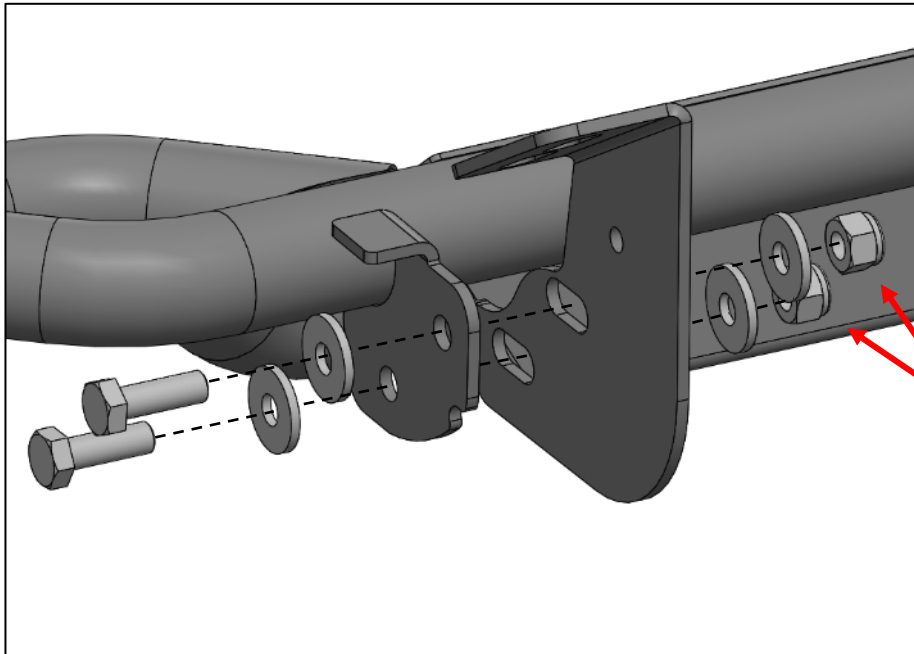

(2) 8mm Hex Bolts
(4) 8mm Flat Washers
(2) 8mm Nylon Lock Nut

(Fig 7) Align the NB1 Running Board to the Mounting Brackets and install as shown.

- 3** Installation is complete. Adjust the position of the NB1 Running Board to the desired position, then tighten all hardware. Perform periodic inspections to the installation to ensure that all hardware is secure and tight.



Installation is Completed