


PARTS LIST: TT1035 TT1037

1	Driver Sidebar	1	Driver/Left Rear Mounting Bracket
1	Passenger Sidebar	1	Passenger/Right Rear Mounting Bracket
1	Driver/Left Front Mounting Bracket	24	8-1.25mm x 30mm Hex Bolts
1	Passenger/Right Front Mounting Bracket	24	8mm x 24mm OD x 2mm Flat Washers
1	Driver/Left Middle Mounting Bracket	24	8mm Lock Washers
1	Passenger/Right Middle Mounting Bracket		

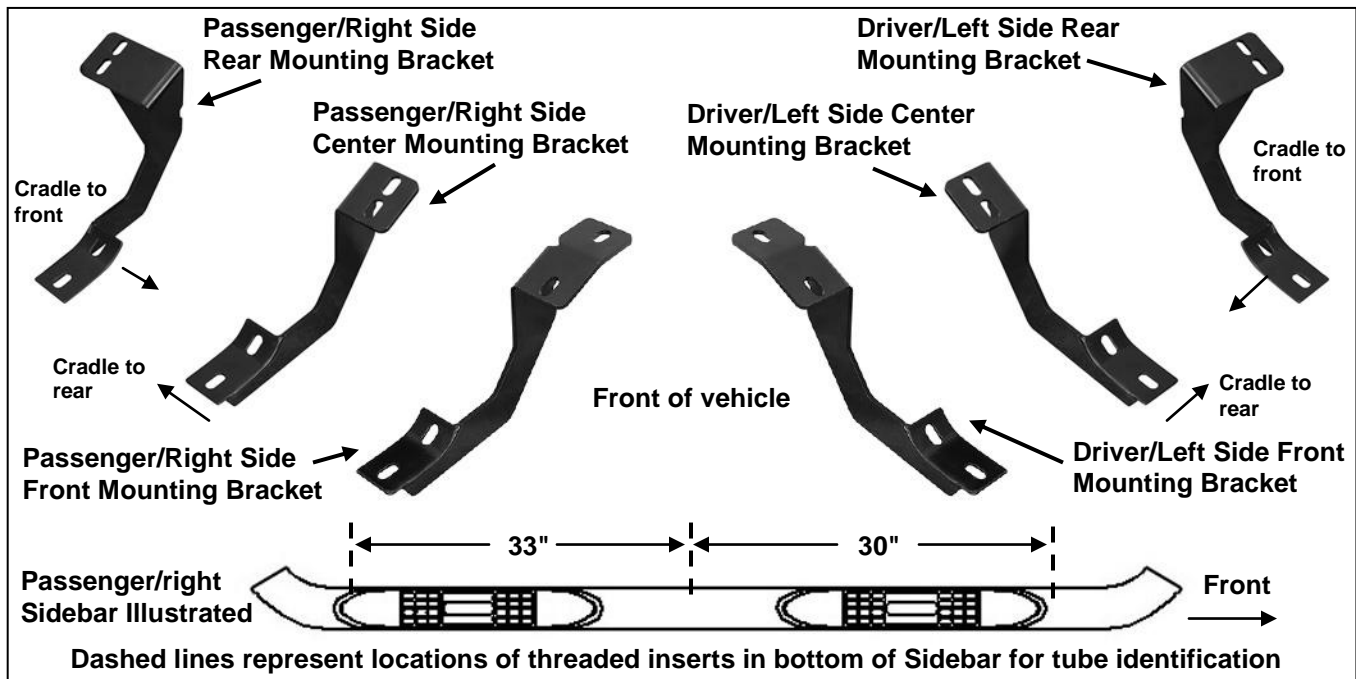

PROCEDURE:

1. REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY. USE ILLUSTRATION TO PROPERLY IDENTIFY BRACKETS AND SIDEBARS.
2. Starting on the passenger side front of the vehicle, use a flat screw driver to remove the plastic plugs covering the threaded holes in the body panel, (**Figure 1**). Select the passenger side front Mounting Bracket. Bolt the Bracket it to the vehicle with the included (2) 8mm Hex Bolts, (2) 8mm Lock Washers and (2) 8mm Flat Washers, (**Figure 2**). Do not tighten hardware at this time.
3. Repeat **Step 2** for center and rear Mounting Bracket installation, (**Figures 3 & 4**).
4. **IMPORTANT:** Use the illustration on this page to identify the Sidebars before installation.
5. Verify that the Brackets are in the correct locations as illustrated above. Carefully place the passenger Sidebar onto the Brackets. Align the inserts in the bottom of the Sidebar with the slots in the Mounting Brackets. Attach the Sidebar to the Mounting Brackets with the included (6) 8mm Hex Bolts, (6) 8mm Lock Washers and (6) 8mm Flat Washers, (**Figures 5 & 6**). Do not tighten hardware.
6. Level and adjust the Sidebar properly and tighten all hardware.
7. Repeat **Steps 2—6** for driver Sidebar installation.
8. Do periodic inspections to the installation to make sure that all hardware is secure and tight.


To protect your investment, wax this product after installing. Regular waxing is recommended to add a protective layer over the finish. Do not use any type of polish or wax that may contain abrasives that could damage the finish.

For stainless steel: Aluminum polish may be used to polish small scratches and scuffs on the finish. Mild soap may be used also to clean the Sidebar.

For gloss black finishes: Mild soap may be used to clean the Sidebar.


Passenger Side Installation Pictured

Remove plastic plugs or
factory hex bolts (if equipped)

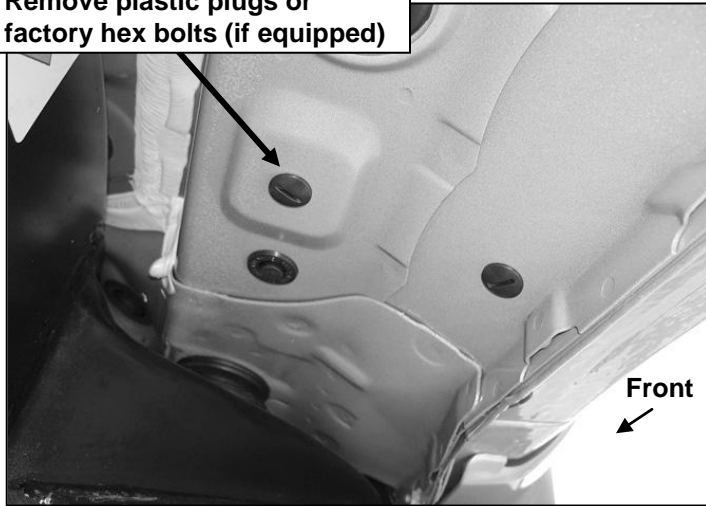


(Fig 1) Passenger/right side front mounting location

(2) 8mm Hex Bolts
(2) 8mm Flat Washers
(2) 8mm Lock Washers

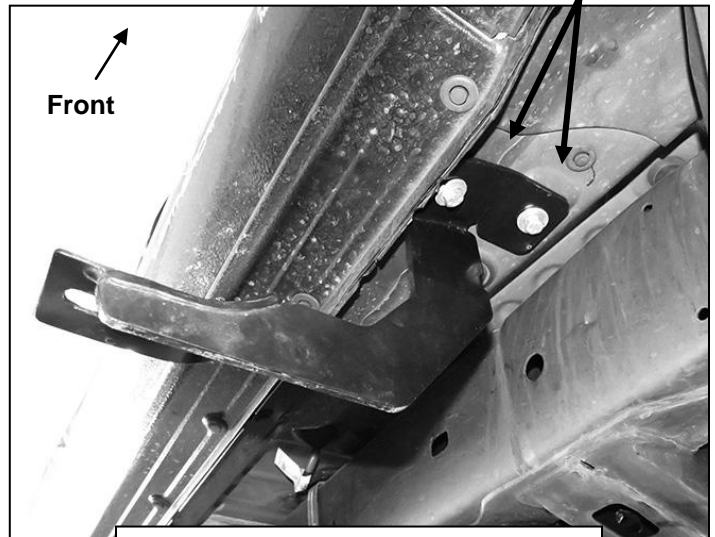


(Fig 2) Passenger side front Bracket

Front

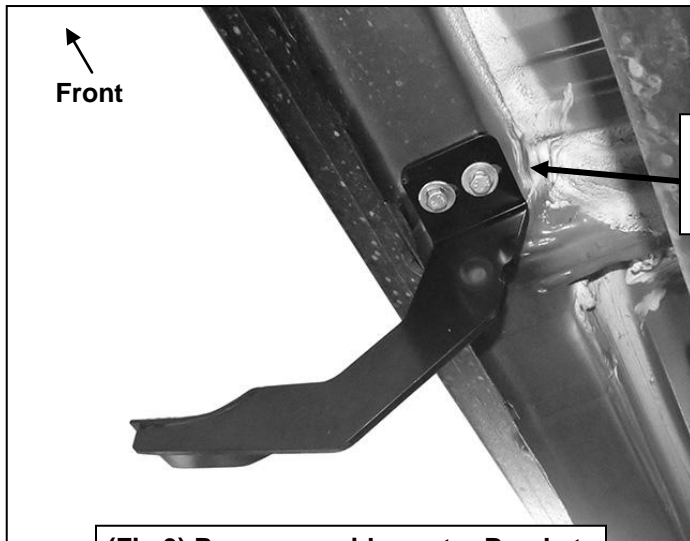


(Fig 3) Passenger side center Bracket

(2) 8mm Hex Bolts
(2) 8mm Flat Washers
(2) 8mm Lock Washers

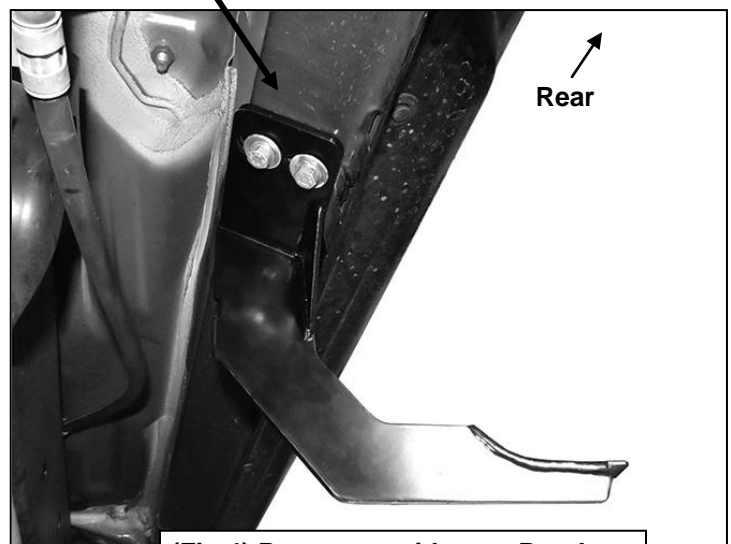


(Fig 4) Passenger side rear Bracket

Passenger Side Installation Pictured

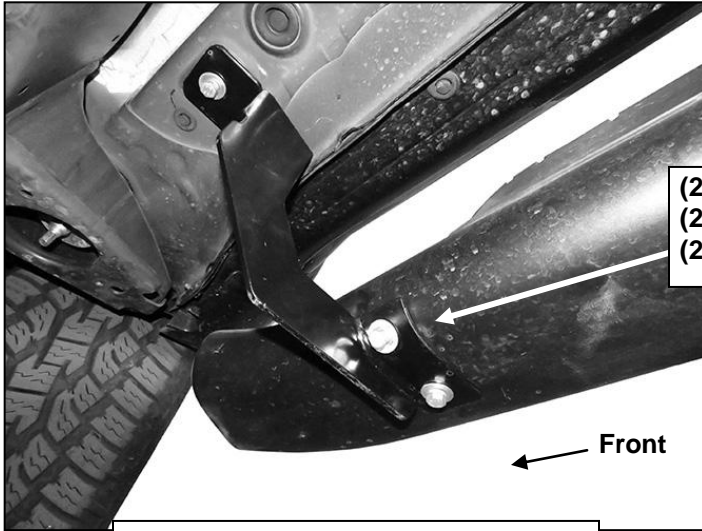

- (2) 8mm Hex Bolts
- (2) 8mm Flat Washers
- (2) 8mm Lock Washers

(Fig 5) Passenger side front Bracket

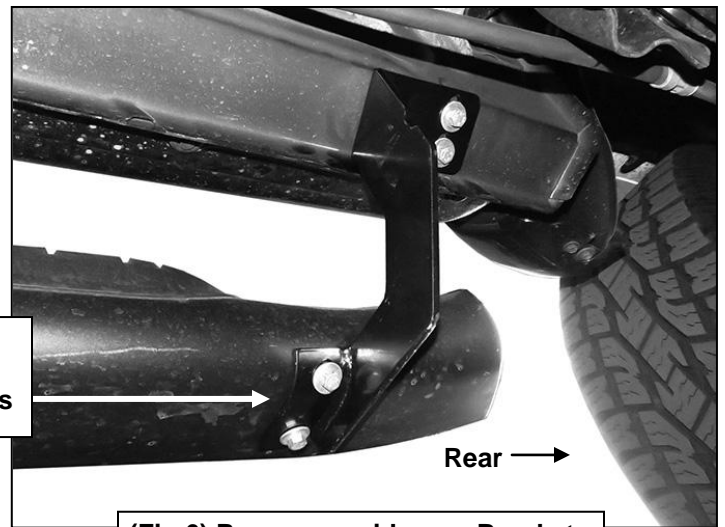

- (2) 8mm Hex Bolts
- (2) 8mm Flat Washers
- (2) 8mm Lock Washers

(Fig 6) Passenger side rear Bracket



Complete Installation