



LED FOG LIGHTS WITH DRL

(2012-2016 TACOMA)

INSTALLATION INSTRUCTIONS

CONTENTS

- (1) Pair of Fog Lights
- (1) DRL Harness
- (2) DRL Modules
- (6) Fog Light Connectors
- (4) Zip Ties
- (4) ScotchLok Connectors


TOOLS REQUIRED

- Plastic Panel Removal Tool
- 10mm Socket
- Ratchet
- Phillips Screwdriver



STEP 1

Remove the fog light outer bezel from the front bumper. Use a plastic panel removal tool to release the clips securing the bezel to the bumper.

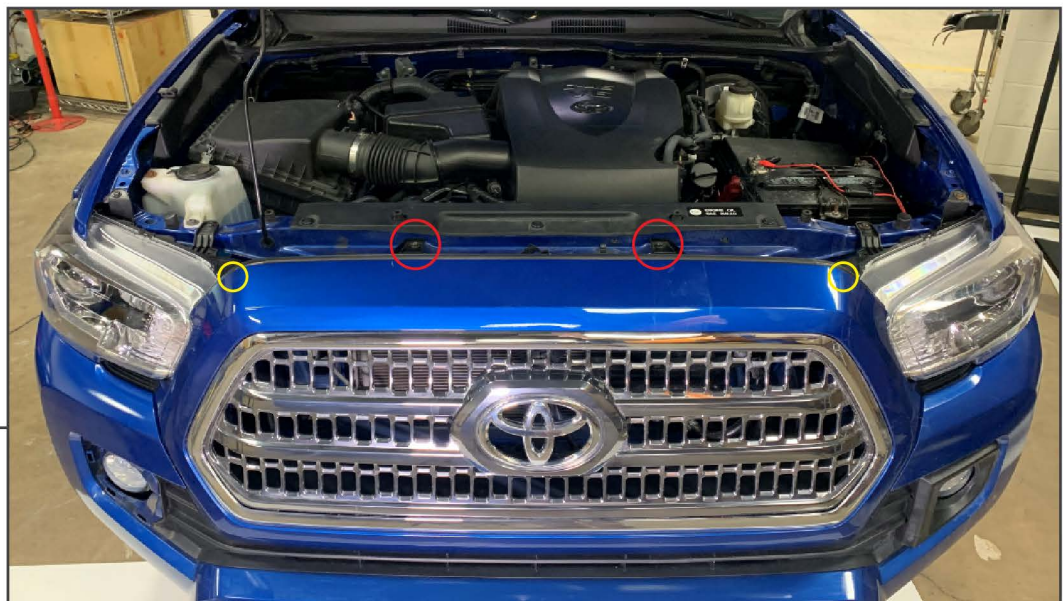

STEP 2

Remove (2) 10mm bolts and (2) push clips from the radiator support. Lift and remove the grille from the vehicle. This allows access to the back side of the fog lights.



STEP 3

Remove the (1) Phillips screw from behind the fog light to release the fog light from the bumper.



STEP 4

Unplug the fog light from the vehicle by pressing the connector in while pulling away. Take note of the light bulb size (H8, H11, or 9005/9006). Remove the fog light from the vehicle.

STEP 5



Using the appropriate fog light connector and DRL module, insert the (2) wires into the connector following the below diagram. Take note on which way the connector installs to ensure proper wire lead installation. Ensure the wire leads click into the connector and the gaskets are seated.

<u>Vehicle Harness</u>	-	<u>DRL Module</u>
Green	-	Red
White/Black	-	Black

STEP 6



Neatly route the DRL harness across the radiator support, avoiding any vehicle components. Plug in the DRL harness and the vehicle fog light harness into the DRL module.


STEP 7



Splice the DRL harness into the vehicle's wiring following the diagram below.

<u>DRL Harness</u>	-	<u>Vehicle Harness</u>
Red	-	Key On Power
Yellow	-	Red [LH Low Beam Circuit]

STEP 8

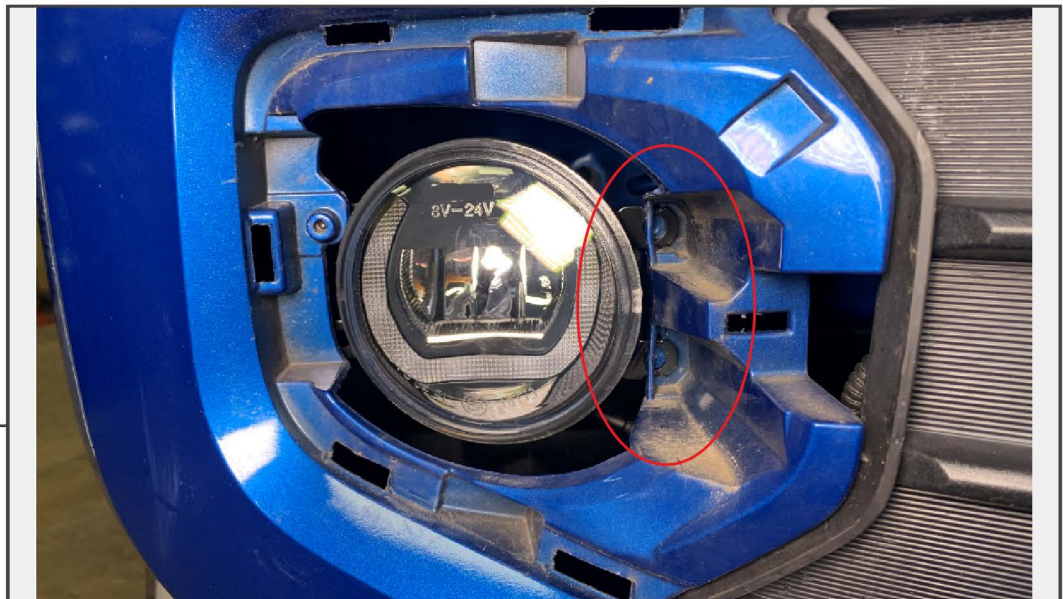

Re-install the fog lights into the vehicle re-using original hardware. Be sure the fog light is seated in between the bumper layers.



STEP 9

Re-assemble the vehicle following steps 1-2 in reverse order.

Installation is now complete.