



# MUD FLAPS

(2005-2015 TACOMA)

---

## INSTALLATION INSTRUCTIONS

### CONTENTS

---

- (1) Pair of Front Mud Guards
- (1) Pair of Rear Mud Guards
- (4) Phillips Screws
- (4) Screw Clips

### TOOLS REQUIRED

---

- 10mm Socket
- Phillips Screwdriver

SKU # TT13256

**STEP 1  
(FRONT)**




Remove (3) 10mm bolts from the inner fender liner.

**S TEP 2**



Align the mud flap to the vehicle. Install the (3) 10mm bolts through the mud flap and back into the inner fender liner.

Note: Use additional Phillips screws and screw clips as reinforcement if necessary.

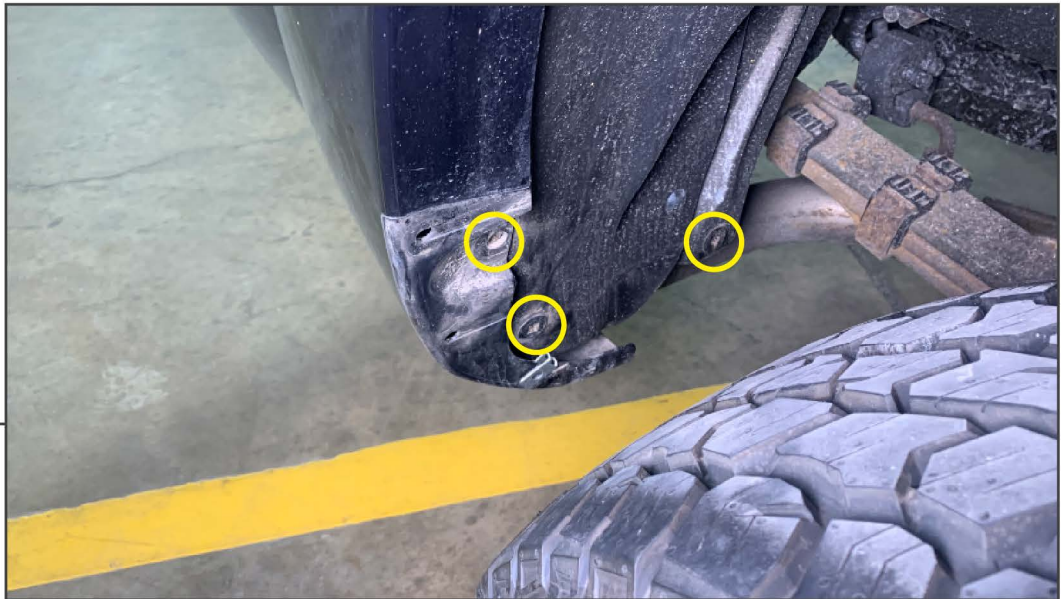

**STEP 3  
(REAR)**

Remove (3) 10mm bolts from the inner fender liner.



**STEP 4**

Align the mud flap to the vehicle. Install the (3) 10mm bolts through the mud flap and back into the inner fender liner.

Note: Use additional Phillips screws and screw clips as reinforcement if necessary.

Repeat steps 1-4 to the opposite side of the vehicle. Installation is now complete.