

LED TAIL LIGHTS

(2016-2023 TACOMA) 

INSTALLATION INSTRUCTIONS

CONTENTS

(1) LH Tail Light
(1) RH Tail Light

TOOLS REQUIRED


10mm Socket
Ratchet

STEP 1




Lower the vehicle tail gate. Remove (2) 10mm bolts from the inside of the tail light housing.

STEP 2

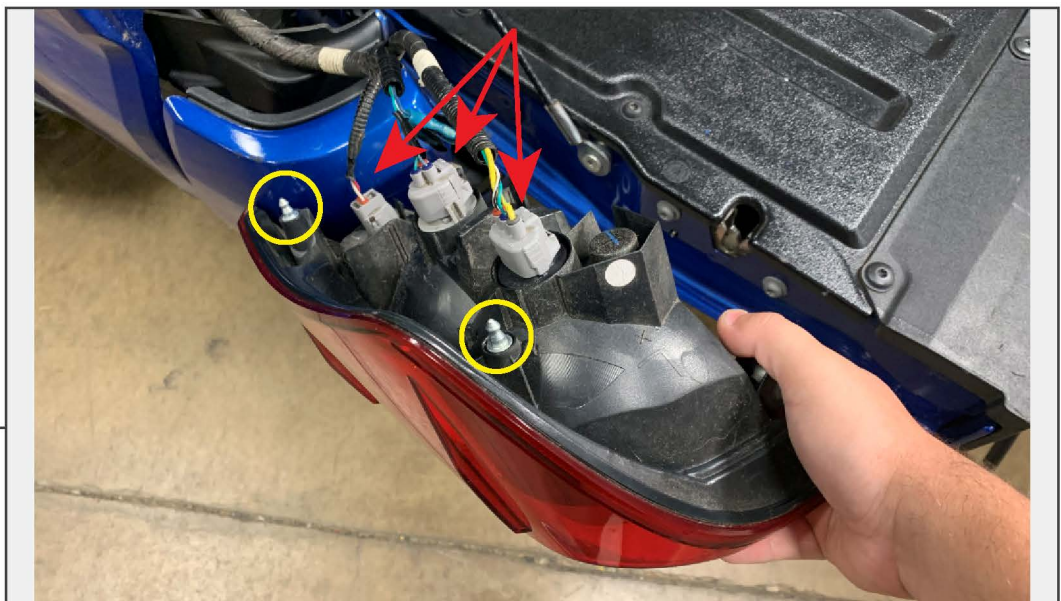

Firmly pull the tail light away from the vehicle to dislodge the (2) mounting studs. Disconnect (3) wiring harnesses from the tail light assembly.

STEP 3

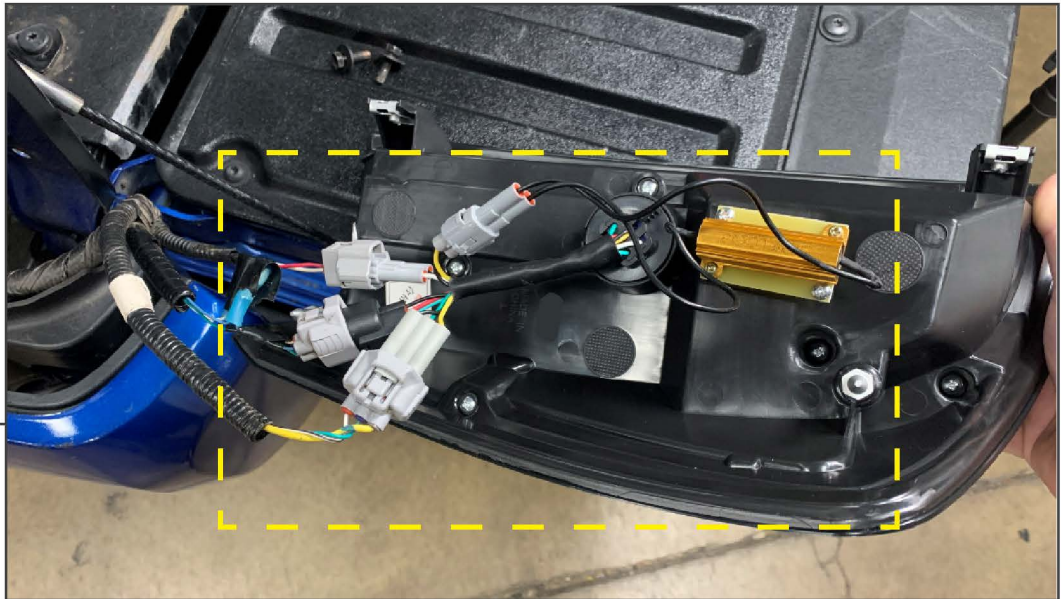

Plug in the (3) vehicle harnesses into each corresponding harness on the new tail light. Plug the external resistor on the new tail light into the corresponding tail light harness.

STEP 4



Install the new tail light into the vehicle reusing (2) 10mm bolts. Tighten until secure.



STEP 5

Repeat steps 1-4 to the opposite side of the vehicle.

Installation is now complete.