



LED THIRD BRAKE LIGHT

(2016-2023 TACOMA) *2021-2022*

INSTALLATION INSTRUCTIONS

CONTENTS

- (1) Third Brake Light
- (2) 8mm Nuts

TOOLS REQUIRED

- 8mm, 10mm Deep Sockets
- 3" Socket Extension
- Ratchet
- Plastic Pry Tool
- Masking Tape
- Flathead Screwdriver
- Isopropyl Alcohol
- Microfiber Cloth



STEP 1

From inside the vehicle, remove the plastic cover from the rear hook using a flat head screwdriver at the designated cutout.

Repeat this step for the opposite side rear hook.



STEP 2

Using a flathead screwdriver, pry inwards on the metal clip prongs to remove the hook from the vehicle ceiling. With the hook removed, press inwards on the metal clip and pull the metal clip from the ceiling.

Repeat this procedure for the opposite side rear hook.



STEP 3

Open the rear sliding window on the vehicle. Locate the headliner board and push downwards to reveal the vehicle roof.

Note: If vehicle does not have a sliding rear window, installation may require additional interior panel removal.



STEP 4


While pushing downwards on the headliner, route a 10mm deep socket and 3" extension towards each of the third brake light mounting studs. Use the new part to approximate location. Remove the (2) nuts. If the hardware drops from the socket, the hardware will be accessible after light removal.

Note: The headliner will require being pushed down using moderate pressure, the headliner will form back to original shape during the re-installation of the interior panels.




STEP 5

Place masking tape in the designated area.

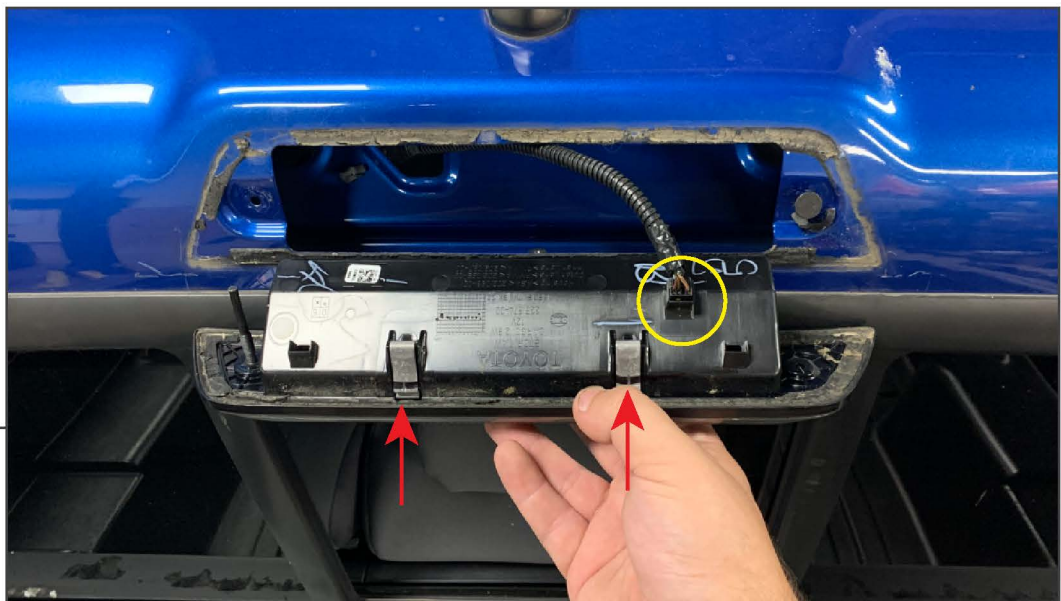


STEP 6

Using a plastic pry tool, dislodge the (2) metal retaining clips from the top of the third brake light. Use the new part to approximate location. Pull the third brake light from the vehicle roof. Unplug the electrical connector by depressing the plastic tab on the connector.

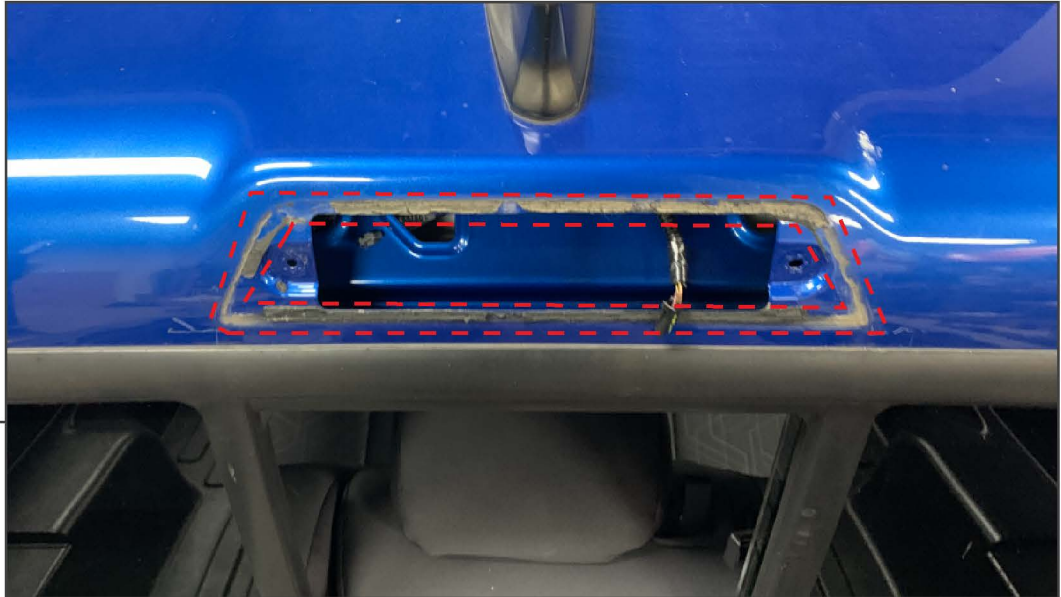

STEP 7


Using isopropyl alcohol and a microfiber cloth, clean the vehicle of any remaining gasket material.

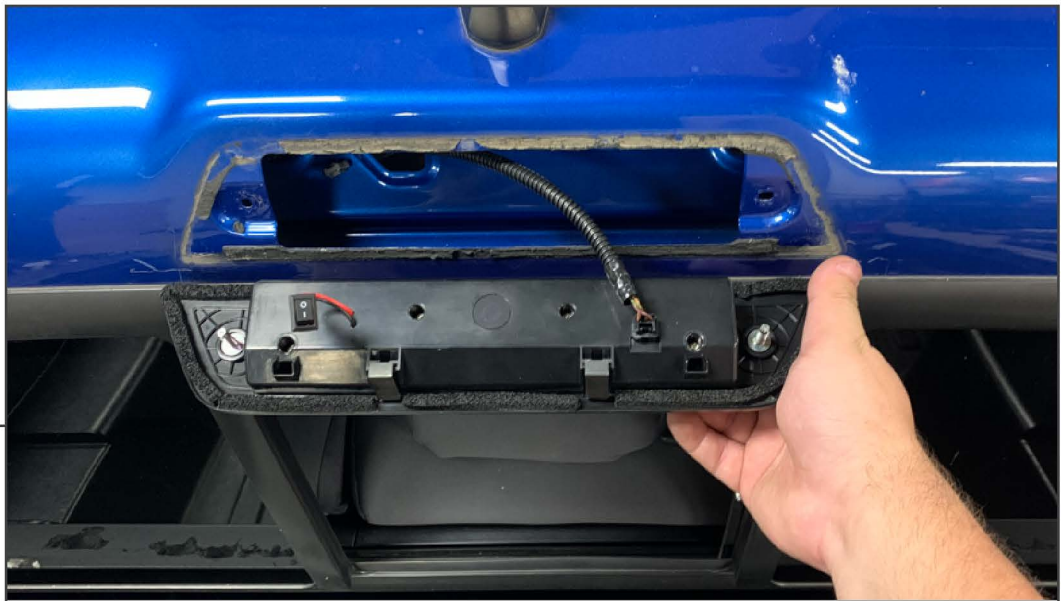

STEP 8

Plug the LED third brake light into the vehicle. Test functionality. Toggle the strobe switch to the desired setting.

O : 5x Strobe to Solid Brake Light
- : Solid Brake Light

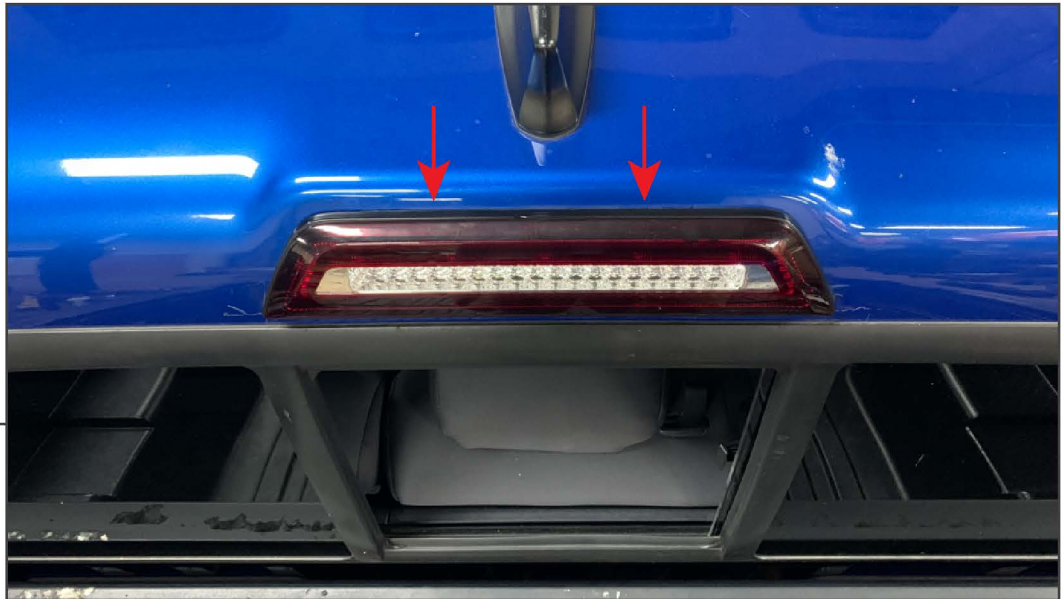

STEP 9

Place the LED third brake light into the vehicle, ensure the (2) metal tabs secure into the vehicle. Follow steps 1-4 in reverse order to re-assemble the vehicle.

Note: It is highly recommended to ensure the (2) 8mm nuts are secure in the socket before attempting installation into the LED third brake light to ensure hardware is not dropped.



STEP 10

Installation is now complete.