


# REDROCK<sup>4X4</sup>

## Door Molle Panel

**SKU: TT22274**  
**2005-2015**  
**TACOMA**

### (1) Contents:

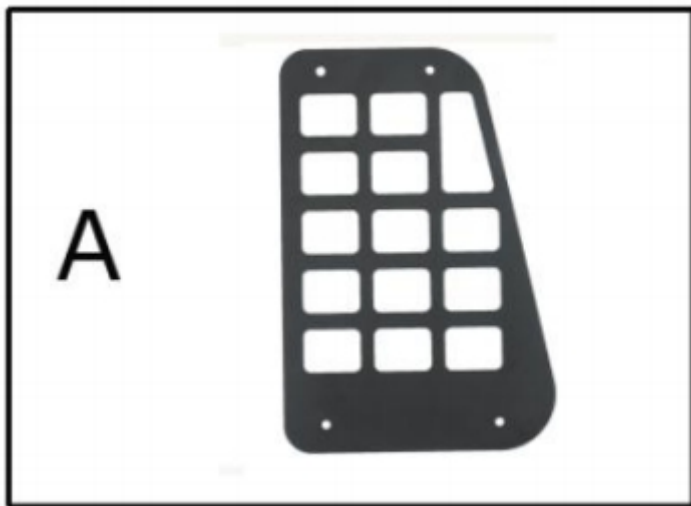

### (2) Tools required:

- a. 1/8 " drill bit;
- b. Phillips Screwdriver;



### (3) Installation time:

About 30 minutes, 1-2 persons needed. Installation time is different according to your mechanical skill level.


(PLEASE VERIFY ALL PARTS ARE PRESENT AND READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION!)

### (4) Installation instruction:

**Step 1:** Line up the panel so its flush with the door panel. Mark the screw holes with a marker.



**Step 2:** Use a 1/8 " drill bit to drill the 4 holes into the plastic. Install the Part "A" with the Part "H".

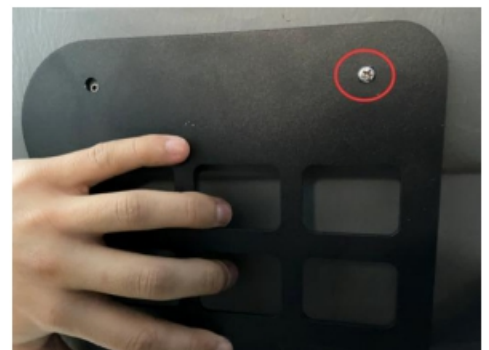

**Step 3:** The installation is now complete.

