


REDROCK^{4X4}

Flashlight Mount

SKU: TT22276

(1) Contents:

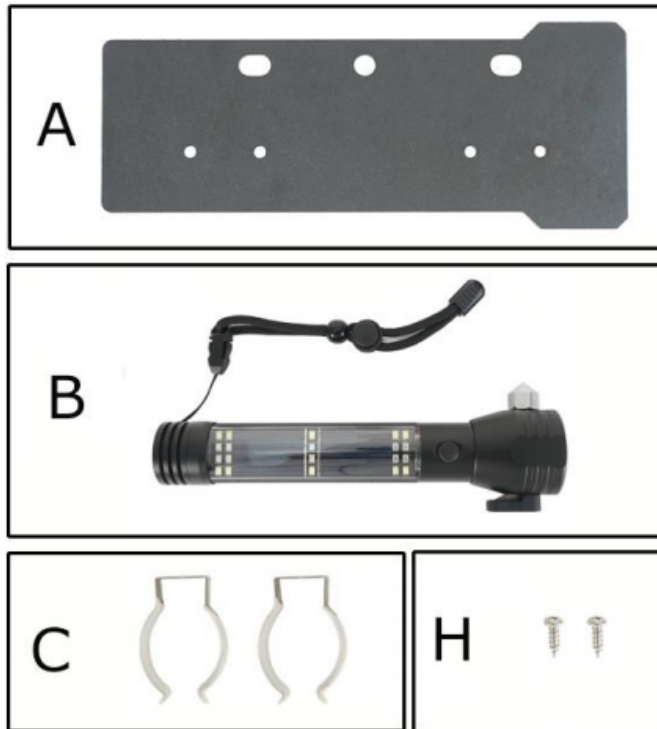

(2) Tools Required:

- a. 1/8" Drill Bit & Power Drill
- b. Phillips Screwdriver



(3) Installation time:

About 40 minutes, 1-2 people might be needed for install. Install time may differ according to your mechanical skill level.

(PLEASE VERIFY ALL PARTS ARE PRESENT AND READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION!)

(4) Installation instruction:

Step 1: Line up the panel so its flush with the center console. Make the screw holes with a marker.



Step 2: Use a 1/8" drill bit to drill 2 holes into center console. Install Part "A" & "B" with Part "H" & "C".





Step 3: The installation is now complete.

