



REDROCK^{4X4}

Hood Struts Lift Kit 2016-2021 TACOMA

SKU: TT22279

(1) Contents:

Qty	Part Name	Size(mm)	Qty	Part Name	Size(mm)
1	Hood Struts Lift Kit		K×2	Flat Washer	M8*20
H×2	Button Head Socket Cap Bolts Screws	M8*16	L×10	Flat Washer	M6*20
I×10	Button Head Socket Cap Bolts Screws	M6*14	M×4	Flange Hex Lock Nuts	M6
J×4	Rivet Nut	M6	N×2	Hex Nuts	M10

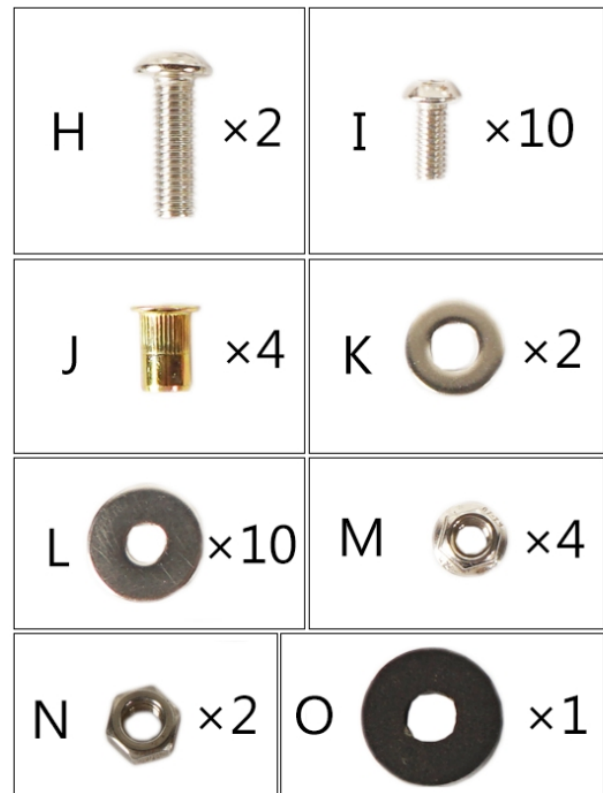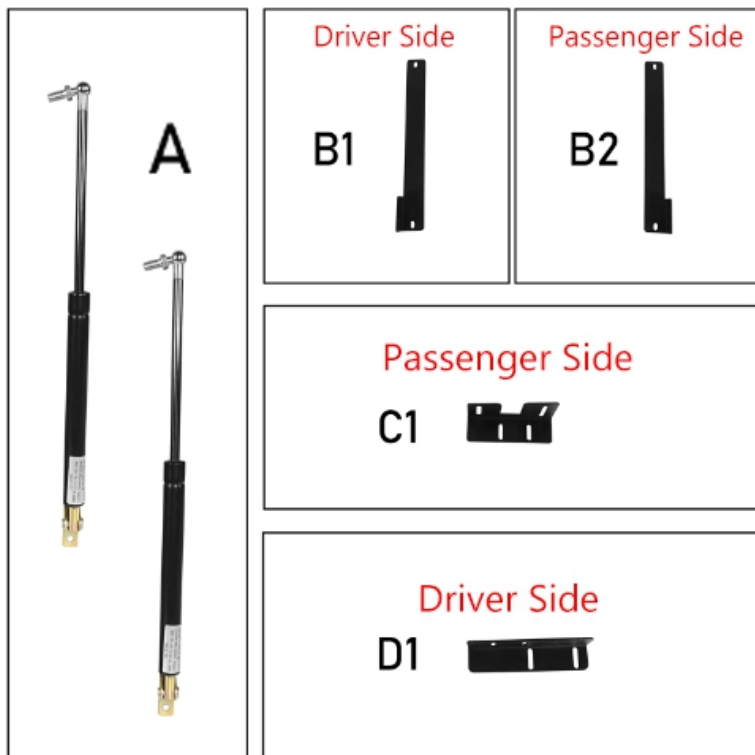

(2) Tools required:

- a. Drive Socket Ratchet Wrench;
- b. 4mm Torx Bit Socket;
- c. 17mm Shallow Socket;
- d. Pneumatic Riveting Nut Gun with 6mm Nut Chuck;
- e. Drill & 9mm drill bit;



(3) Installation time:


About 40 minutes, 1-2 people may be needed. Installation time may differ according to your mechanical skill level.

(PLEASE VERIFY ALL PARTS ARE PRESENT AND READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION!)

(4) Installation instruction:

Step 1:

Before install the Hood Struts Lift Kit, Please distinguish these parts.

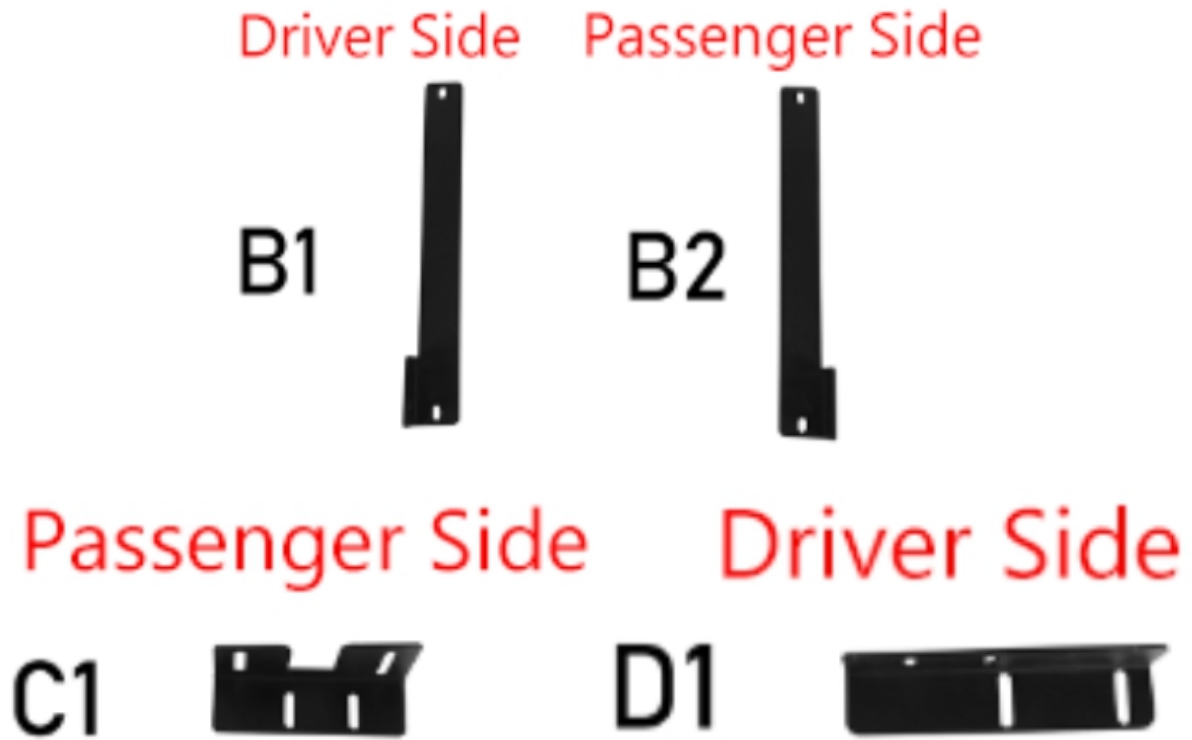

Passenger Side Installation

Step 2:

Assemble the Part "A" & Part "B2" with the Part "I" , "L" , "M". Install into the vehicle with the Part "I" , "L".






Step 3:

Use the Pneumatic Riveting Nut Gun with 6mm Nut Chuck to install the two rivet nut. Install the Part "B2" into your vehicle. Assemble the Part "A" & the Part "B2" with the Part "N"



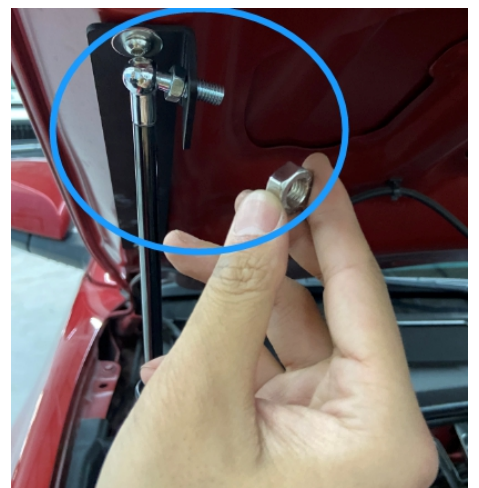

Step 4:


Repeat the installation steps into the driver side.

Notes:

- *Before install the Part "B1", You need use a drill with 9mm drill bit to enlarge this hole so that you can install the Rivet Nut.*



- *Install the Part "D1" into the driver side not only need to place the Part "O" but also use the Part "H" bolts.*

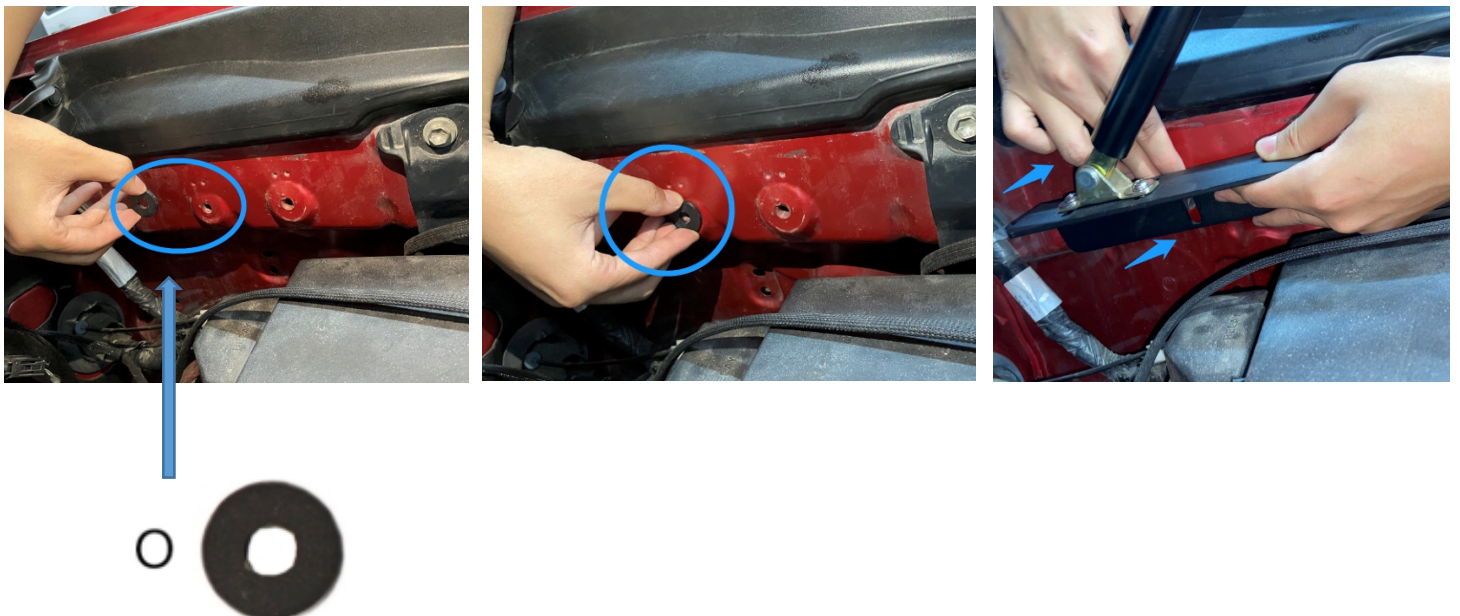

Step 5:

The installation is complete.



Attention:

1.The product parts in this instruction may differ slightly from the actual product contents but generally does not affect the installation of the product.

2.Please feel free to contact your distributor if you have any kind of question about your purchase.