
REDROCK

Overhead Molle Panel

TT22870 2005-2015 TACOMA

(1) Contents:

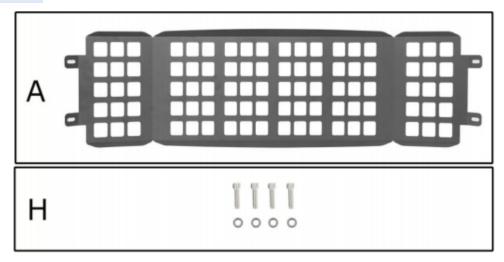

(2) Tools required:

a. 5mm Allen Key/Socket;




(3) Installation time:

About 40 minutes, 1-2 people needed. Install time may differ according to your mechanical skill level.

(PLEASE VERIFY ALL PARTS ARE PRESENT AND READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION!)

(4) Installation instruction:


Step 1: Remove both rear seat grab handle with a 5mm Allen wrench.

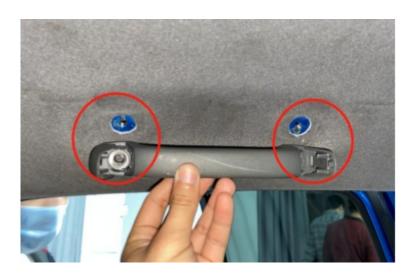

Step 2: Install the Part "A" with the Part "H".





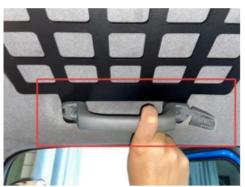









Step 3 : The installation is now complete.

