



MOLDED MUD GUARDS

(2016-2021 TACOMA - WITH OEM FENDER FLARES)

INSTALLATION INSTRUCTIONS

CONTENTS

- (1) LH Front Mud Guard
- (1) RH Front Mud Guard
- (1) LH Rear Mud Guard
- (1) RH Rear Mud Guard
- (8) Phillips Screws
- (8) Flat Washers

TOOLS REQUIRED

- 10mm Socket
- Ratchet
- Phillips Screwdriver



**STEP 1
(FRONT)**

Remove (3) 10mm screws from the vehicle fender flare. Locate the (1) plastic screw insert in the fender liner.



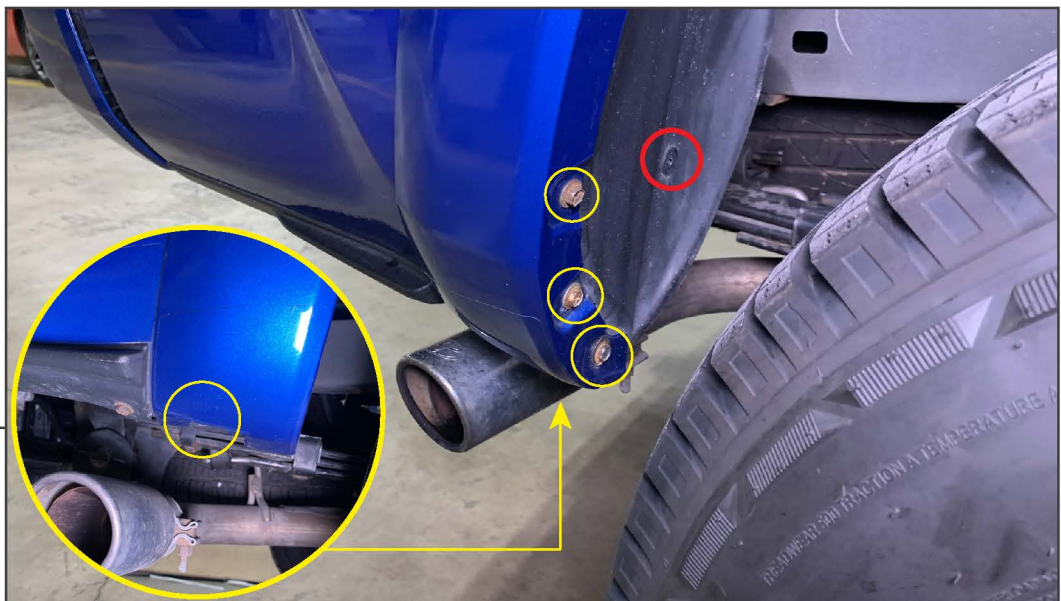
STEP 2

Align the mud guard to the vehicle, and install the (3) original 10mm bolts through the mud guard and into the fender flare.

**STEP 3**

Install (1) Phillips screw and (1) flat washer into the plastic insert in the fender liner. Ensure all hardware is tight.

Front installation is now complete.

**STEP 4
(REAR)**

Remove (4) 10mm screws from the vehicle fender flare. Locate the (1) plastic screw insert in the fender liner.

**STEP 5**

Align the mud guard to the vehicle, and install the (4) original 10mm bolts through the mud guard and into the fender flare.

**STEP 6**

Install (1) Phillips screw and (1) flat washer into the plastic insert in the fender liner. Ensure all hardware is tight.

Repeat steps 1-6 to the opposite side of the vehicle. Installation is now complete.