

XW SERIES SEQUENTIAL LED TAIL LIGHTS

(2016-2022+ TOYOTA TACOMA)

INSTALLATION INSTRUCTIONS

CONTENTS

(1) LH Tail Light
(1) RH Tail Light

TOOLS REQUIRED

10mm Socket
Ratchet


SKU # TT30330 /
TT30331 / TT30332
Edited: 11/11/2022

STEP 1



Lower the vehicle tail gate. Remove (2) 10mm bolts from the inside of the tail light housing.

STEP 2

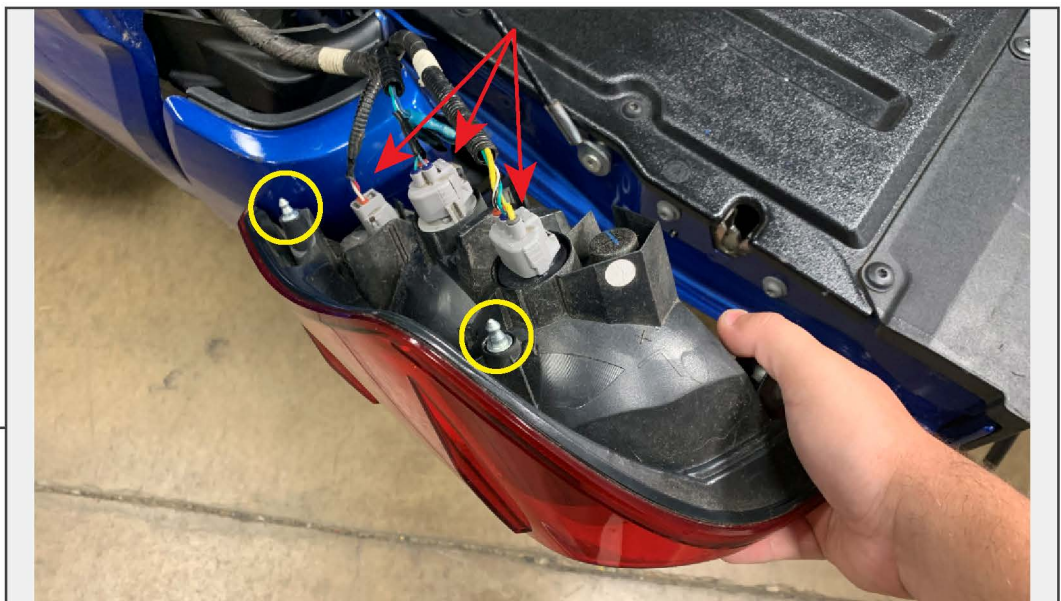

Firmly pull the tail light away from the vehicle to dislodge the (2) mounting studs.



STEP 3

Unplug the (3) tail light connectors from the original tail light.

Once disconnected, plug the (3) connectors into the new tail light. Ensure the connector audibly clicks in to ensure proper connection.



STEP 4

Install the new LED tail light using the (2) original 10mm bolts.

Repeat steps 1-5 to the opposite side tail light. See following page for troubleshooting. Installation is now complete.