

LED TAIL LIGHTS

(2016-2023+ TACOMA)

INSTALLATION INSTRUCTIONS

CONTENTS

(1) LH Tail Light
(1) RH Tail Light

TOOLS REQUIRED


10mm Socket
Ratchet
Flathead Screwdriver

STEP 1




Lower the vehicle tail gate. Remove (2) 10mm bolts from the inside of the tail light housing.

STEP 2

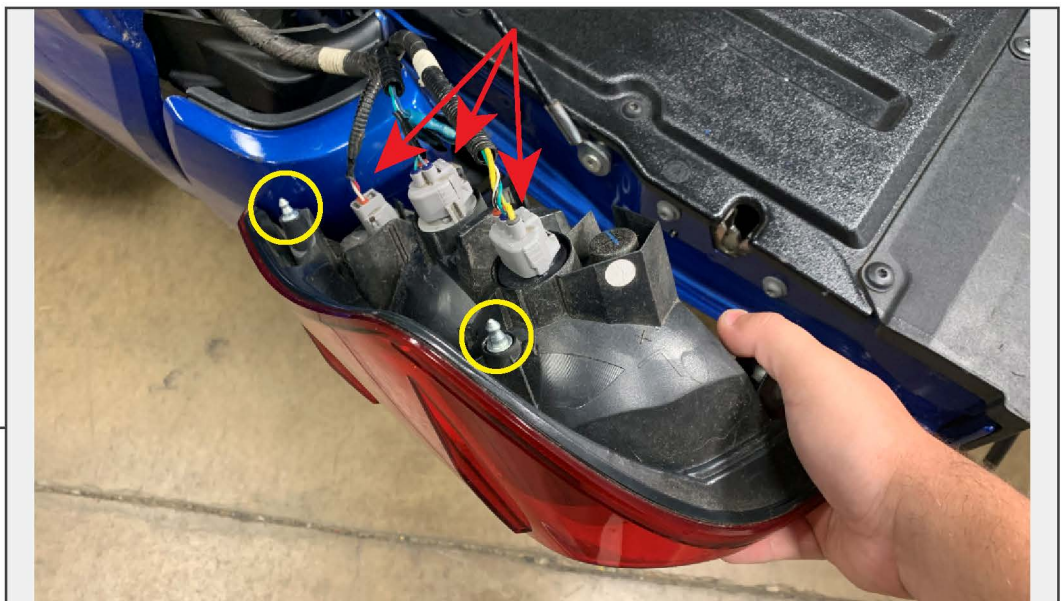


Firmly pull the tail light away from the vehicle to dislodge the (2) mounting studs. Disconnect (3) wiring harnesses from the tail light assembly.

STEP 3

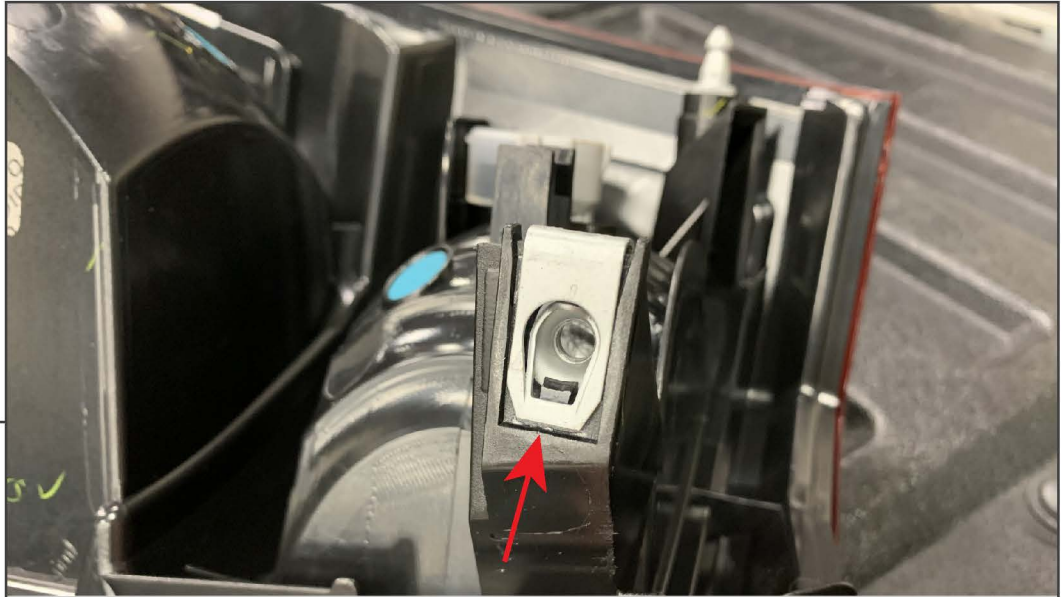


Remove the screw retaining clips from the original tail light using a flathead screwdriver, and transfer to the new tail light in the same orientation.

STEP 4

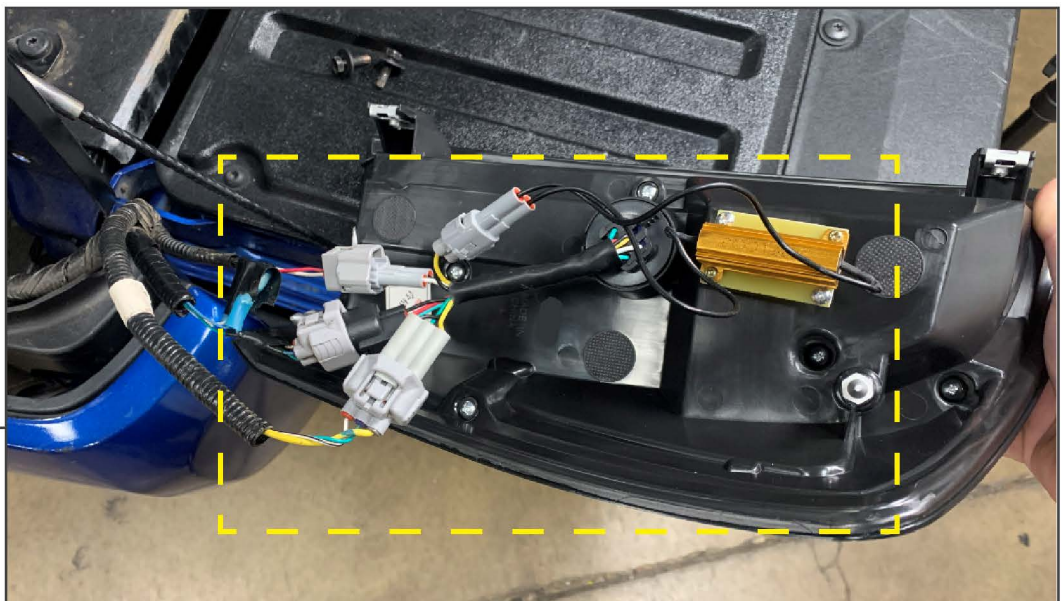

Plug in the (3) vehicle harnesses into each corresponding harness on the new tail light.

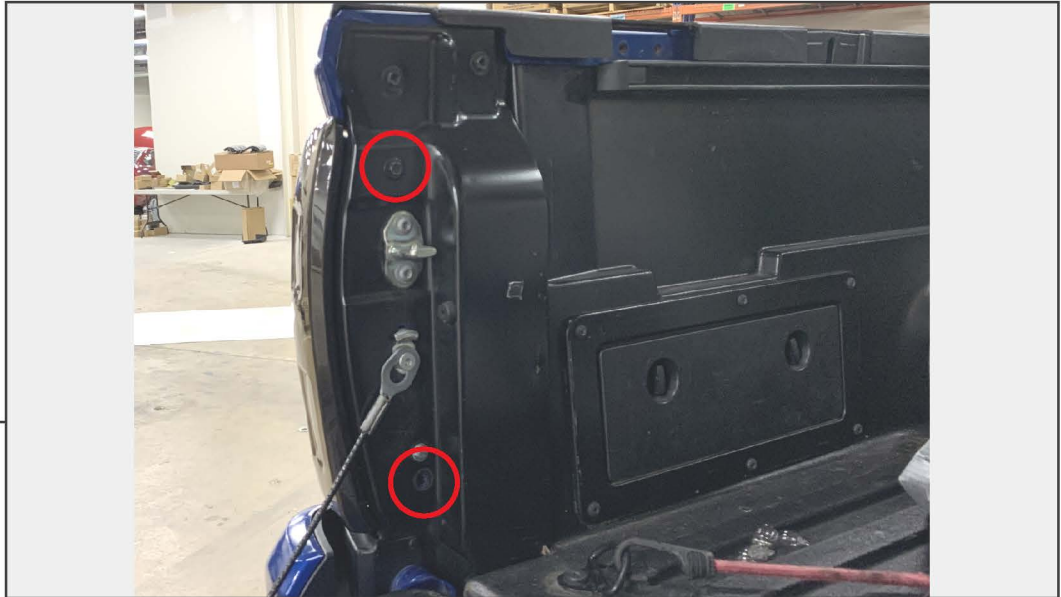

STEP 5

Install the new tail light into the vehicle reusing (2) 10mm bolts. Tighten until secure.



STEP 6

Repeat steps 1-5 to the opposite side of the vehicle.

Note: Some vehicles are sensitive to new lighting, causing improper lighting functionality. To correct, test the interior & exterior fuses and check for blown fuses. If a fuse is blown, replace with the same amperage rated fuse. This will correct the issue.

Installation is now complete.