



CENTER CONSOLE LOCK BOX

(2005-2015 TACOMA - WITH BUCKET SEATS)

INSTALLATION INSTRUCTIONS

CONTENTS

- (1) Lock Box
- (1) Foam Pad
- (2) M6 Flange Bolts
- (1) Thumb Tack

TOOLS REQUIRED

Phillips Screwdriver Flathead Screwdriver 10mm Socket Ratchet w/ Extension





STEP 1

Open the vehicle center console and empty of all contents.

Remove (5) Phillips screws from the trim panel on the lid. Remove the plastic trim panel.



STEP 2

Remove (4) Phillips screws from the lid to separate the center console lid from the hinge assembly. Remove the center console lid and set aside.





STEP 3

Remove the hinge covers from each side of the center console hinge assembly and set aside. Remove the (4) Phillips screws securing the hinge assembly to the center console. Remove the hinge assembly and set aside.




STEP 4

Remove (2) 10mm bolts from the bottom of the center console.

Note: Hardware will not be reused.



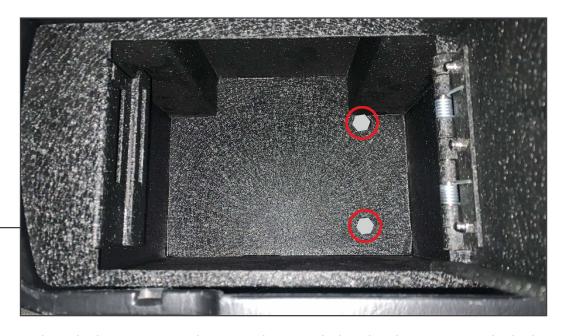

STEP 5

Fit the lock box into the vehicle center console. Using the provided M6 hardware, secure the lock box to the vehicle center console.



STEP 6

Re-assemble the vehicle center console lid using the original Phillips screws and plastic panels.





STEP 7 (COMBINATION)

Combination: Open the lock box lid using the combination "000".

With the lid open, use the included thumb tack to press the botton on the side of the knob. With the button pressed, set the desired combination. Once set, remove the thumb tack and re-install the lid to the lock box.



STEP 8

Install the included foam pad into the bottom of the lock box.

Installation is now complete.