



BAJA MESH GRILLE WITH LED LIGHTING

(2016-2023+ TACOMA)


INSTALLATION INSTRUCTIONS

CONTENTS

- (1) Grille Assembly
- (1) Wiring Harness
- (2) Scotchlok Connectors
- (6) Cable Ties

TOOLS REQUIRED

- Flathead Screwdriver
- Phillips Screwdriver
- Panel Removal Tool
- 10mm Socket
- Ratchet
- Exterior Detailer
- Microfiber Cloth

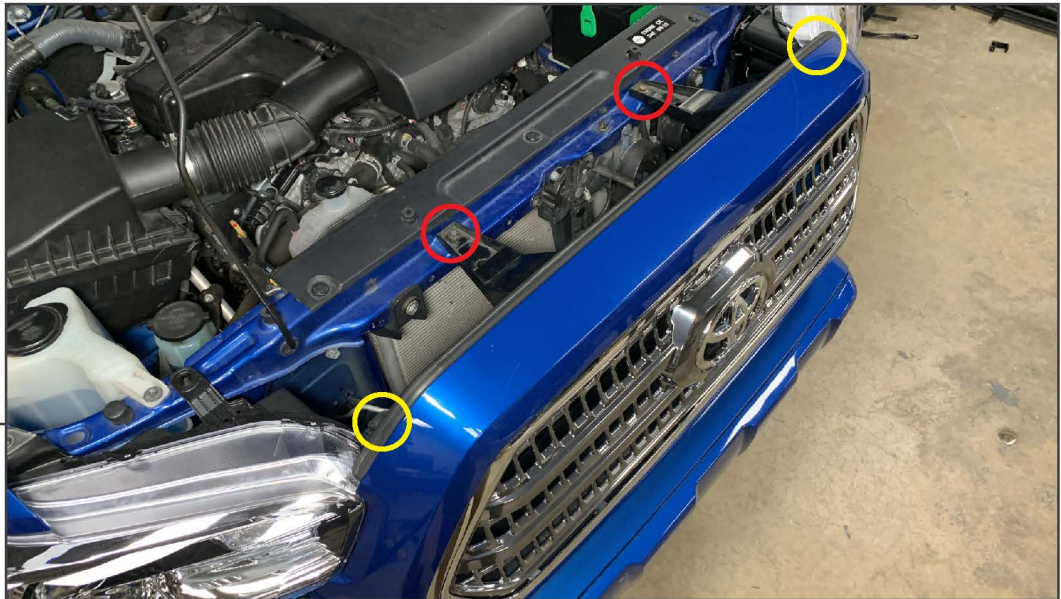


STEP 1

Open the vehicle hood. Remove (2) 10mm bolts and (2) plastic push clips from the vehicle grille.




STEP 2

Lift the (2) plastic grille brackets over the bolt holes, and pull the grille away from the vehicle. Place the grille face down on a soft surface for disassembly.

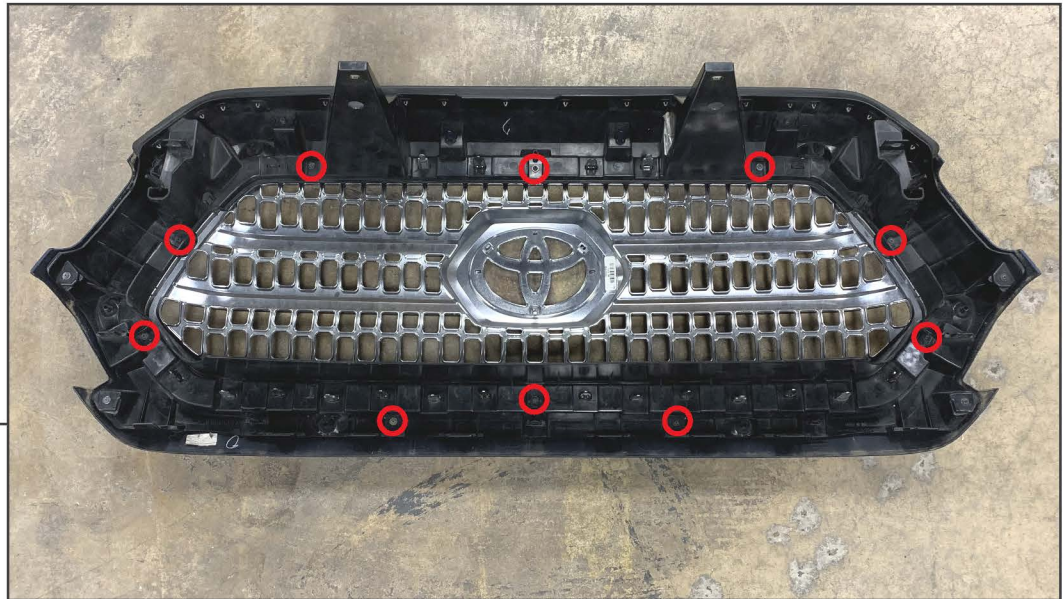

STEP 3

Remove (10) Phillips screws from the back-side of the grille.

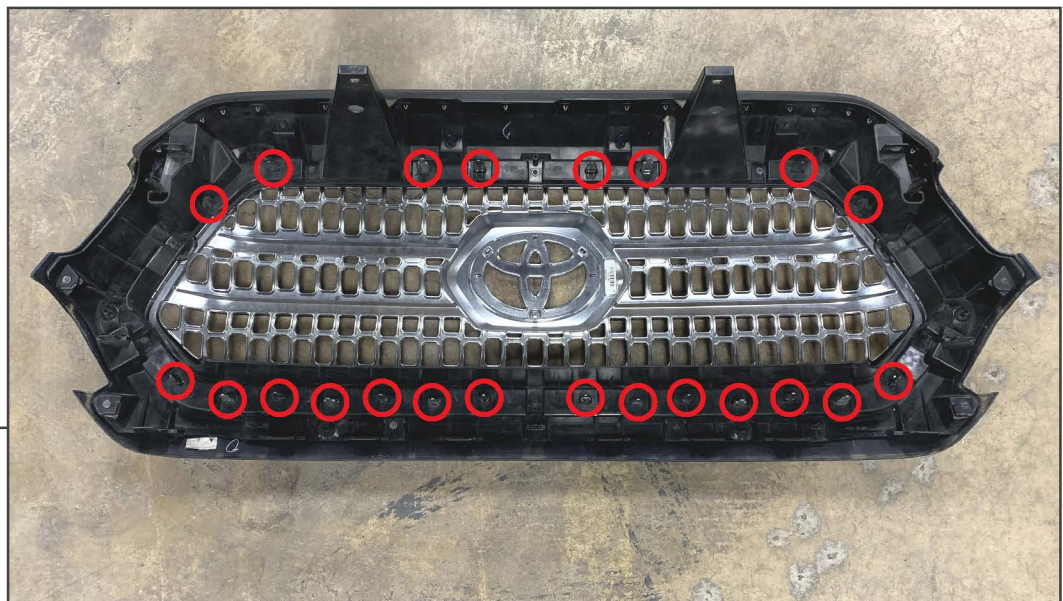

STEP 4

Using a flathead screwdriver, dislodge the outer grille mesh from the vehicle grille housing. Depress the retainer with a flathead screwdriver, while gently prying outwards on the mesh.

STEP 5



Using exterior detailer and a microfiber cloth, clean the inside edges of the grille housing.

STEP 6



Press the new grille into the vehicle grille housing. Ensure each mounting point is properly aligned, and firmly press until all of the mounting tabs are fully depressed.

Plug the provided wiring harness into each grille light.


STEP 7



Route the LED lighting wiring towards the RH side headlight assembly. Splice the LED lighting harness into the vehicle DRL harness following the diagram below. The lights will power on with the DRL.

<u>Grille Lighting</u>	-	<u>Vehicle Harness</u>
Red (Parking Lights +)	-	Blue (DRL +)
Black (Ground)	-	White/Black (Ground)

STEP 8

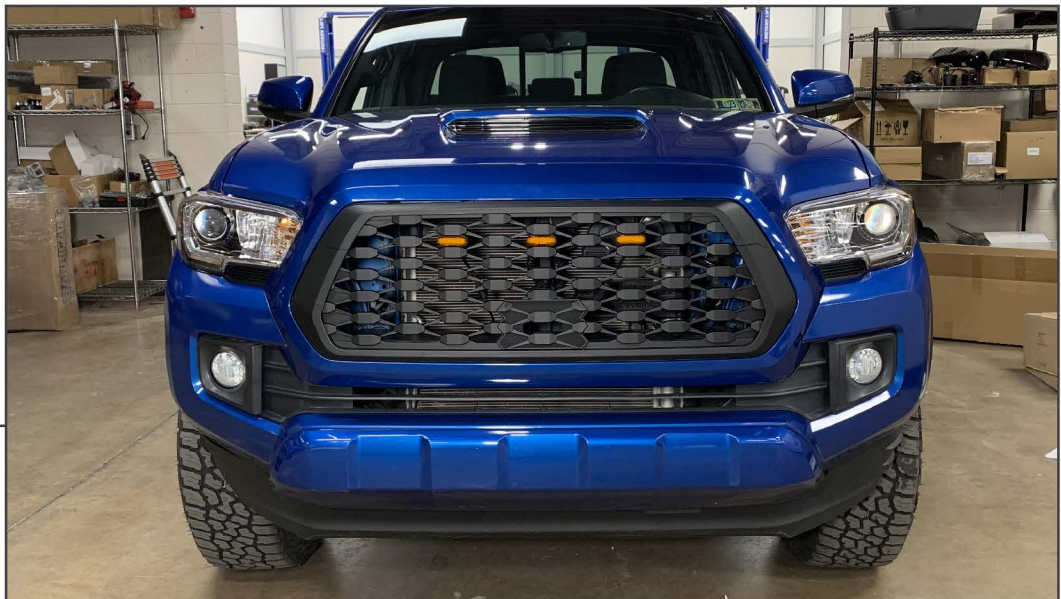

Fit the grille to the vehicle, and secure into place using the original (2) 10mm bolts and (2) plastic push clips.

Installation is now complete.