

# SMOKED LED TAIL LIGHTS

(2016-2023 TACOMA)

---

## INSTALLATION INSTRUCTIONS

### CONTENTS

---

(1) LH Tail Light  
(1) RH Tail Light

### TOOLS REQUIRED

---


10mm Socket  
Ratchet

**STEP 1**



Lower the vehicle tail gate. Remove (2) 10mm bolts from the inside of the tail light housing.

**STEP 2**

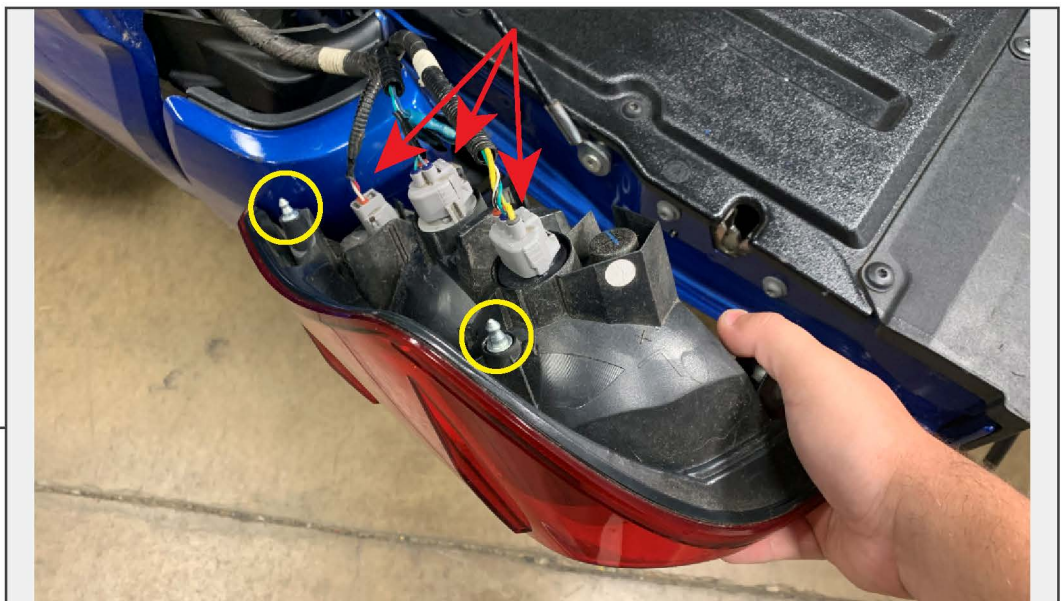

Firmly pull the tail light away from the vehicle to dislodge the (2) mounting studs. Disconnect (3) wiring harnesses from the tail light assembly.

**STEP 3**



Plug in the (3) vehicle harnesses into each corresponding harness on the new tail light.

**STEP 4**



Install the new tail light into the vehicle re-using (2) 10mm bolts. Tighten until secure.

Repeat steps 1-4 to the opposite side of the vehicle.

Installation is now complete.