

ST LED TAIL LIGHTS

(2016-2023 TACOMA)

INSTALLATION INSTRUCTIONS

CONTENTS

(1) LH Tail Light
(1) RH Tail Light

TOOLS REQUIRED


10mm Socket
Ratchet

STEP 1



Lower the vehicle tail gate. Remove (2) 10mm bolts from the inside of the tail light housing.

STEP 2

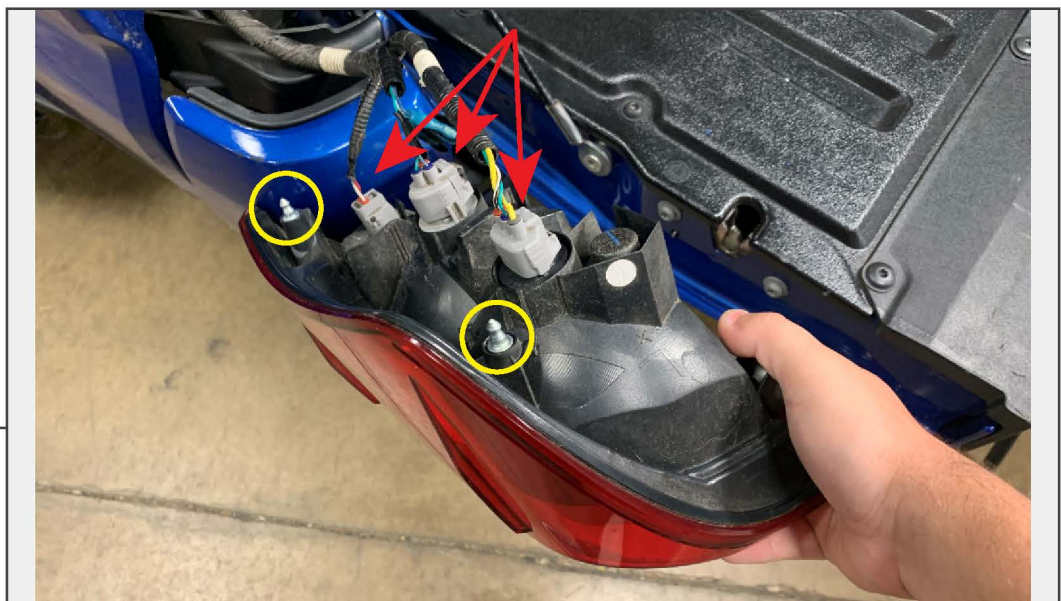

Firmly pull the tail light away from the vehicle to dislodge the (2) mounting studs. Disconnect (3) wiring harnesses from the tail light assembly.

STEP 3



Plug in the (3) vehicle harnesses into each corresponding harness on the new tail light.

STEP 4



Install the new tail light into the vehicle re-using (2) 10mm bolts. Tighten until secure.

Repeat steps 1-4 to the opposite side of the vehicle.

Installation is now complete.