

LED THIRD BRAKE LIGHT

(2005-2015 TACOMA)

INSTALLATION INSTRUCTIONS

CONTENTS

(1) LED Third Brake Light

TOOLS REQUIRED


T-20 Torx Socket/Key
Ratchet
Isopropyl Alcohol
Microfiber Cloth

STEP 1




Remove (2) T-20 Torx screws from the vehicle third brake light.

STEP 2

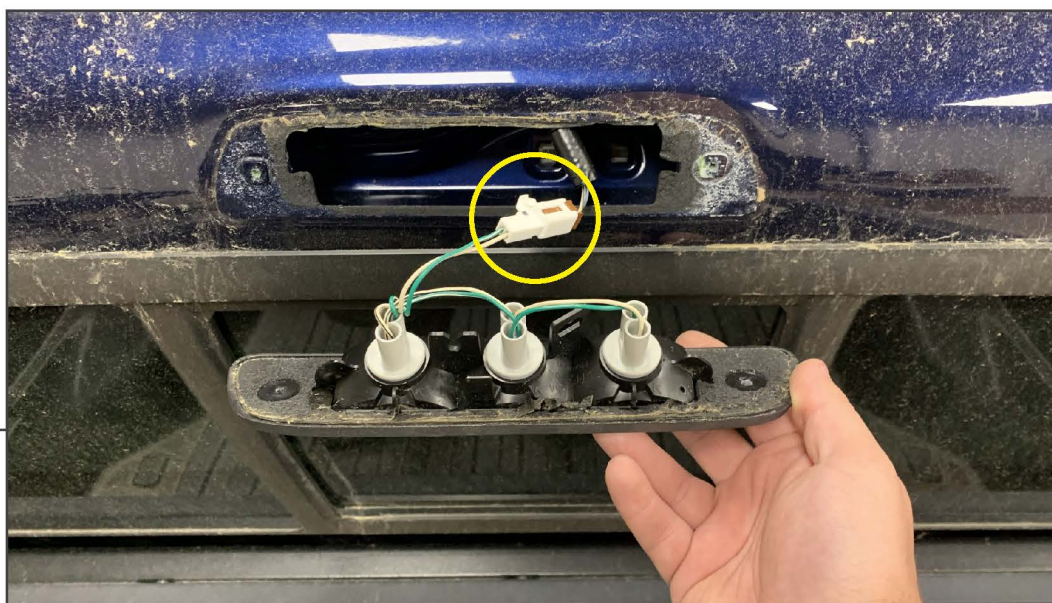

Pull the third brake light assembly from the vehicle cab, light prying may be required using a plastic pry tool to dislodge the gasket. Unplug the third brake light wiring connector.

STEP 3

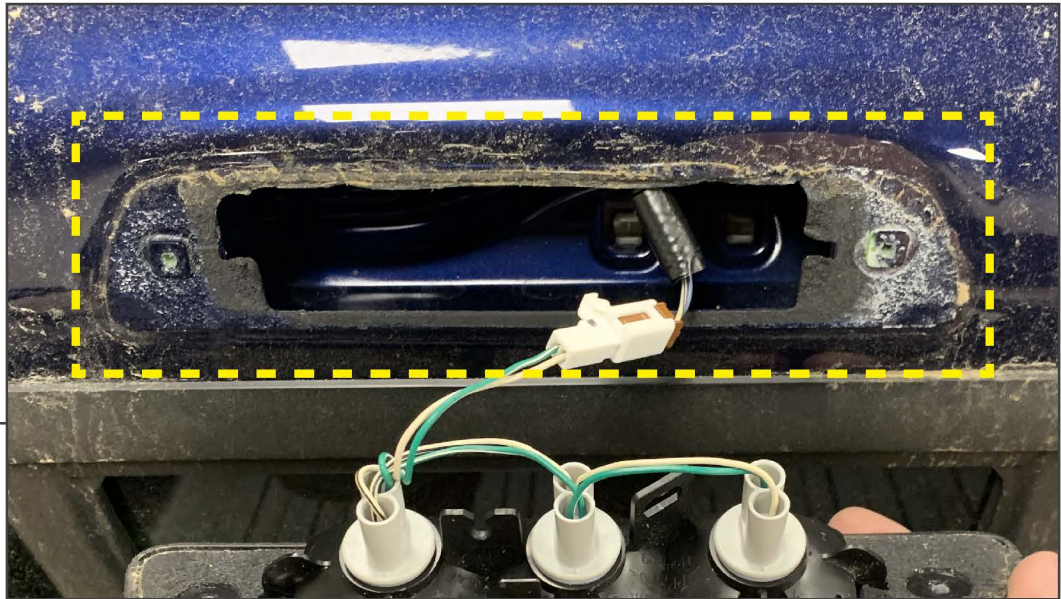

Clean the vehicle cab of all remaining gasket material/residue using isopropyl alcohol and a microfiber cloth.

STEP 4



Peel the white foam gasket tape backing, and align the third brake light to the vehicle cab. Plug the tail light into the vehicle, then press the light to the vehicle and install the original (2) T-20 Torx screws. Tighten the screws evenly until secure, do not over-tighten.



STEP 5

Installation is now complete.