



ACCESSORY KIT FOR REDROCK MODULAR ROOF RACK

(2024+ TACOMA - DOUBLE CAB)

INSTALLATION INSTRUCTIONS

CONTENTS

(2) Grab Handles
(4) LED Light Brackets
(4) "L" Brackets
(12) M8x1.25 x 25mm Allen Bolts
(4) M8x1.25 x 20mm Allen Bolts
(16) M8 Lock Washers
(16) M8 Flat Washers [Small]
(12) M8 Flat Washers [Large]

TOOLS REQUIRED


5mm Allen Key

STEP 1 [GRAB HANDLE]



Grab Handle: Secure the grab handle to the vehicle roof rack using (2) M8 x 20mm Allen bolts, (2) M8 lock washers, and (2) M8 flat washers [large]. Tighten the hardware evenly until fully secure to the roof rack.

STEP 2 [LED Light Brackets]

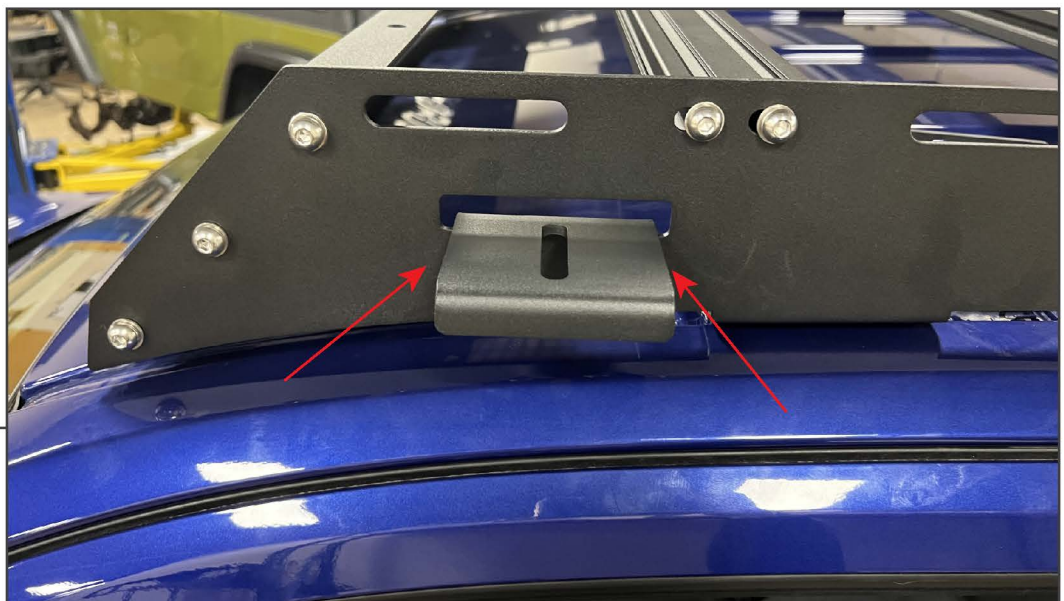

LED Light Brackets: Secure the LED light brackets to the roof rack using (2) M8 x 25mm Allen bolts, (2) M8 lock washers, (4) M8 flat washers [small], and (2) M8 nuts per bracket.

STEP 3 [“L” Brackets]



“L” Brackets: Secure the “L” Bracket to the desired location on the roof rack using (1) M8 x 25mm Allen bolt, (1) M8 lock washer, (2) M8 flat washers [large], and (1) M8 nut.