



## 2024+ Toyota Tacoma Installation Instructions View on [www.rallyarmor.com](http://www.rallyarmor.com)


















**Manufacturer warranty covers material defects on new, never installed parts. Once installed, all mud flap replacement part costs are the responsibility of the vehicle owner.** Caution against blind spots during parking. Avoid curbs and excessive compression to the flaps. Check stock and aftermarket wheel/suspension clearances.

**INSTALLATION QUESTION? FOR REPLACEMENT PART QUOTES, SEND FLAP RECEIPT OR PHOTO → [www.rallyarmor.com/support](http://www.rallyarmor.com/support)**


**Recommended Tools** Low-profile offset, ratcheting, flat & Phillips screwdrivers, 10mm & 11mm wrenches, pick.

**Install on even surface using hand tools only. AVOID OVERTIGHTENING HARDWARE.**

**ABOUT OUR STANDARD IN MUD FLAPS** Polyurethane is a high grade plastic that may feature minor surface layer marks. These are visual variations that don't affect flap construction or performance. Most matte away as the material ages over time.

MF114 KIT CONTENTS CONFIRM ALL PARTS & QUANTITIES BEFORE INSTALLATION			
MUD FLAP KIT PN MF114 SEE PAGE 3		PART DESCRIPTION	QUANTITY
MF114-LF		LEFT FRONT	1
MF114-RF		RIGHT FRONT	1
MF114-LR		LEFT REAR	1
MF114-RR		RIGHT REAR	1
BRACKET KIT PN BMF114			
BMF96-RE 		BRACKET FRONT 2	2
BMF114-FRT 		BRACKET FRONT	2
BMF114-RE 		BRACKET REAR	2
HARDWARE KIT PN HMF114			
1SS 		SCREW	4
1.5SS 		LONG SCREW	12
BLKNUT 		NUT	8
HXBLT 		BOLT	8
SMWASH 		WASHER	34
SMF29-1 		SPACER	8
SMF114-LF 		SPACER LEFT FRONT	1
SMF114-RF 		SPACER RIGHT FRONT	1
SMF114-LR 		SPACER LEFT REAR	1
SMF114-RR 		SPACER RIGHT REAR	1
SSLNUT 		LOCK NUT	2
ST96 		STICKER	2


**2024+ Toyota Tacoma Installation Instructions** View on [www.rallyarmor.com](http://www.rallyarmor.com)

UNUT2		CLIP	2
-------	---	------	---

**Do not fully tighten fasteners until flaps are aligned to vehicle.**


**FRONT FLAP** To access interior wheel well, turn steering wheel towards installation side.

**Parts 1 Flap** → 1 x BMF114-FRT; 1 x BMF96-RE; 1 x 1SS; 3 x 1.5SS; 2 x BLKNUT; 2 x HXBLT; 2 x SMF29-1; 1 x SMF114-LF/RF; 9 x SMWASH; 1 x SSLNUT; 1 x ST96; 1 x UNUT2

**IMAGE A** If equipped, remove factory splash guards. Remove fasteners 1 - 4. **Temporarily** remove underbody fastener 5.

**IMAGE B** Install UNUT2 **behind liner**, onto vehicle mount 4. Wipe liner clean. Remove SMF29-1 & SMF114-LF/RF film. Attach SMF29-1 over mounts 1 & 4 and SMF114-LF/RF over mounts 2 & 3.


**IMAGE C** Wipe BMF96-RE clean. Remove ST96 film and stick onto BMF96-RE.

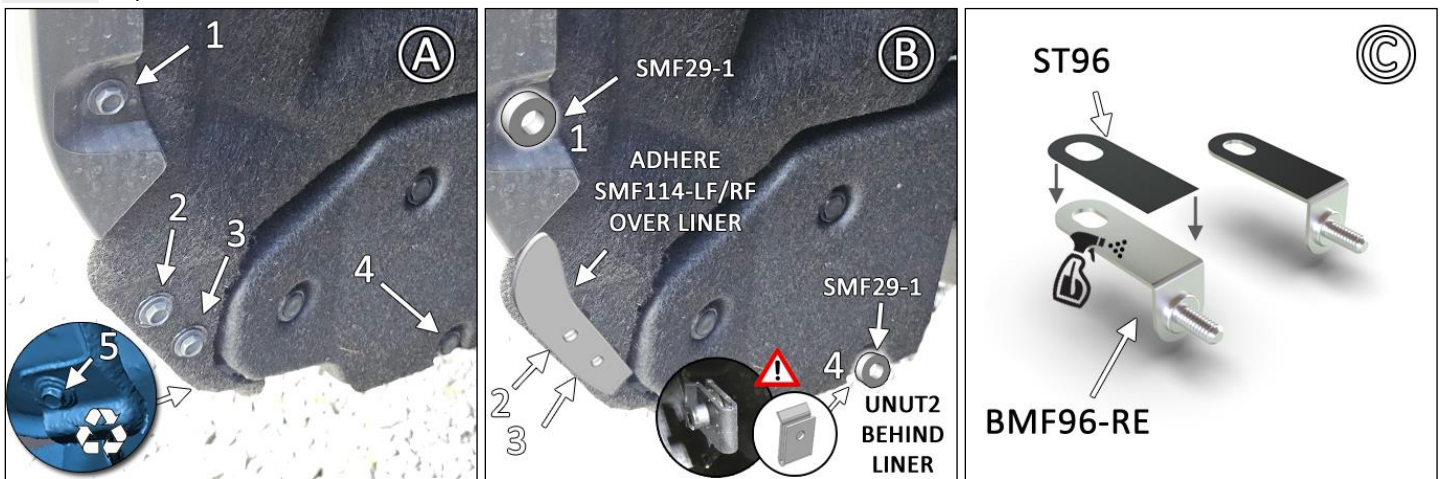

**IMAGE D** Place BMF96-RE over mount 5, then reinstall fastener 5.

**IMAGE E** Place logo-side of flap facing rear bumper and BMF114-FRT **over** flap side facing tire. Install SMWASH & 1.5SS into BMF114-FRT mounts 1 - 3, SMWASH & 1SS into mount 4, SMWASH & SSLNUT onto mount 8, SMWASH & HXBLT into mounts 6 & 7. On logo-side of flap mounts 6 & 7, fasten SMWASH & BLKNUT.

**IMAGE F** Ensure flap is aligned to vehicle before tightening fasteners until just seated.

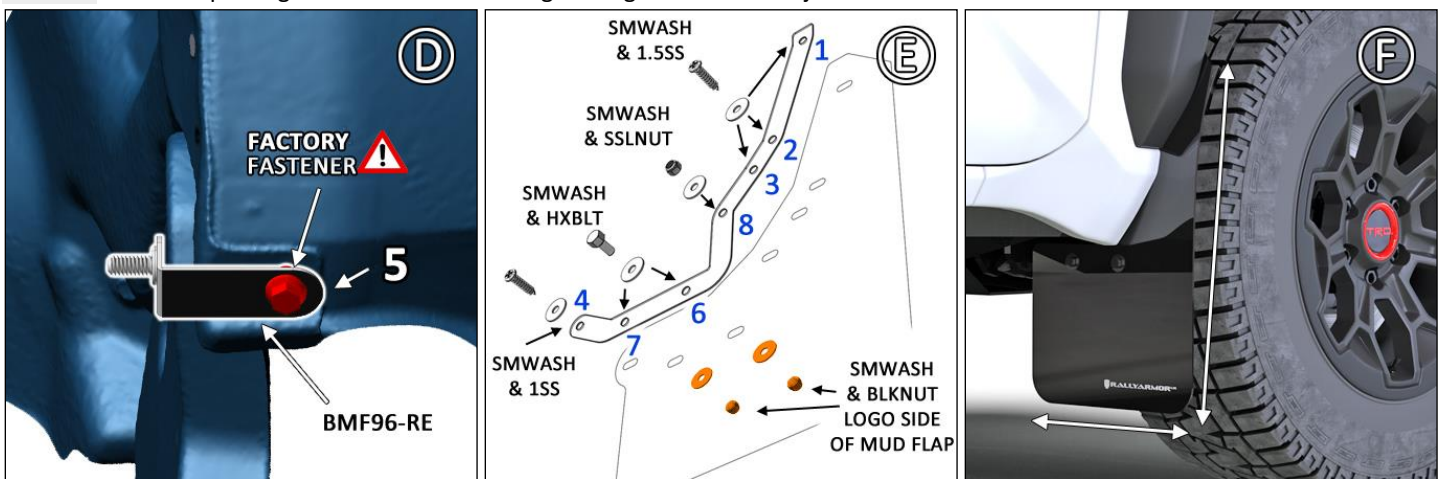

**REAR FLAP** **Parts 1 Flap** → 1 x BMF114-RE; 3 x 1.5SS; 1x 1SS; 2 x BLKNUT; 2 x HXBLT; 2 x SMF29-1; 1 x SMF114-LR/RR; 8 x SMWASH



## 2024+ Toyota Tacoma Installation Instructions View on [www.rallyarmor.com](http://www.rallyarmor.com)

**IMAGE G** If equipped, remove factory splash guards. Uninstall fasteners 1 - 4.

**IMAGE H** Wipe areas clean before installing SMF29-1 over mounts 1 & 4 and SMF114-LR/RR over mounts 2 & 3.

**IMAGE I** Place BMF114-RE over flap, then both against liner. Install SMWASH & 1.5SS through BMF114-RE mounts 1 - 3. Install 1SS into mount 4. Install SMWASH & HXBLT into tire-side mounts 5 & 6 and SMWASH & BLKNUT onto bumper-side mounts 5 & 6. Ensure flap is parallel to even ground, adjusting preferred width before hand-tightening washers just until flush to flap.



## MF114 MOUNTING DIAGRAM

