



CUSTOM FIT ALL WEATHER FLOOR LINERS

(2016-2023 TACOMA - DOUBLE CAB)

INSTALLATION INSTRUCTIONS

CONTENTS

- (1) LH Front Floor Liner
- (1) RH Front Floor Liner
- (1) Rear Seat Floor Liner

TOOLS REQUIRED

Vacuum Cleaner

STEP 1
[FRONT]

Clean the vehicle floor using a vacuum cleaner.

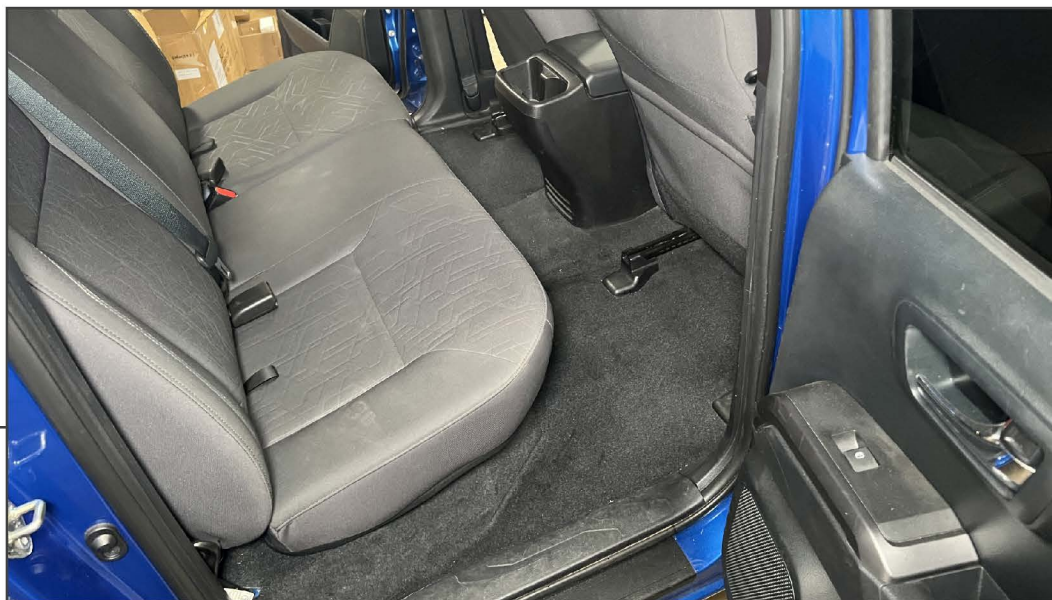
Locate the vehicle floor anchor points. Turn the anchor point lock 90 degrees to allow new liner installation.

STEP 2
[FRONT]

Fit the new floor liner into the vehicle and onto the mounting anchors. Turn the mounting anchor 90 degrees to lock the liner into place.

Repeat steps 1-2 for the remaining front floor liner.

Note: 2016-2017 model year vehicles are not equipped with OEM floor anchors on the passenger's side of the vehicle. To utilize the anchor point holes, anchors will need to be added if desired. Anchor points are not included.

STEP 3
[REAR]

Clean the vehicle floor using a vacuum cleaner.

STEP 4
[REAR]

Evenly fit the new floor liner onto the vehicle floor.

Installation is now complete.