

16-23 TOYOTA TACOMA APEX SERIES REAR BUMPER




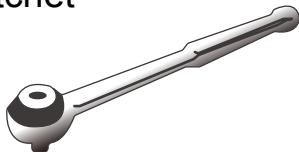







| | |
|---------------------|-------------------------|
| Model: | ATTTA01B101-BX |
| Material: | E-Coated Steel |
| Package Dimensions: | 69.55" x 11.01" x 9.67" |
| Product Weight: | 68.86 lbs |

⚠ WARNING













This product is designed primarily to enhance the appearance of the vehicle. Do not rely on any component of this product for protection against injury or death in the event of an accident. To reduce the risk of serious injury or property damage, please read all safety warnings and carefully review all instructions and procedural notices before attempting to install or use this product.




⚠ CAUTION

✂ Please recheck fasteners after 250 miles and inspect frequently.

| REQUIRED TOOLS | Socket  | Ratchet  |
|--|---|---|
| | Flathead Screwdriver  | Wrench  |
| | Double Ended Socket  | Hex Key  |
| | Drill  | Hex Bit Socket  |
| Side Cutter  | | |

Parts Information

| NO. | Parts Name | Size | Line Graph | Qty |
|-----|----------------------|-----------|---|-----|
| / | Bumper | / |  | 1 |
| / | Blind Sensor Housing | / |  | 1 |
| B07 | Allen Bolts | M6X20 |  | 8 |
| W13 | Flat Washer | φ6X18 |  | 8 |
| W22 | Spring Washer | φ10 |  | 6 |
| W23 | Flat Washer | φ10X25 |  | 10 |
| B35 | Hex Bolt | M10X35 |  | 6 |
| N15 | Hex Nut | M10-8 |  | 6 |
| B15 | Hex Bolt | M8X20-8.8 |  | 6 |
| N14 | Hex Flange Nut | M8-8 |  | 6 |
| N19 | Hex Nut | M12-8 |  | 4 |
| B77 | Hex Bolt | M12X55 |  | 4 |


| | | | | |
|-----|---------------|--------|---|---|
| W25 | Spring Washer | φ12 |  | 4 |
| W27 | Flat Washer | φ12X30 |  | 6 |
| N33 | Clamping Nut | M6-8 |  | 8 |



※Note: One pack of spare parts is provided.

Installation Instructions


Step 1: Open the box and check that all components are included.


Step 2: Disconnect the wiring harness and remove the OEM bumper.

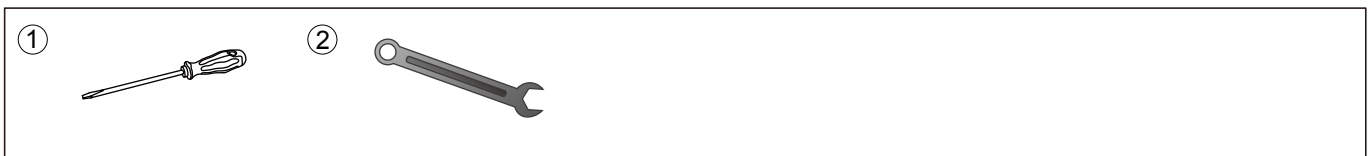

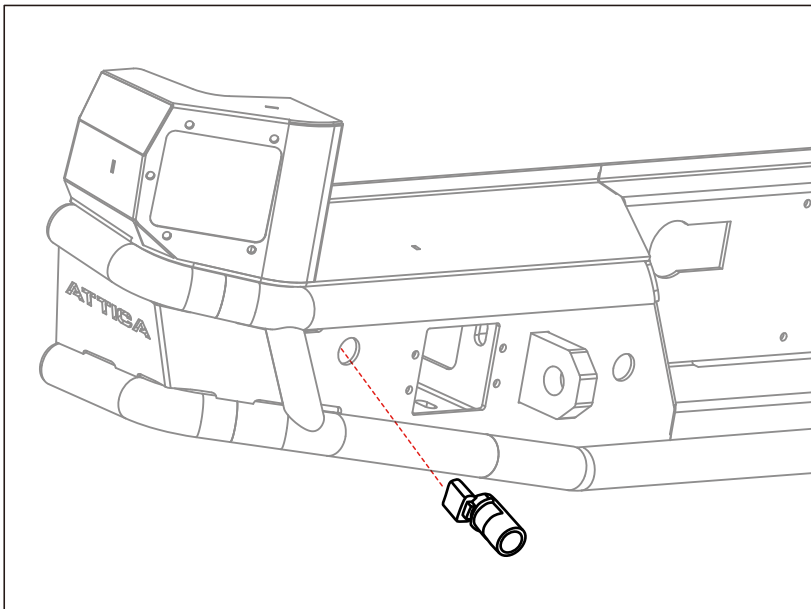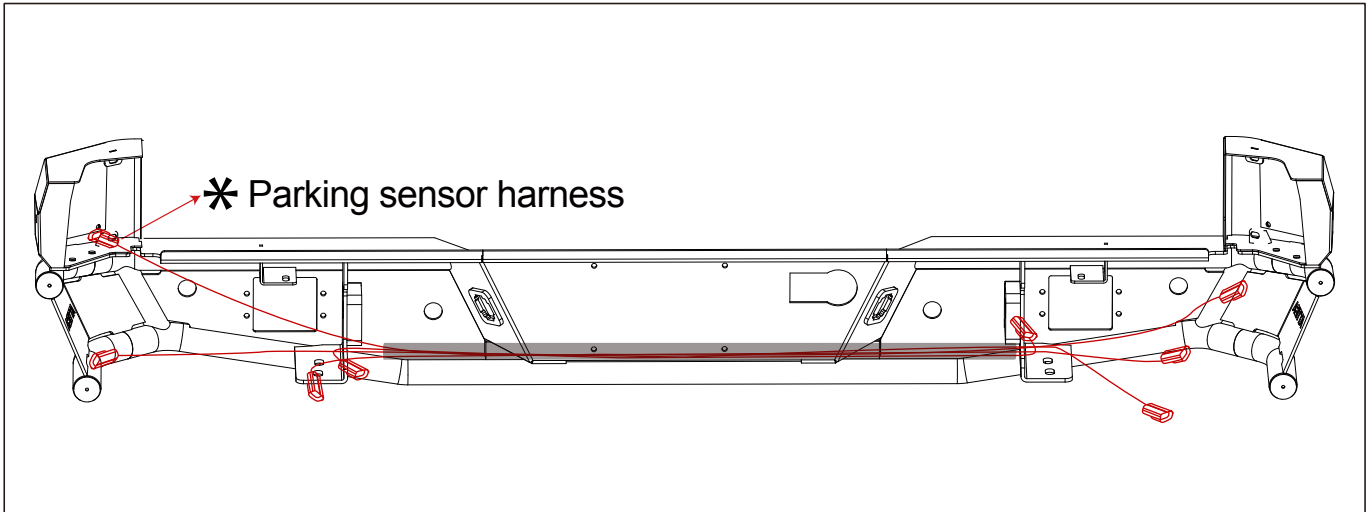

Step 3: Attach the blind sensor housing to the bumper.

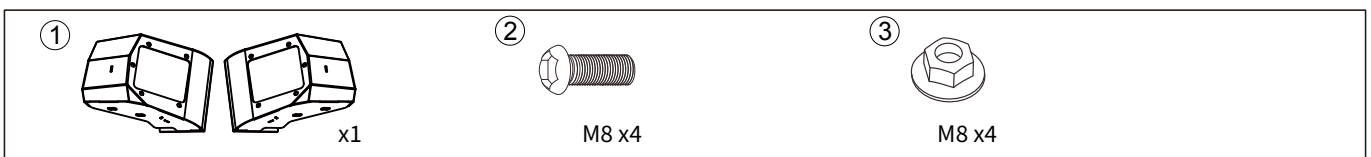

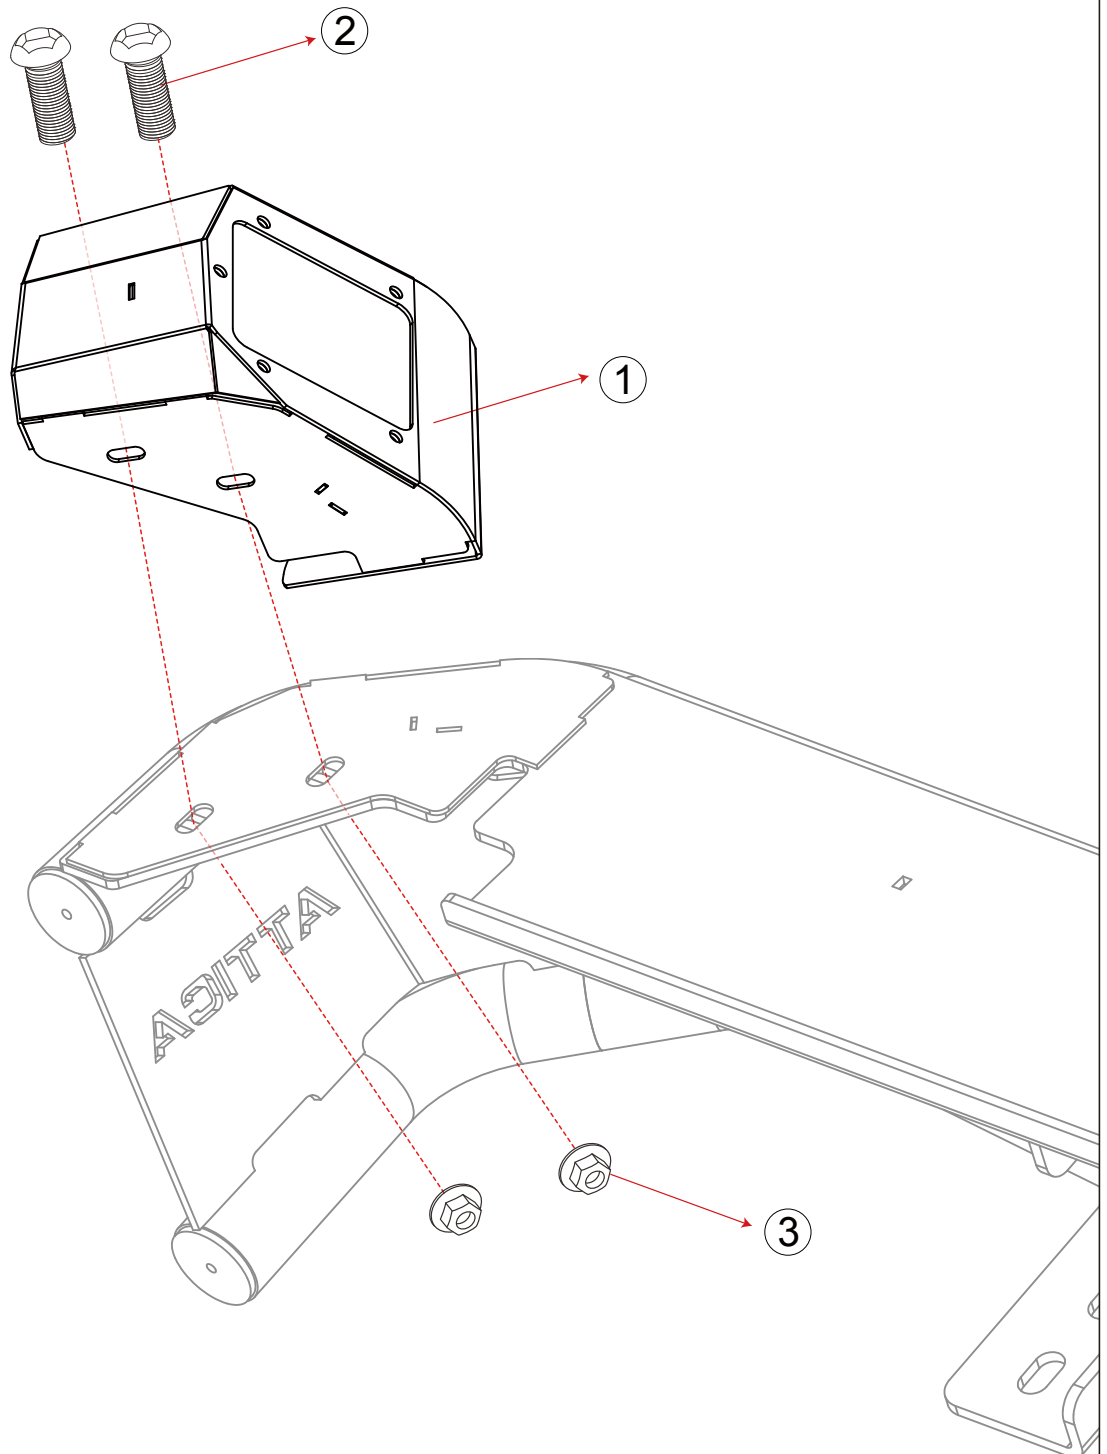

* Same installation method for both sides.

Step 4: Mount the bumper to the vehicle.

