



---

# SOFT TRI-FOLD TONNEAU COVER

---

## INSTALLATION INSTRUCTIONS

### CONTENTS

---

- (1) Soft Tri-Fold Tonneau Cover
- (4) Bed Rail Clamps
- (4) Cotter Pins

### TOOLS REQUIRED

---

N/A



---

### STEP 1



Place the tonneau cover on the bed of the vehicle. The panel with the yellow safety strap will be closest to the cab of the vehicle. Open the tonneau cover and adjust the cover side-to-side and front-to-back so that its even on all sides. Once the cover is centered on the vehicle, carefully fold back to tonneau cover. \*\*Note: The cover will lift off the bed rails slightly when not secured to the vehicle.

---

### STEP 2



Tighten the safety latch to the vehicle, Loosen the thumb screw and clamp the latch to the vehicle on both sides. Finish by tightening the thumb screw.



---

### STEP 3



Adjust the latches, ensure the latch catches the metal portion of the factory bed rail. If your vehicle has plastic bed rail covers, you may need to trim the covers at the latch locations to ensure the latch is secured to the metal and not the plastic bed rail cover. Insert the supplied cotter pin to lock to latch in position. For vehicles with factory utility rails, see the last page of the install.

---

### STEP 4



Ensure both safety straps are installed on the front panels and cotter pins are installed at all locations when the tonneau cover is in use.



---


## STEP 5



When the tonneau cover is not in use, fold the cover back and secure it with the pre-installed nylon straps. Safety strap and clamp will always need to be used on the forward most panel.

---

## Factory Utility Rails

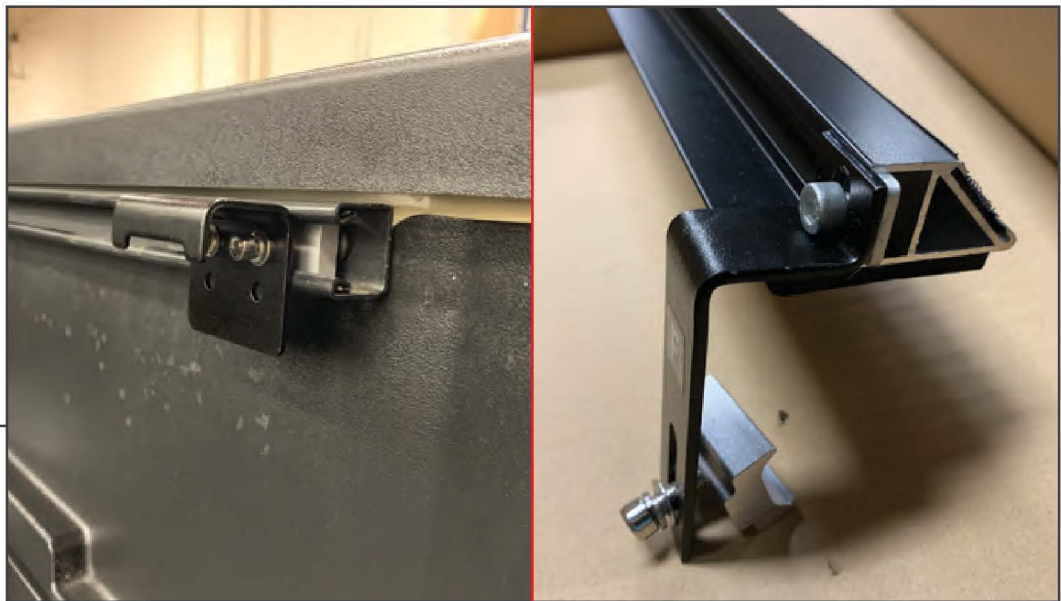

For vehicles with factory bed rails, remove the rail end caps and install the supplied utility rail clamps. There are several styles of clamps (2) are shown above.