

LED GRILLE LIGHTS

(2024-2025+ TACOMA) (WITH TRD SPORT, OFF-ROAD, OR PRE-RUNNER GRILLE)

INSTALLATION INSTRUCTIONS


CONTENTS

- (1) LH Outer Grille Light
- (1) LH Inner Grille Light
- (1) RH Outer Grille Light
- (1) RH Inner Grille Light
- (1) Fuse Tap
- (1) Ring Terminal


TOOLS REQUIRED

Wire Crimpers Cable Ties



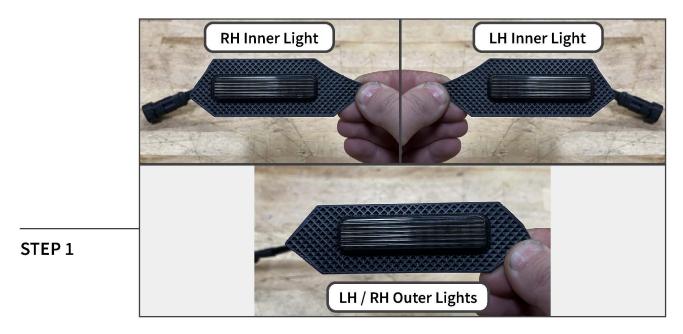

Identify the mounting position of each grille light.

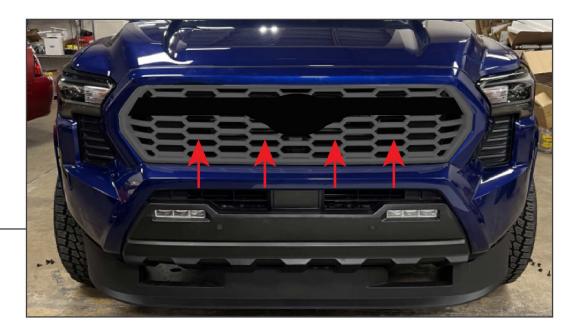


STEP 2

Route the included wiring harness from the rear of the grille through the grille to the designated grille mounting hole. Once the harness is routed, plug in the grille lights and press the grille lights into place.

Plug in each LED light into the harness, and press the light into the grille until securely clipped into place.



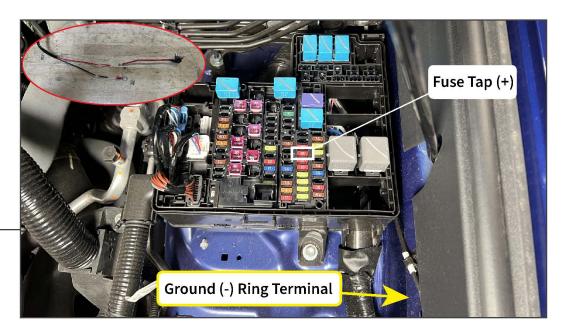

STEP 3

- -Connect the Red wire lead from the harness to the included fuse tap.
- -Connect the Black wire lead from the harness to the included ring terminal.
- -Remove and replace the indicated fuse above with the fuse tap, and neatly route the wiring harness out of the fuse box. Trimming a small notch in the fuse box lid may be necessary. Add the original fuse to the fuse tap.
- -Connect the ring terminal to a suitable chassis ground in front of the fuse box.

Neatly secure the wiring harness away from any hot/moving components using cable ties.

Installation is now complete.