



MUD GUARDS

(2024+ TACOMA - WITHOUT FENDER FLARES)

INSTALLATION INSTRUCTIONS


CONTENTS

(1) LH Front Mud Guard [LF]
(1) RH Front Mud Guard [RF]
(1) LH Rear Mud Guard [LR]
(1) RH Rear Mud Guard [RR]
(10) Phillips Screws

TOOLS REQUIRED

Phillips Screwdriver
10mm Socket
Ratchet

STEP 1 [FRONT]

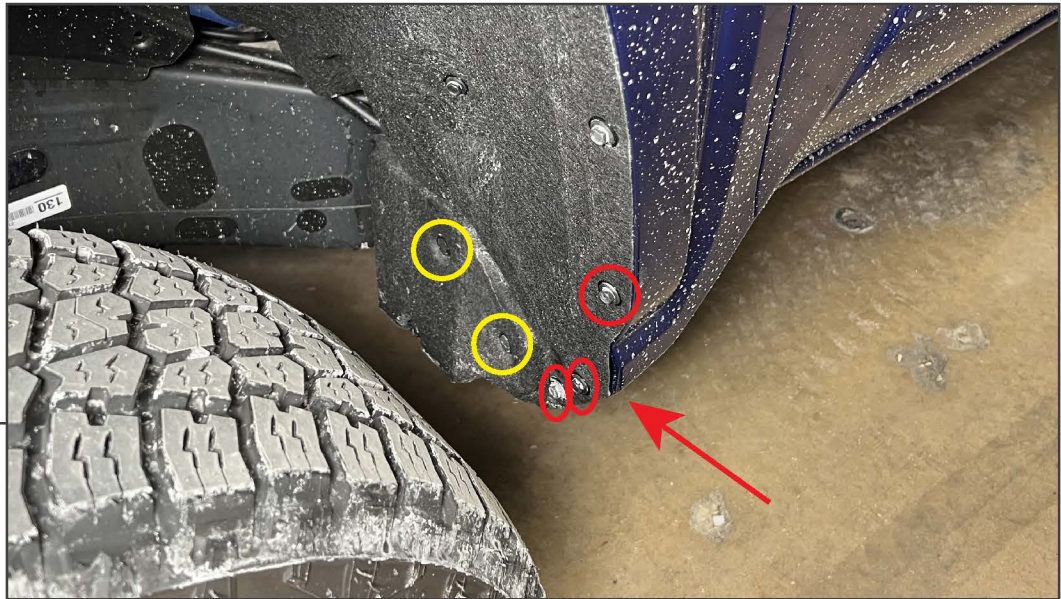

Clean the vehicle around the mud guard mounting location using exterior detailer and a microfiber cloth.

Locate and remove (4) 10mm screws from the edge/bottom of the fender. Remove (2) plastic push clips from the inner fender liner.

Note: Hardware will be reused.

STEP 2



Inspect the mud guards for the embossed label, see above for label definition.

Align the mud guard to the vehicle, and secure the mud guard to the fender liner first using the original (2) inner plastic push clips, then secure mud guard using the outer (4) screws.

Note: The plastic clips can be difficult to press in with the mud guard into place. This is intentional to ensure a secure fit.


STEP 3 [REAR]



Clean the vehicle around the mud guard mounting location using exterior detailer and a microfiber cloth.

Locate the (5) screw bosses in the vehicle bed/wheel well liner. These bosses will be used for securing the mud guard using the provided hardware.


STEP 4

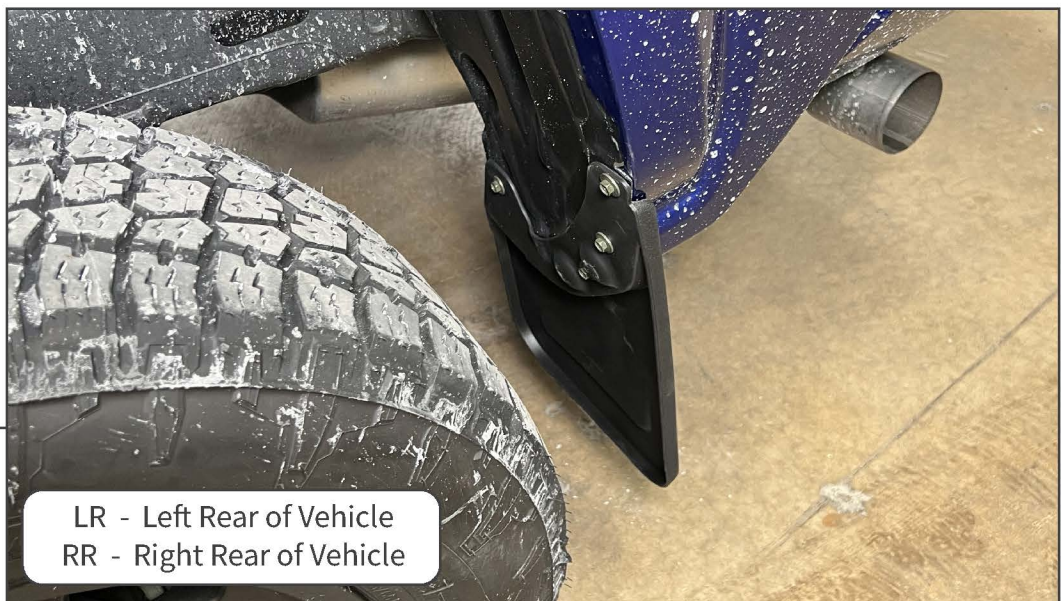

Inspect the mud guards for the embossed label, see above for label definition.

Align the mud guard to the vehicle, and secure to the vehicle using (5) Phillips screws. Tighten evenly until the mud guard is secure.

STEP 5

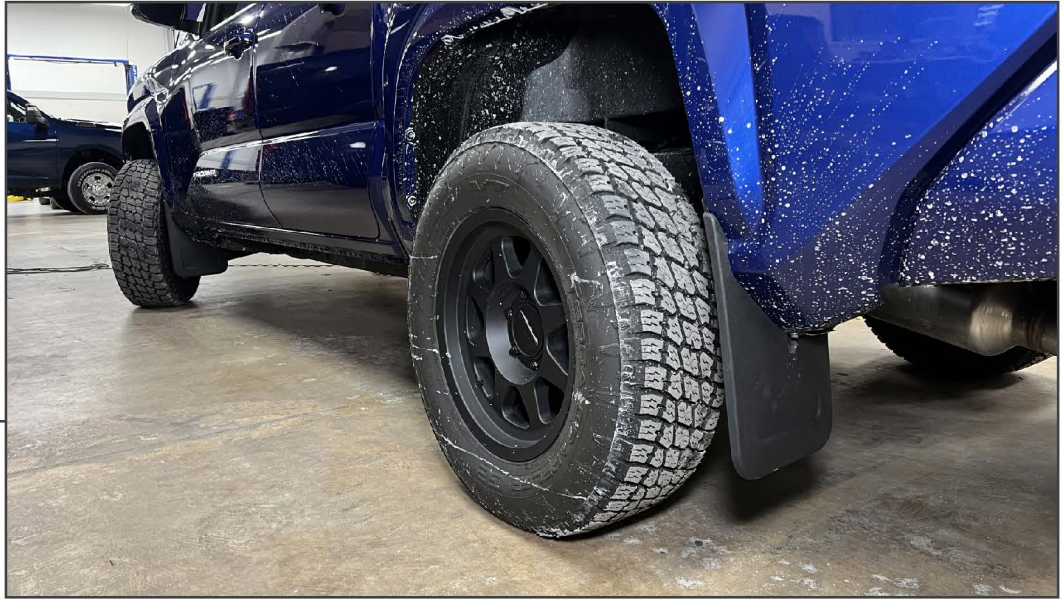

Repeat steps 1-4 for the opposite side of the vehicle.

Installation is now complete.