



# CUSTOM FIT FLOOR LINERS

(2024-2025+ TACOMA - DOUBLE CAB)

---

## INSTALLATION INSTRUCTIONS

### CONTENTS

---

- (1) LH Front Floor Liner
- (1) RH Front Floor Liner
- (1) Rear Seat Floor Liner
- (4) Alcohol Prep Pads

### TOOLS REQUIRED


---

Vacuum Cleaner

SKU # TT65962  
Edited: 01/02/2025



## STEP 1 [FRONT]

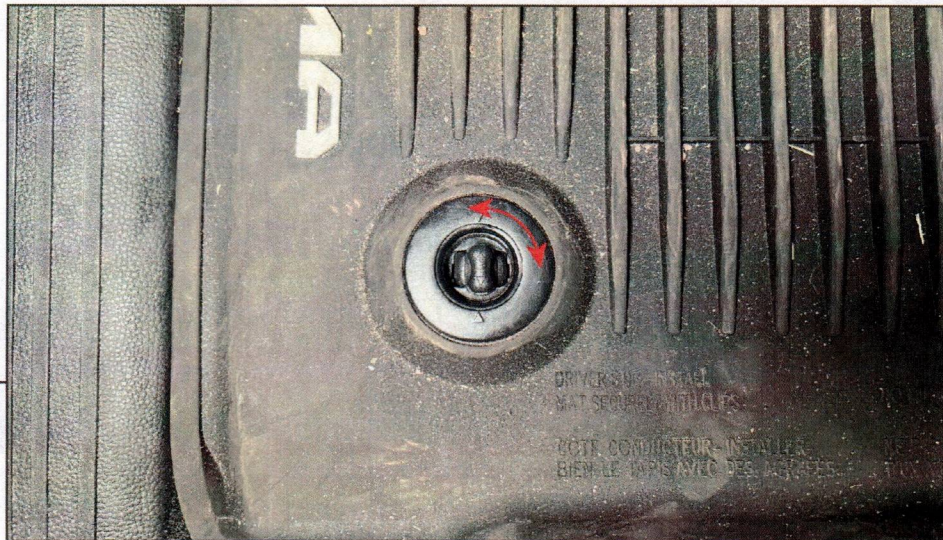

Clean the vehicle floor using a vacuum cleaner.

Locate the vehicle floor anchor points. Turn the anchor point lock 90 degrees to allow new liner installation.

## STEP 2 [FRONT]



Fit the new floor liner into the vehicle and onto the mounting anchors. Turn the mounting anchor 90 degrees to lock the liner into place.

Along the door sill panel, lift the floor liner to reveal the velcro tape. Clean the door sill panel below the tape using (1) alcohol prep pad, and allow to dry. Peel the tape backing, and firmly press the liner to the door sill panel to encourage velcro tape adhesion.

Repeat steps 1-2 for the remaining front floor liner.



**REDROCK**

---

**STEP 3**  
**[REAR]**



Clean the vehicle floor using a vacuum cleaner.

**STEP 4**  
**[REAR]**



Evenly fit the new floor liner onto the vehicle floor.

Along the door sill panel, lift the floor liner on each side to reveal the velcro tape. Clean the door sill panels below the tape using (2) alcohol prep pads, and allow to dry. Peel the tape backing, and firmly press the liner to the door sill panels to encourage velcro tape adhesion.

Installation is now complete.