



REDROCK



Tacoma Roof Rack

TT6617

(1) Contents:

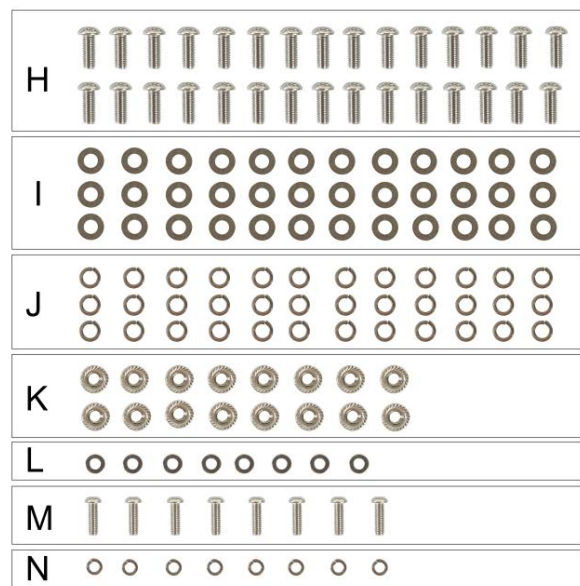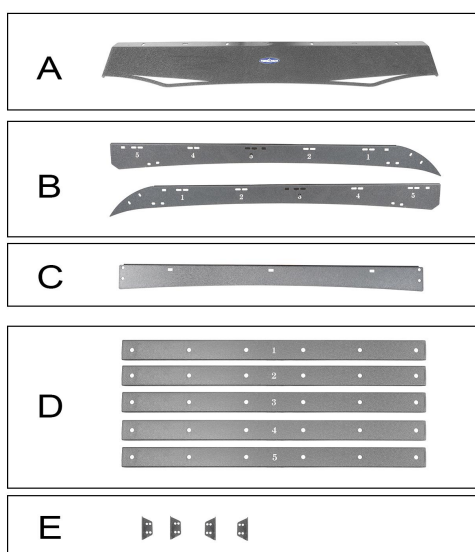

(2) Tools required:

a. 13mm wrench;

b. 12mm wrench;

c. 5mm socket wrench (5 mm Allen wrench);

d. 4mm socket wrench (4 mm Allen wrench) ;



(3) Installation time: About 2 hours. 2 persons needed.

(Installation time is different according to individual person.)

(4) Installation Instruction:

Step 1:



Begin by cleaning the Tacoma's roof and prepare all the roof rack components to start the installation.



Step 2:

Install the Part E into the Tacoma's roof.


Note: Don't tighten up the bolts this step.

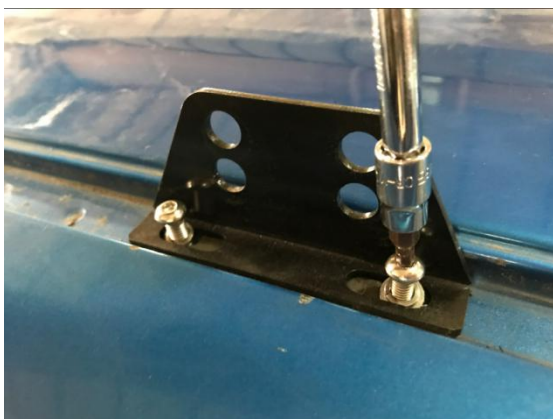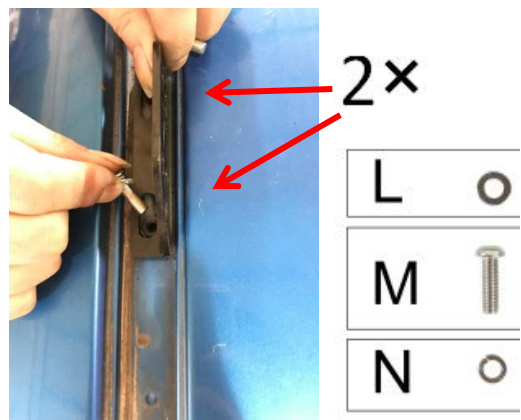



Step 3:

Install the corresponding Part B into the two mounting brackets as the following pictures shown.

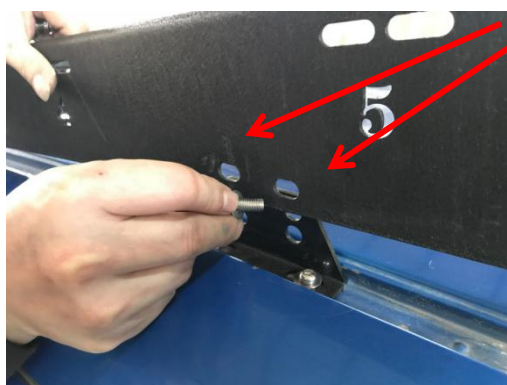

Step 4:

Install the front cross bar(Part A) to the steel structure.





Step 5:





Install another Part B into the two mounting brackets and connect with the front cross bar.



Step 6:


Install the cross bars(Part D) which are carved with number 1,2,3,4,5 in order.



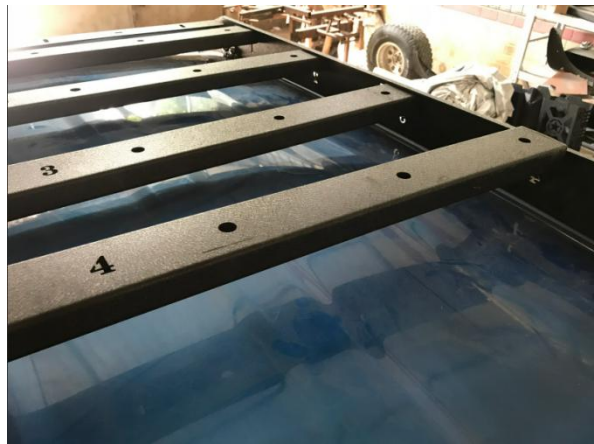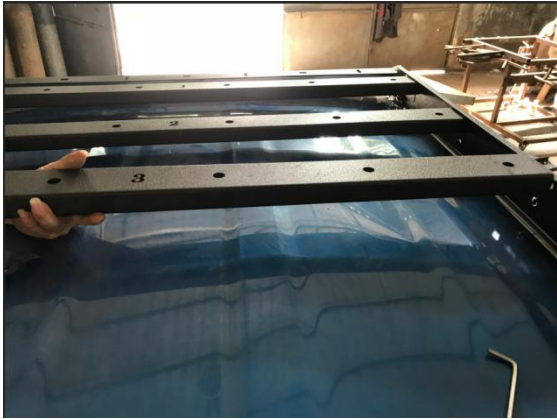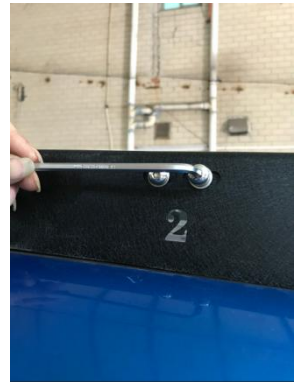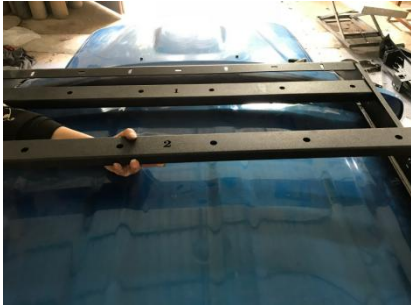


Step 7:

Install the rear cross bar(Part C) into the steel structure.

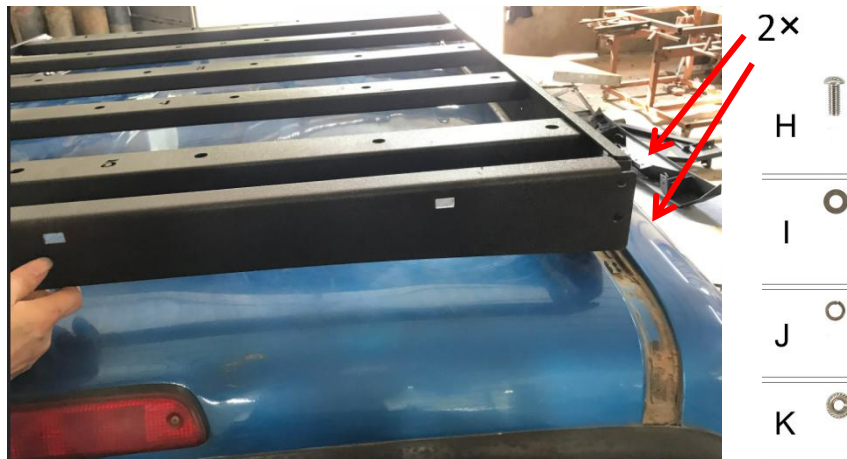



Step 8:

Check and tighten up all the bolts.

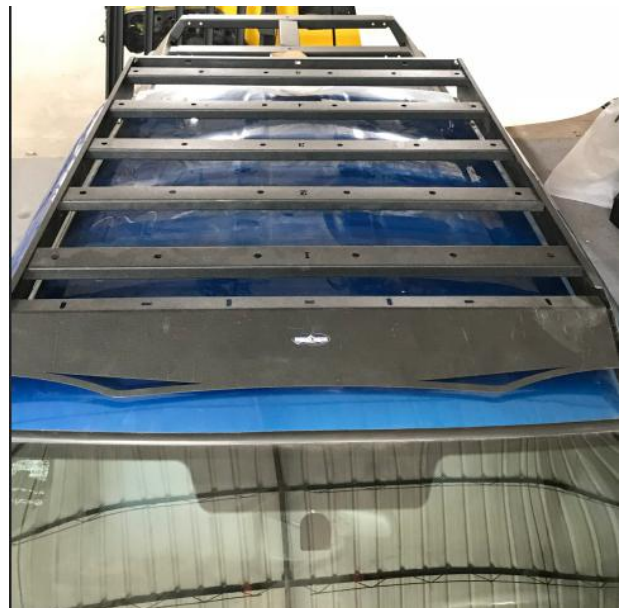

Step 9:

**Install the 4 LED spotlights
on the front cross bar.**

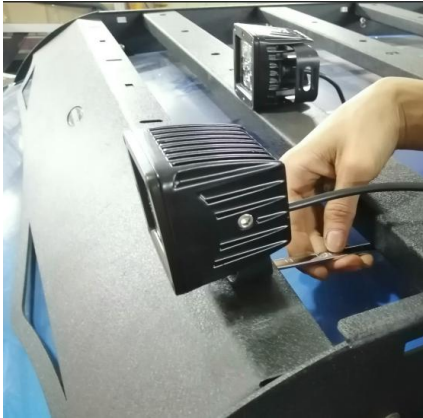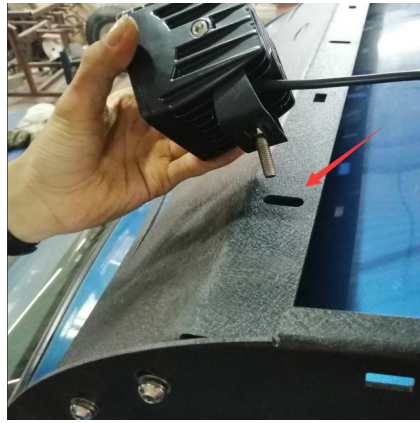

**Once you have everything in place you are finished with the
installation. Congratulations on the purchase and installation of a quality
Hooke Road product!**

